



C950I

Caple Multizone induction hob






Technical information



C950I


Caple Multizone induction hob

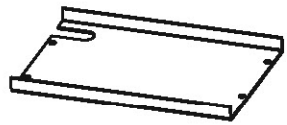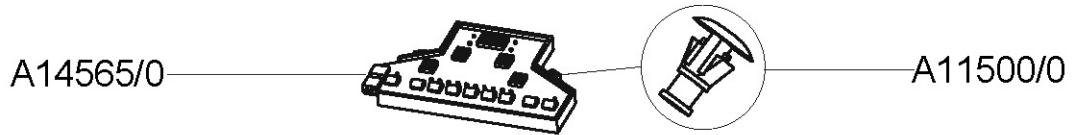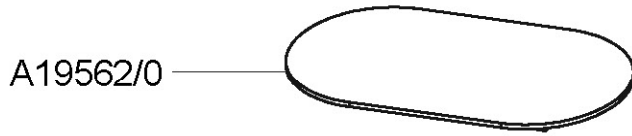




C950I


Caple Multizone induction hob

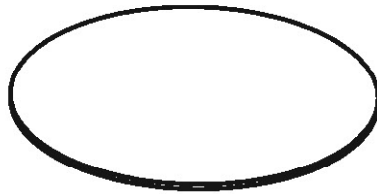



A10092/0

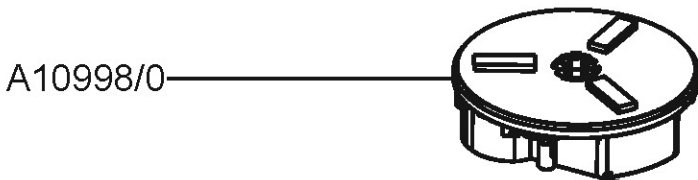

A10998/0

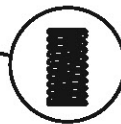

A11031/0

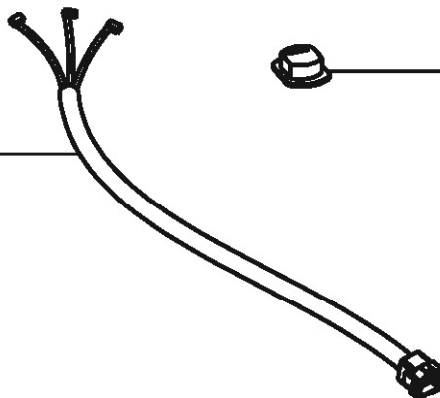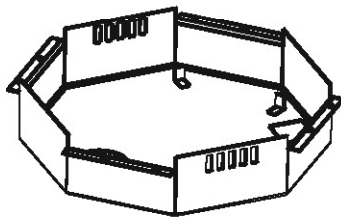

A11771/0







A12845/0



C950I


Caple Multizone induction hob

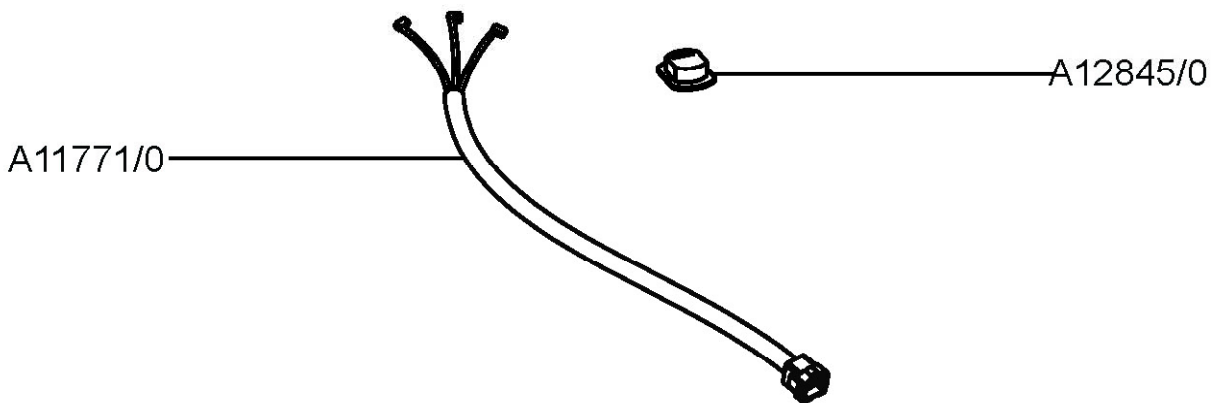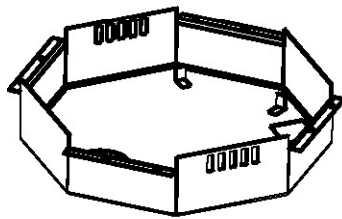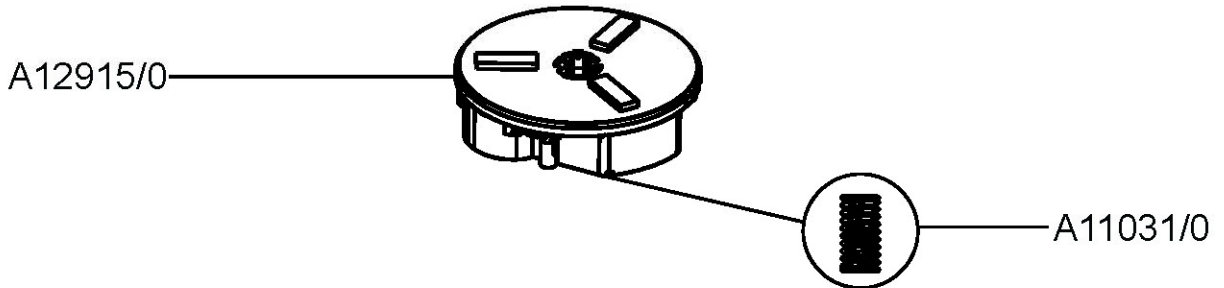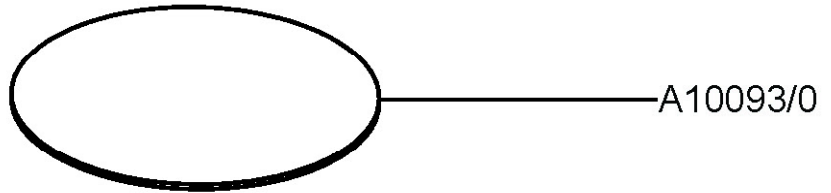




C950I



Cable Multizone induction hob

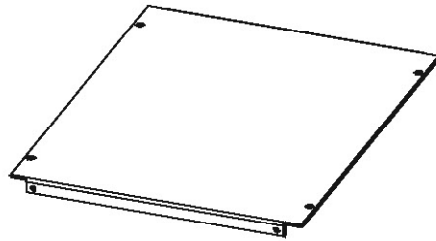

A12916/0

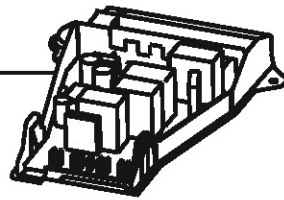

A11770/0

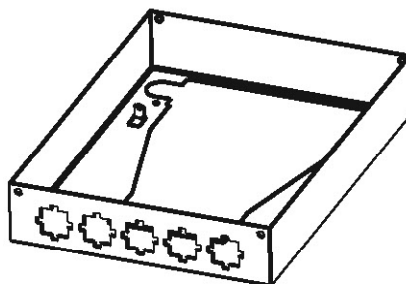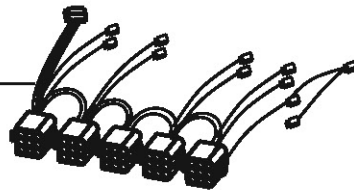



C950I - Caple Multizone induction hob

Item	Part Code	Description	Qty
	A10070/0	BOITIER CABLE CONNEXION	
	A10092/0	GLASS COVER 270MM	
	A10093/0	GLASS COVER 300MM	
	A10153/0	GASKET FOR WORKTOP	
	A10189/0	CONNECTION CABLE TC	
	A10506/0	EXTENSION CORD FINGERTOUC	
	A10712/0	CONNECTION BOX	
	A10998/0	INDUCTOR 1400W 160MM	
	A11031/0	SPRING FOR BASIC INDUCTOR	
	A11070/0	CABLE 4 WIRES FOR INDUCT.	
	A11500/0	HOLDING CLIP TC	
	A11537/0	COOLING FAN DOMINO	
	A11770/0	CONNECTION CABLE	
	A11771/0	CONNECTION CABLE	
	A12845/0	BOITIER CABLE CONNEXION	
	A12915/0	INDUCTOR	
	A12916/0	PCB FILTER + CONNECTION	
	A13437/0	MODULE 4Z G5 4x3.7kW	
	A13997/0	TOUCH CONTROL 4Z ECO	
	A14031/0	SUPPORT TOUCH CONTROL	
	A14034/0	PCB FILTER+CONNEXION	
	A14035/0	PCB POWER G5	
	A14130/0	HOLDING CLIP TC	
	A14565/0	TOUCH CONTROL	
	A14755/0	INDUCTOR 250P NIPS	
	A14761/0	SUPPORT TOUCH CONTROL	
	A14788/0	INDUCTOR G5 OCTA L=100	
	A14789/0	INDUCTOR G5 OCTA L=100	
	A14790/0	INDUCTOR G5 OCTA L=250	
	A14791/0	INDUCTOR G5 OCTA L=250	
	A15092/0	HOLDING CLIP TC	
	A15104/0	PACKAGING	
	A15327/0	CASING	
	A15386/0	POWER CORD	
	A15641/0	INDUCTOR 200P/160 IPS	
	A15891/0	TOUCH CONTROL G5	
	A15892/0	TOUCH CONTROL G5	
	A16960/0	CASING	
	A17057/0	CASING	
	A17060/0	TOUCH CONTROL	
	A17839/0	GLASS COVER	
	A17842/0	INSTRUCTION MANUAL	
	A18340/0	GLASS COVER	




C950I - Caple Multizone induction hob


Item	Part Code	Description	Qty
	A18343/0	INSTRUCTION MANUAL	
	A18479/0	GLASS COVER	
	A18482/0	INSTRUCTION MANUAL	
	A19562/0	GLASS COVER	
	AECO1000	INDUCTOR 160P/160 IPS	
	AECO1001	INDUCTOR 200P/160 NIPS	
	AECO1006	INDUCTOR 160P/160 IPS NV	
	AEMB1051	PACKAGING	
	AEMB1066	PACKAGING	



C950I

Caple Multizone induction hob

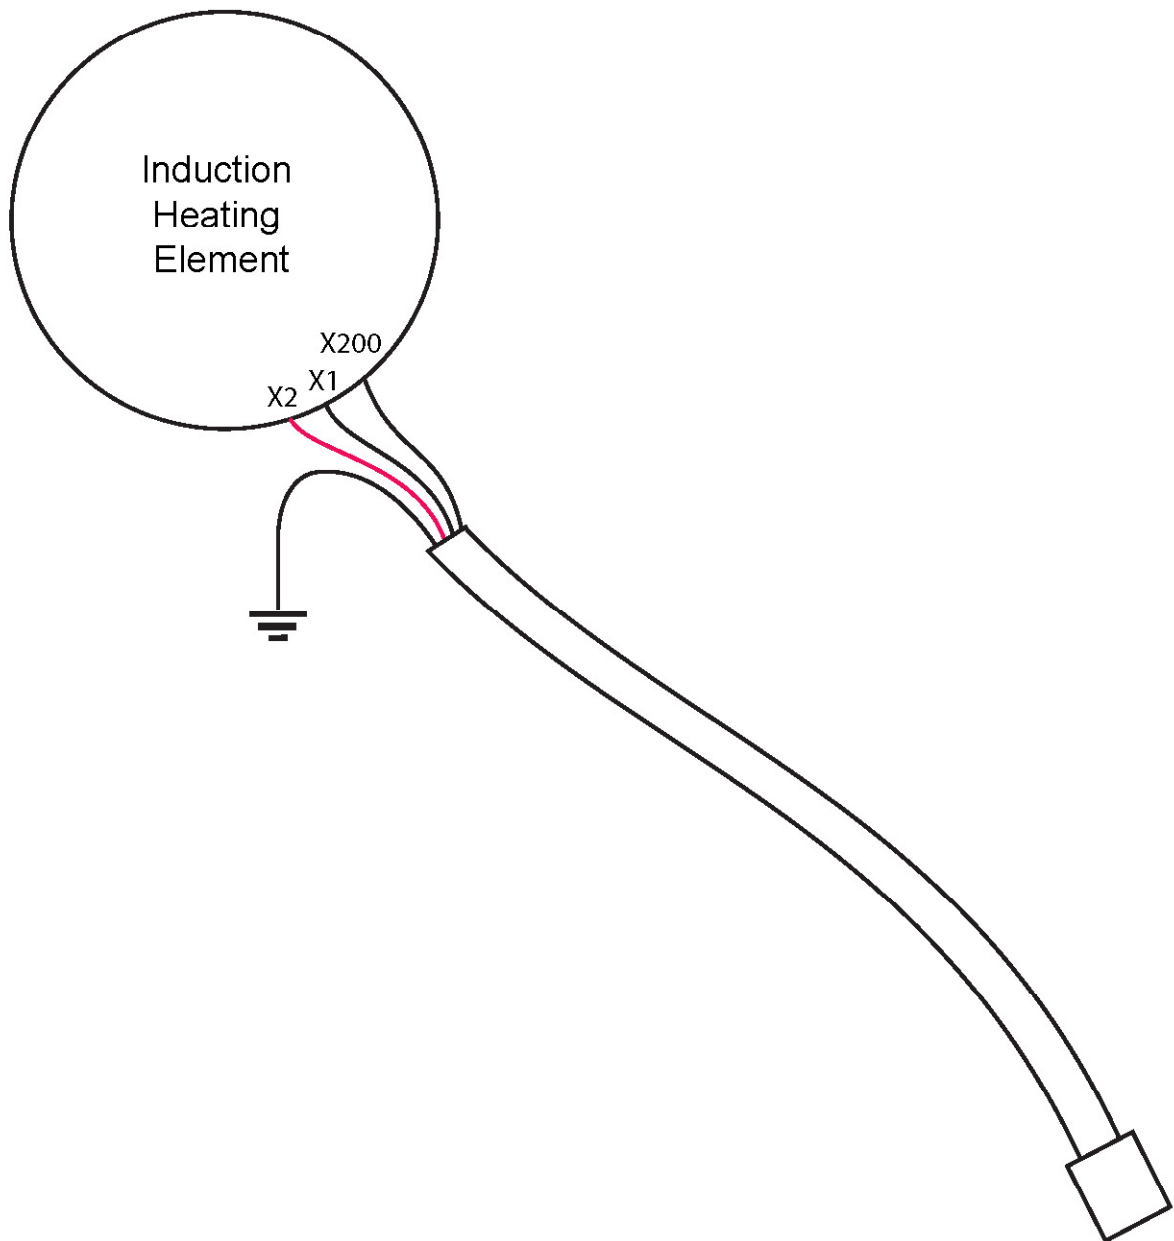

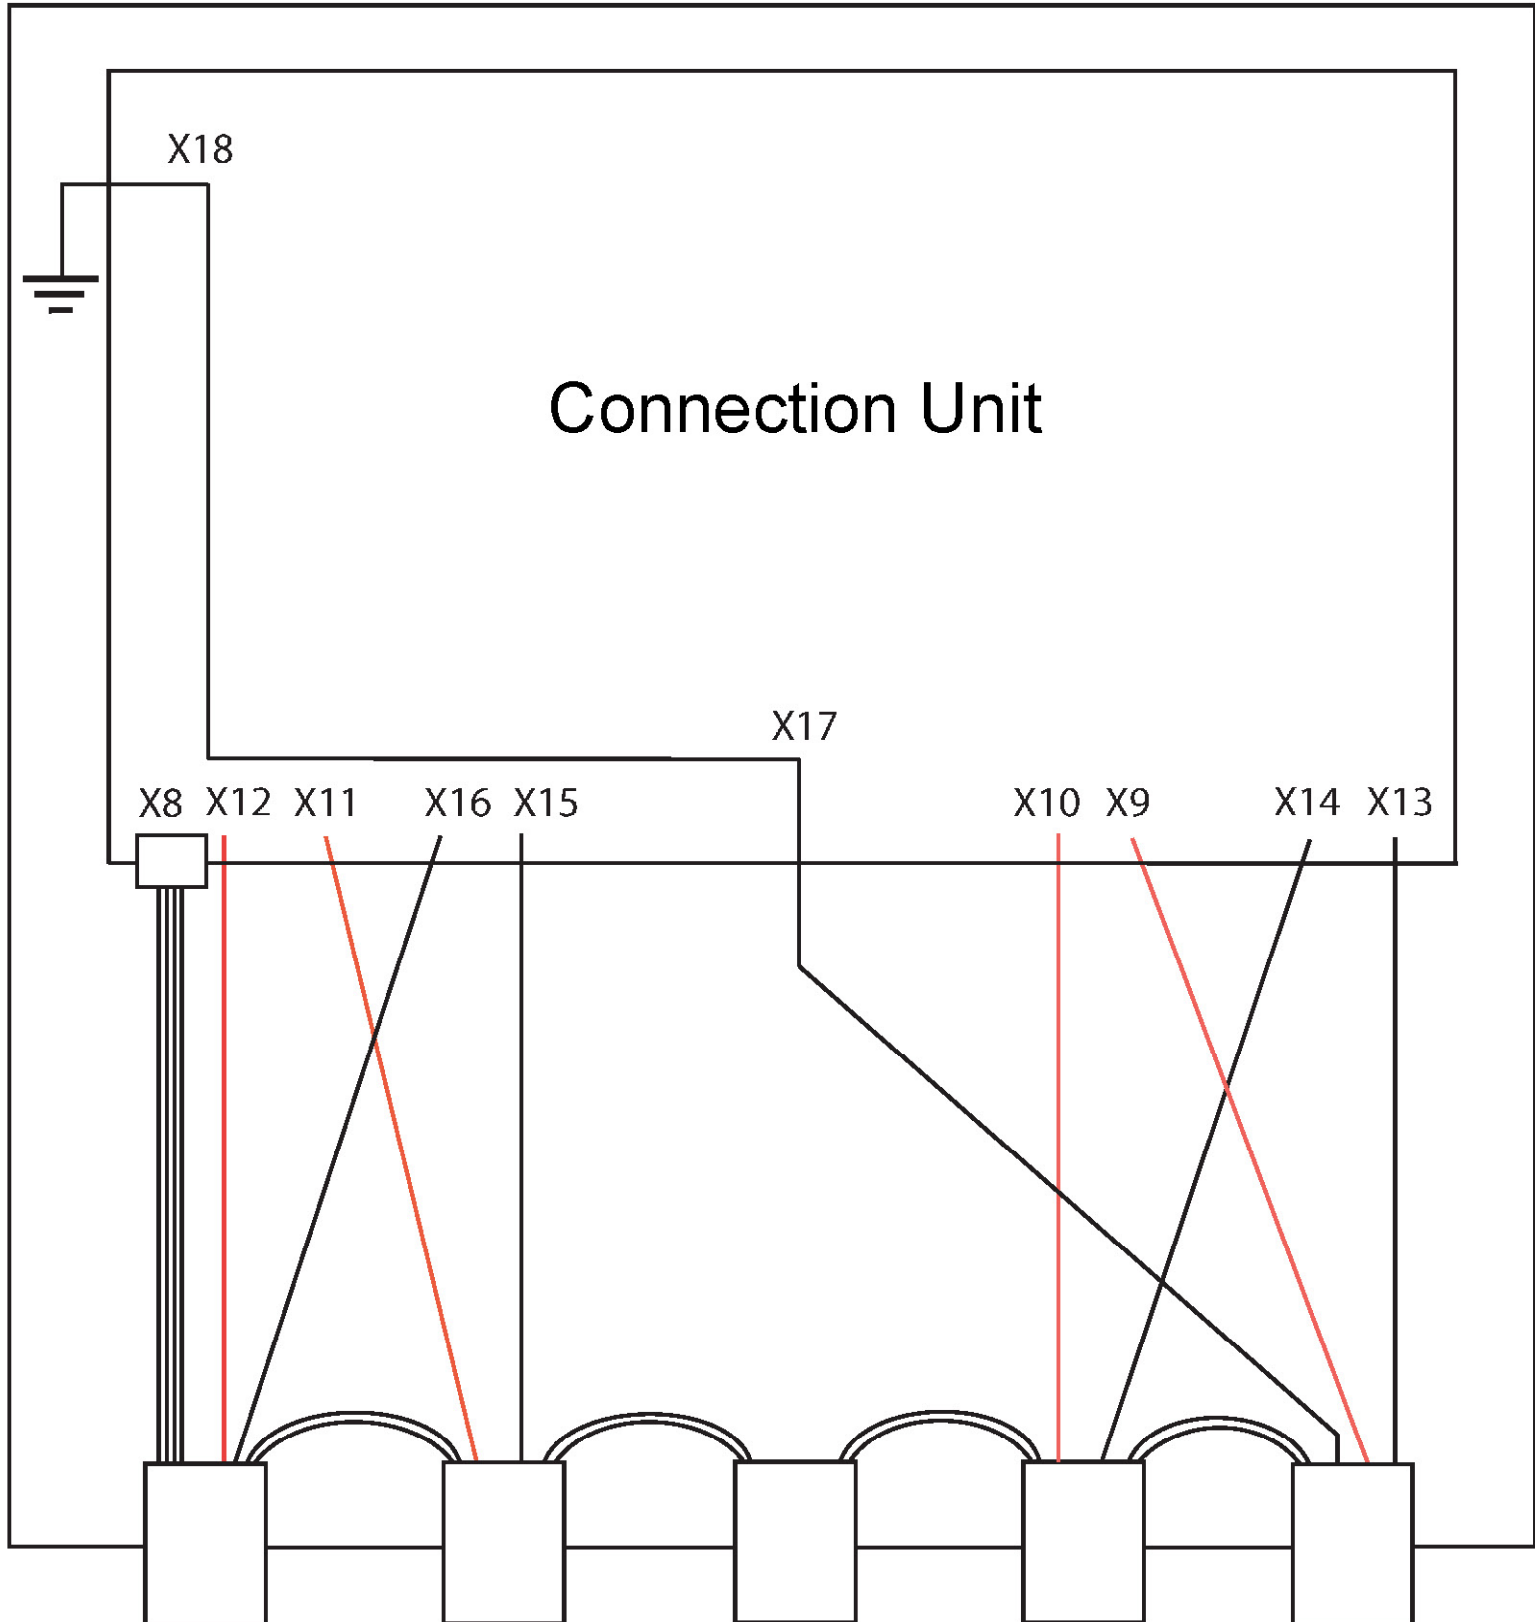



What to do when the symbol [E 4] appears :

I) The hob must be reconfigured according to the following procedure :

Before you start the procedure :

Make sure that there is no more pot on the hob.

Use a pan adapted to induction.

Disconnect the appliance from the electrical network by removing the fuse or turning the circuit breaker off

Reconnect the table to the electrical network.

It is necessary to start the procedure within 2 minutes after the connection of the hob to the electrical network.

Do not press the [O/I] key.

II) Cancellation of the existing configuration :

1) Press the **key n°2** and hold down.

2) The symbol [-] will appear on each display

3) With your other hand, press successively and quickly (less than 2s) on each [-] display. Begin from the front right side and turn contrary clockwise, as described on the picture (a -> b -> c -> d)).

A double "beep" means an error occurred. If so, start again from item 1).


4) Remove your fingers from the touch control, then **push again on touch 1** during few seconds, until blinking [E] symbols appear.

5) Wait until [E] symbols stop blinking.

6) After few seconds, [E] are automatically transformed in [C]. The existing setup has been cancelled.

Note: For induction hobs with 3 cooking zones, as the right front zone doesn't exist in this case, begin the procedure with the right rear zone (b).

For induction hobs with 2 cooking zones, as the rear zones don't exist in this case, begin the procedure with the front right zone (a) then with the front left zone (d).

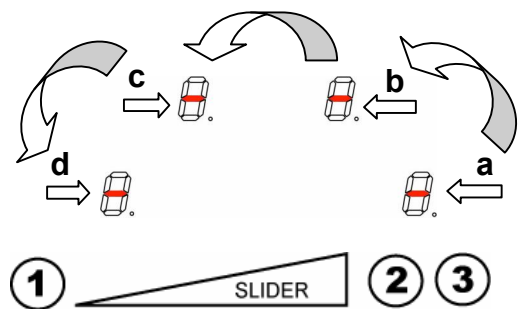

III) How to reconfigure the hob ?

1) Take a ferromagnetic pot with a minimum diameter of 16 cm

2) Select a cooking zone by pushing on the corresponding [C] display

3) Place the pot on the area to be set

4) Wait until the [C] display becomes a [-]. The selected cooking zone is now configured.

5) Follow the same procedure for each cooking zone with a [C] display.

6) All the cooking zones are configured once all the displays are turned off.

Please use the same pot for the whole procedure.

Never put several pots together on the zones during the setup-process.

- If [E 4] displaying remains, please call the customer care