



C221F/B




Caple Single Fan Oven Brown

TECHNICAL INFORMATION











C 221F/B

FF70CP053N


tav. 1
cat. 18.P1966

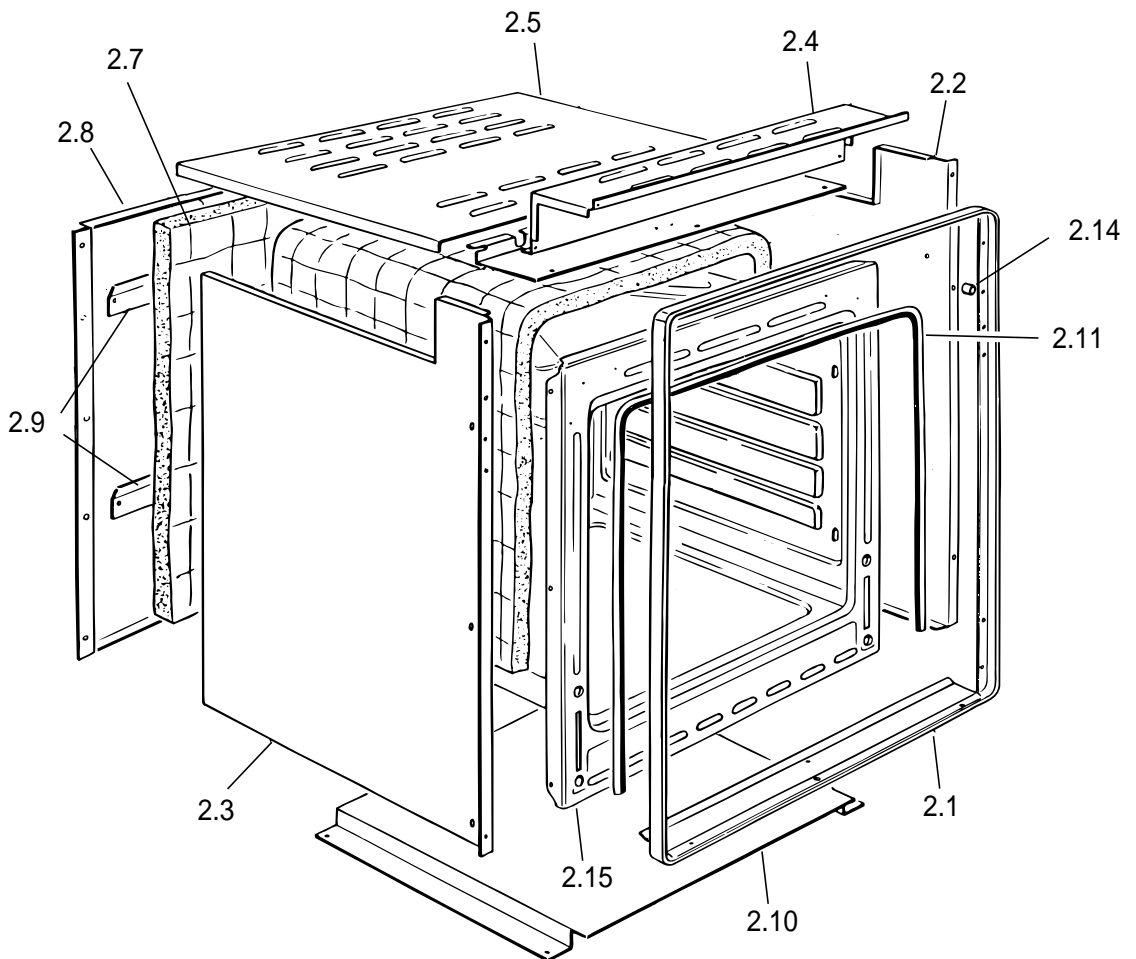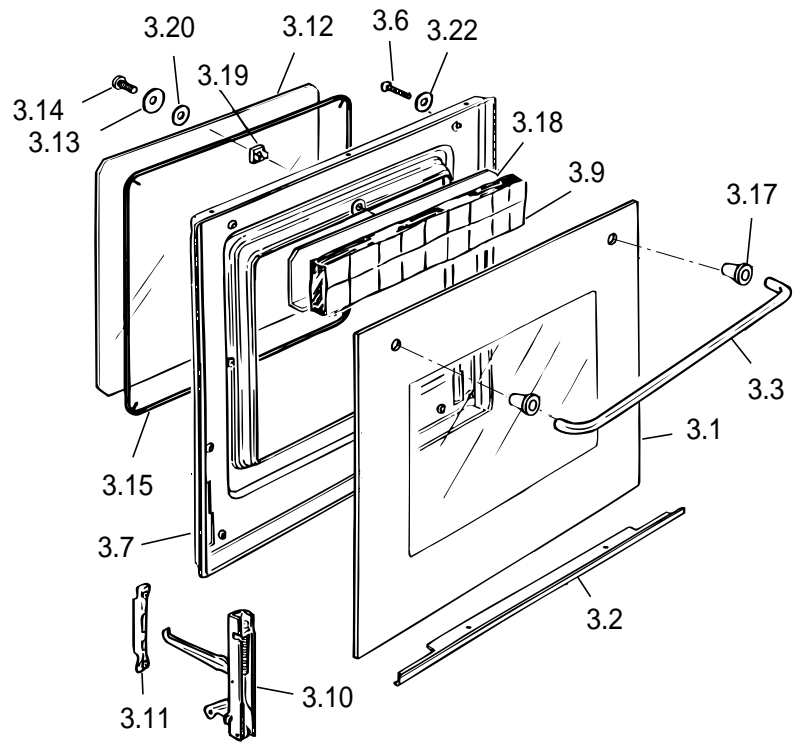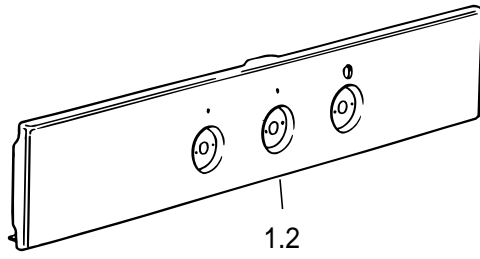


| REF. | CODE | DESCRIPTION |
|------|------------|------------------------|
| 1.2 | 35F7A40BCP | Control panel |
| 2.1 | 08318400M | Trim surround |
| 2.2 | 411F719 | Right side panel |
| 2.3 | 411F721 | Left side panel |
| 2.4 | 411F711 | Control panel shelter |
| 2.5 | 411F723 | Upper shelter |
| 2.6 | 030092.1 | Oven insulation |
| 2.7 | 030028 | Rear insulation |
| 2.8 | 411F718 | Rear panel |
| 2.9 | 4216003Z | Insulation cross-piece |
| 2.10 | 411F706 | Bottom panel |
| 2.11 | 053039 | Seal |
| 2.13 | 4216002Z | Lower switch shelter |
| 2.14 | 085019 | Spacer |
| 2.15 | 450F71EM14 | Oven cube |
| 3.1 | 0311453 | Outer glass |
| 3.2 | 08318600M | Lower retainer |
| 3.3 | 03719400M | Handle |
| 3.4 | 08506400M | Oven sleeve |
| 3.6 | 001184 | Screw |
| 3.7 | 373FF704K | Door skin |
| 3.9 | 030057 | Door insulation |
| 3.10 | 063103 | Hinge (male) |
| 3.12 | 0311000.1 | Inner glass |
| 3.13 | 103205 | Inner glass washer |
| 3.14 | 001214 | Screw |
| 3.15 | 053084 | Glass seal |
| 3.16 | 063025 | Right hinge (female) |
| 3.18 | 411F729 | Insulation support |
| 3.19 | 214021 | Nut |
| 3.20 | 003035 | Washer |
| 3.22 | 003041 | Washer |

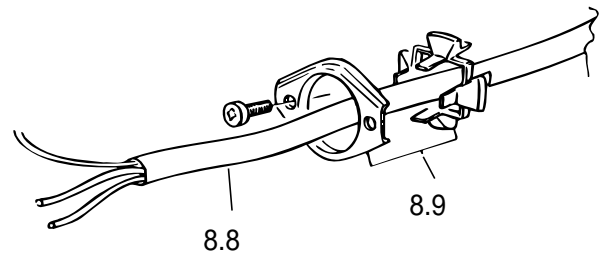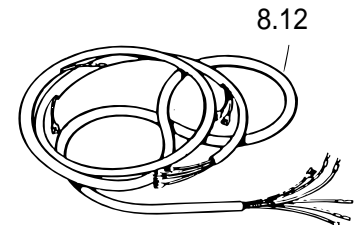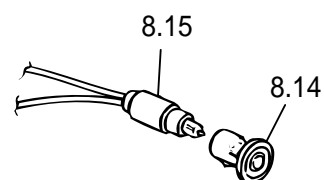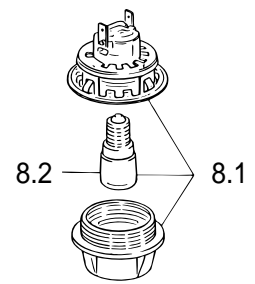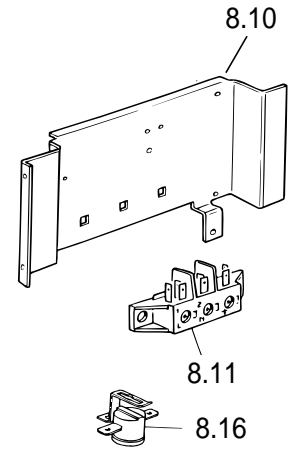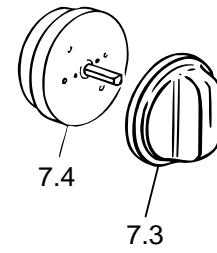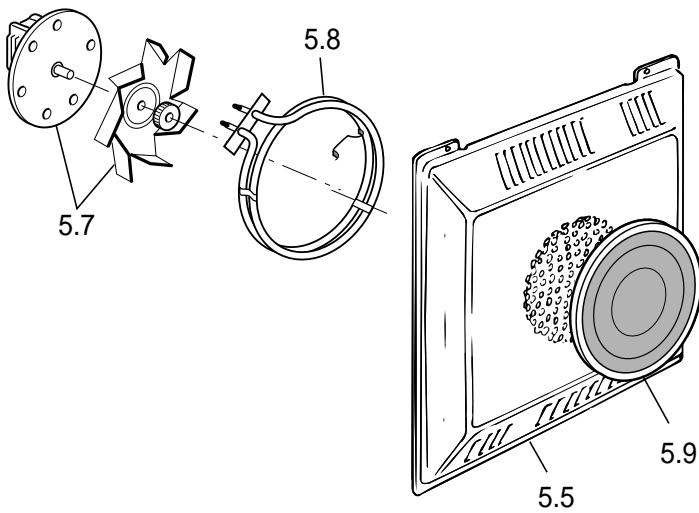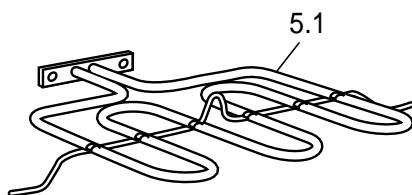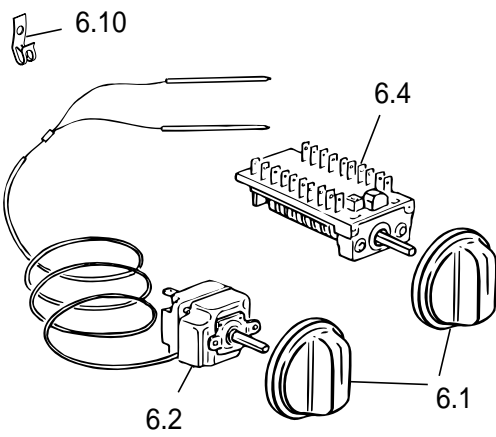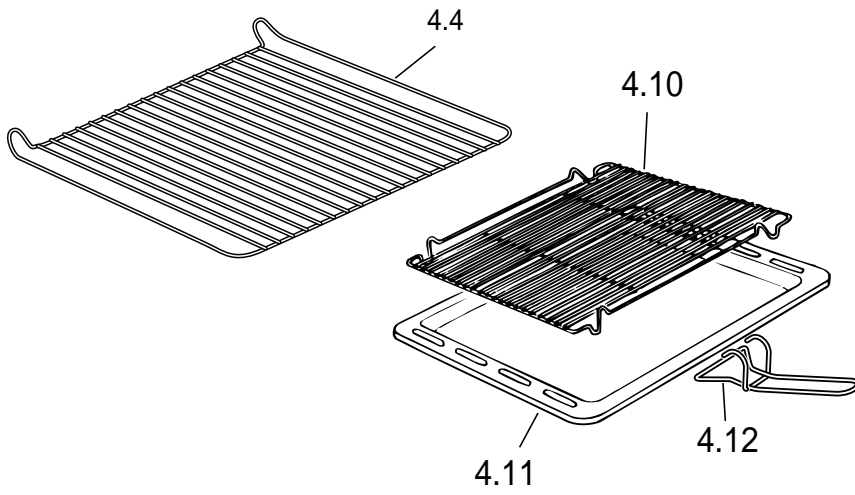

| REF. | CODE | DESCRIPTION |
|------|------------|--------------------------|
| 4.4 | 217429 | Wire shelf |
| 4.10 | 217385 | Grill-pan grid |
| 4.11 | 48B5102K | Grill-pan |
| 4.12 | 037144 | Grill-pan grid handle |
| 5.1 | 062053004 | Grill element - 230 V |
| 5.5 | 47AN601K | Fan diffuser |
| 5.7 | 079008001F | Fan motor - 230 V |
| 5.8 | 062057004 | Fan element - 230 V |
| 5.9 | 103085 | Filter |
| 6.1 | 218P004087 | Control knob (Brown) |
| 6.4 | 050032 | Switch |
| 6.2 | 066072 | Thermostat |
| 6.10 | 213025 | Clip |
| 7.3 | 218P004087 | Alarm 60' knob (Brown) |
| 7.4 | 074009 | Alarm 60' |
| 8.1 | 072003 | Lamp holder |
| 8.2 | 073013001 | Lamp |
| 8.8 | 054041 | Cord 3x1,5 |
| 8.9 | 052001 | Wire fastener |
| 8.10 | 094162 | Terminal bracket |
| 8.11 | 051038 | Terminal block |
| 8.12 | 1131278 | Wiring |
| 8.14 | 073035 | Control lamp cover (Red) |
| 8.15 | 073038.2 | Control lamp L=200 |
| 8.16 | 066073 | Cut-off thermostat 130° |
| - | 1101785 | Instruction booklet |

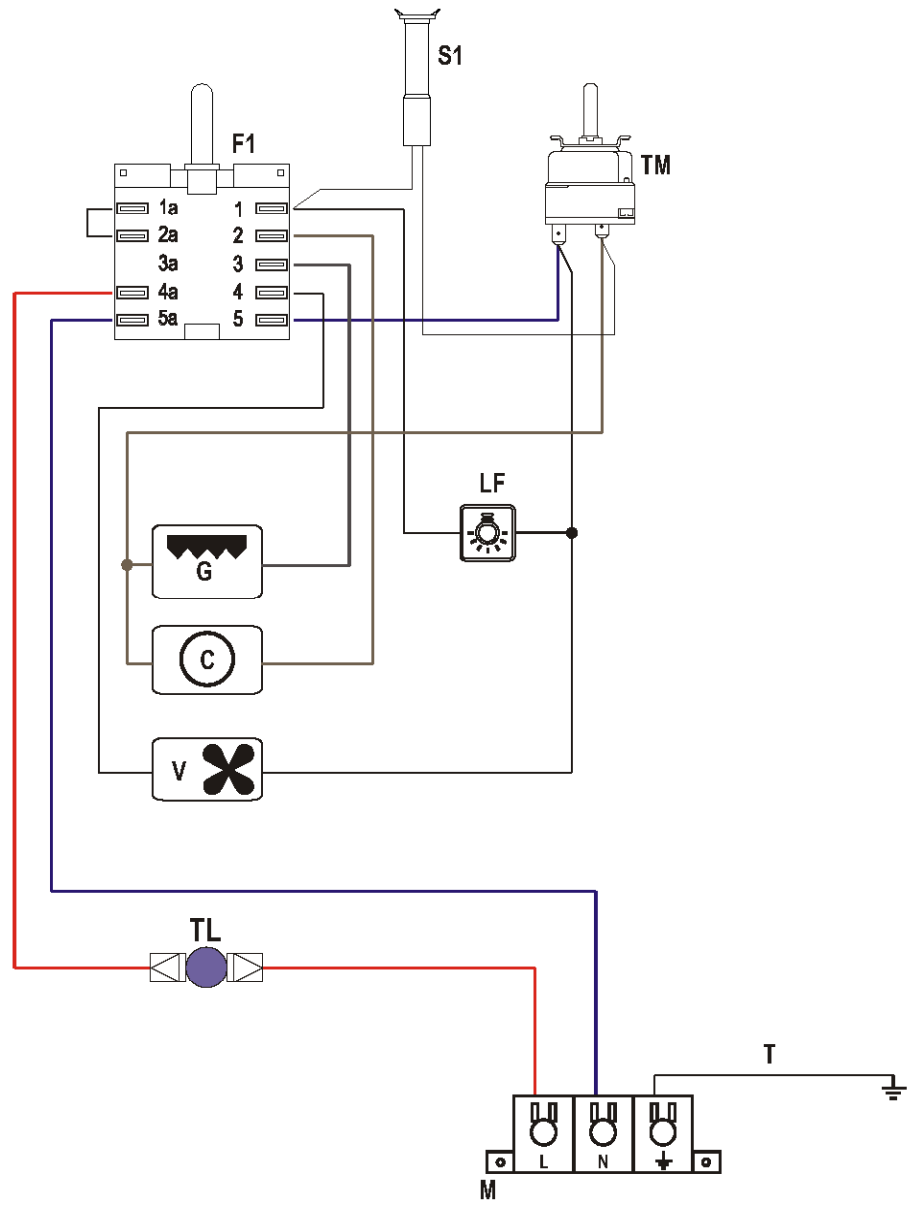

Oven switch diagram

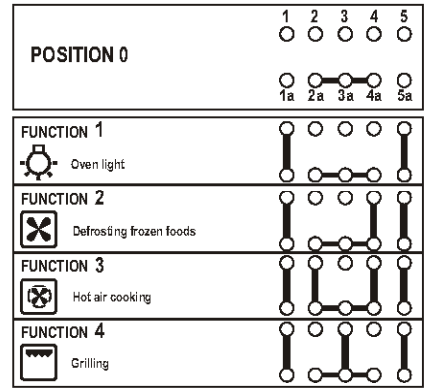

- ELECTRIC DIAGRAM KEY**
- F1 Oven switch
 - TM Oven thermostat
 - LF Oven lamp
 - TL Thermal overload
 - S1 Thermostat pilot lamp
 - V Fan
 - G Grill element
 - C Circular element
 - M Terminal block
 - T Earth connection



C221F/B

Cable Single Fan Oven Brown