



C240SS

Caple Premium Pyro Oven Stainless Steel




TECHNICAL INFORMATION

C 240 SS

F6P0CP001X

tav. 1

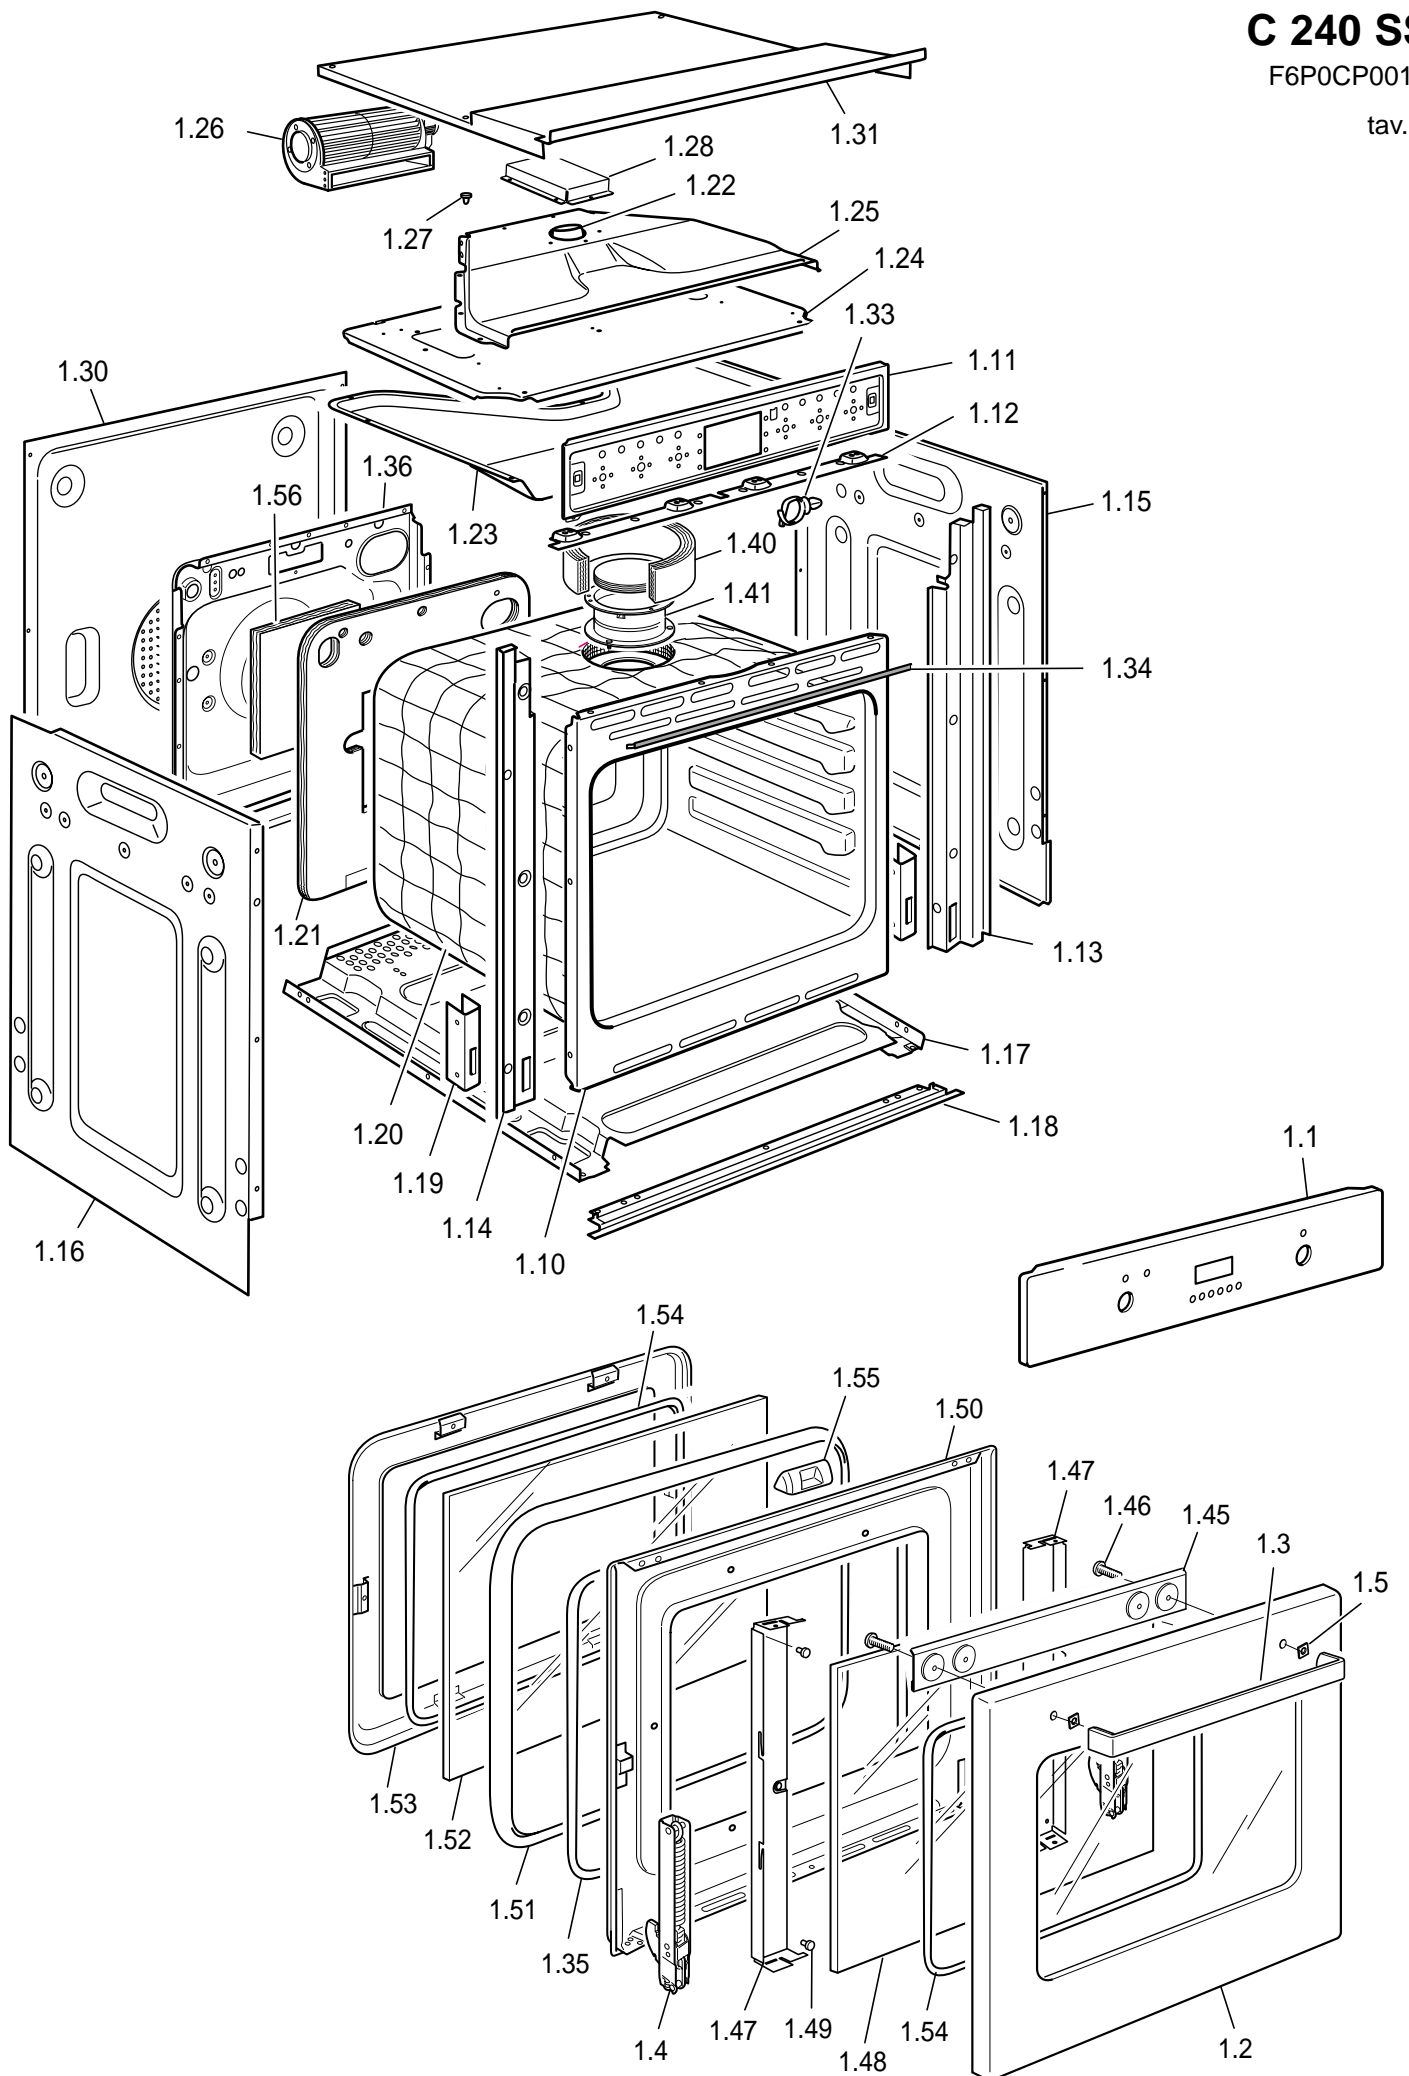


REF.	CODE	DESCRIPTION
1.1	032F2360C1	Glass facia panel
1.2	032P2359C1	Door glass
1.3	037227061	Door handle
1.4	063108	Hinge (male)
1.5	103734080	Plaque
1.10	450FP1EM32	Oven cube
1.11	35MF60002H	Interior control panel
1.12	51BF605S	Control panel deflector
1.13	51BF601DS	Right front trim
1.14	51BF601SS	Left front trim
1.15	411F6D1Z	Right side panel
1.16	411F6S1Z	Left side panel
1.17	411F602.1	Bottom panel
1.18	08328400H	Lower trim
1.19	094433	Door hinge (female)
1.20	030123	Oven insulation
1.21	030137	Rear insulation
1.22	103617	Fumes filter
1.23	411F607	Lower air conveyor
1.24	421F604Z	Air conveyor support
1.25	411F606	Upper air conveyor
1.26	079024	Tangential fan
1.27	040056	Rubber
1.28	094435	Fumes conveyor
1.30	411F603	Rear panel
1.31	411F604	Upper shelter
1.33	103672	Cable support
1.34	053074	Upper seal
1.35	053099	Seal
1.36	421F603Z	Rear panel
1.40	030132	Fumes catalyst insulation
1.41	103723	Fumes catalyst
1.45	51BF604	Handle bar
1.46	001071	Door handle screw
1.47	51BF606	Middle inner glass support
1.48	0312117	Middle inner glass
1.49	040056	Rubber
1.50	372FF602P	Door panel
1.51	053089	Door panel gasket
1.52	0312116	Inner glass
1.53	372FF603P	Door panel frame
1.54	053090	Inner glass gasket
1.55	103620	Door lock block
1.56	030138	Rear central insulation


C 240 SS

F6P0CP001X

tav. 2

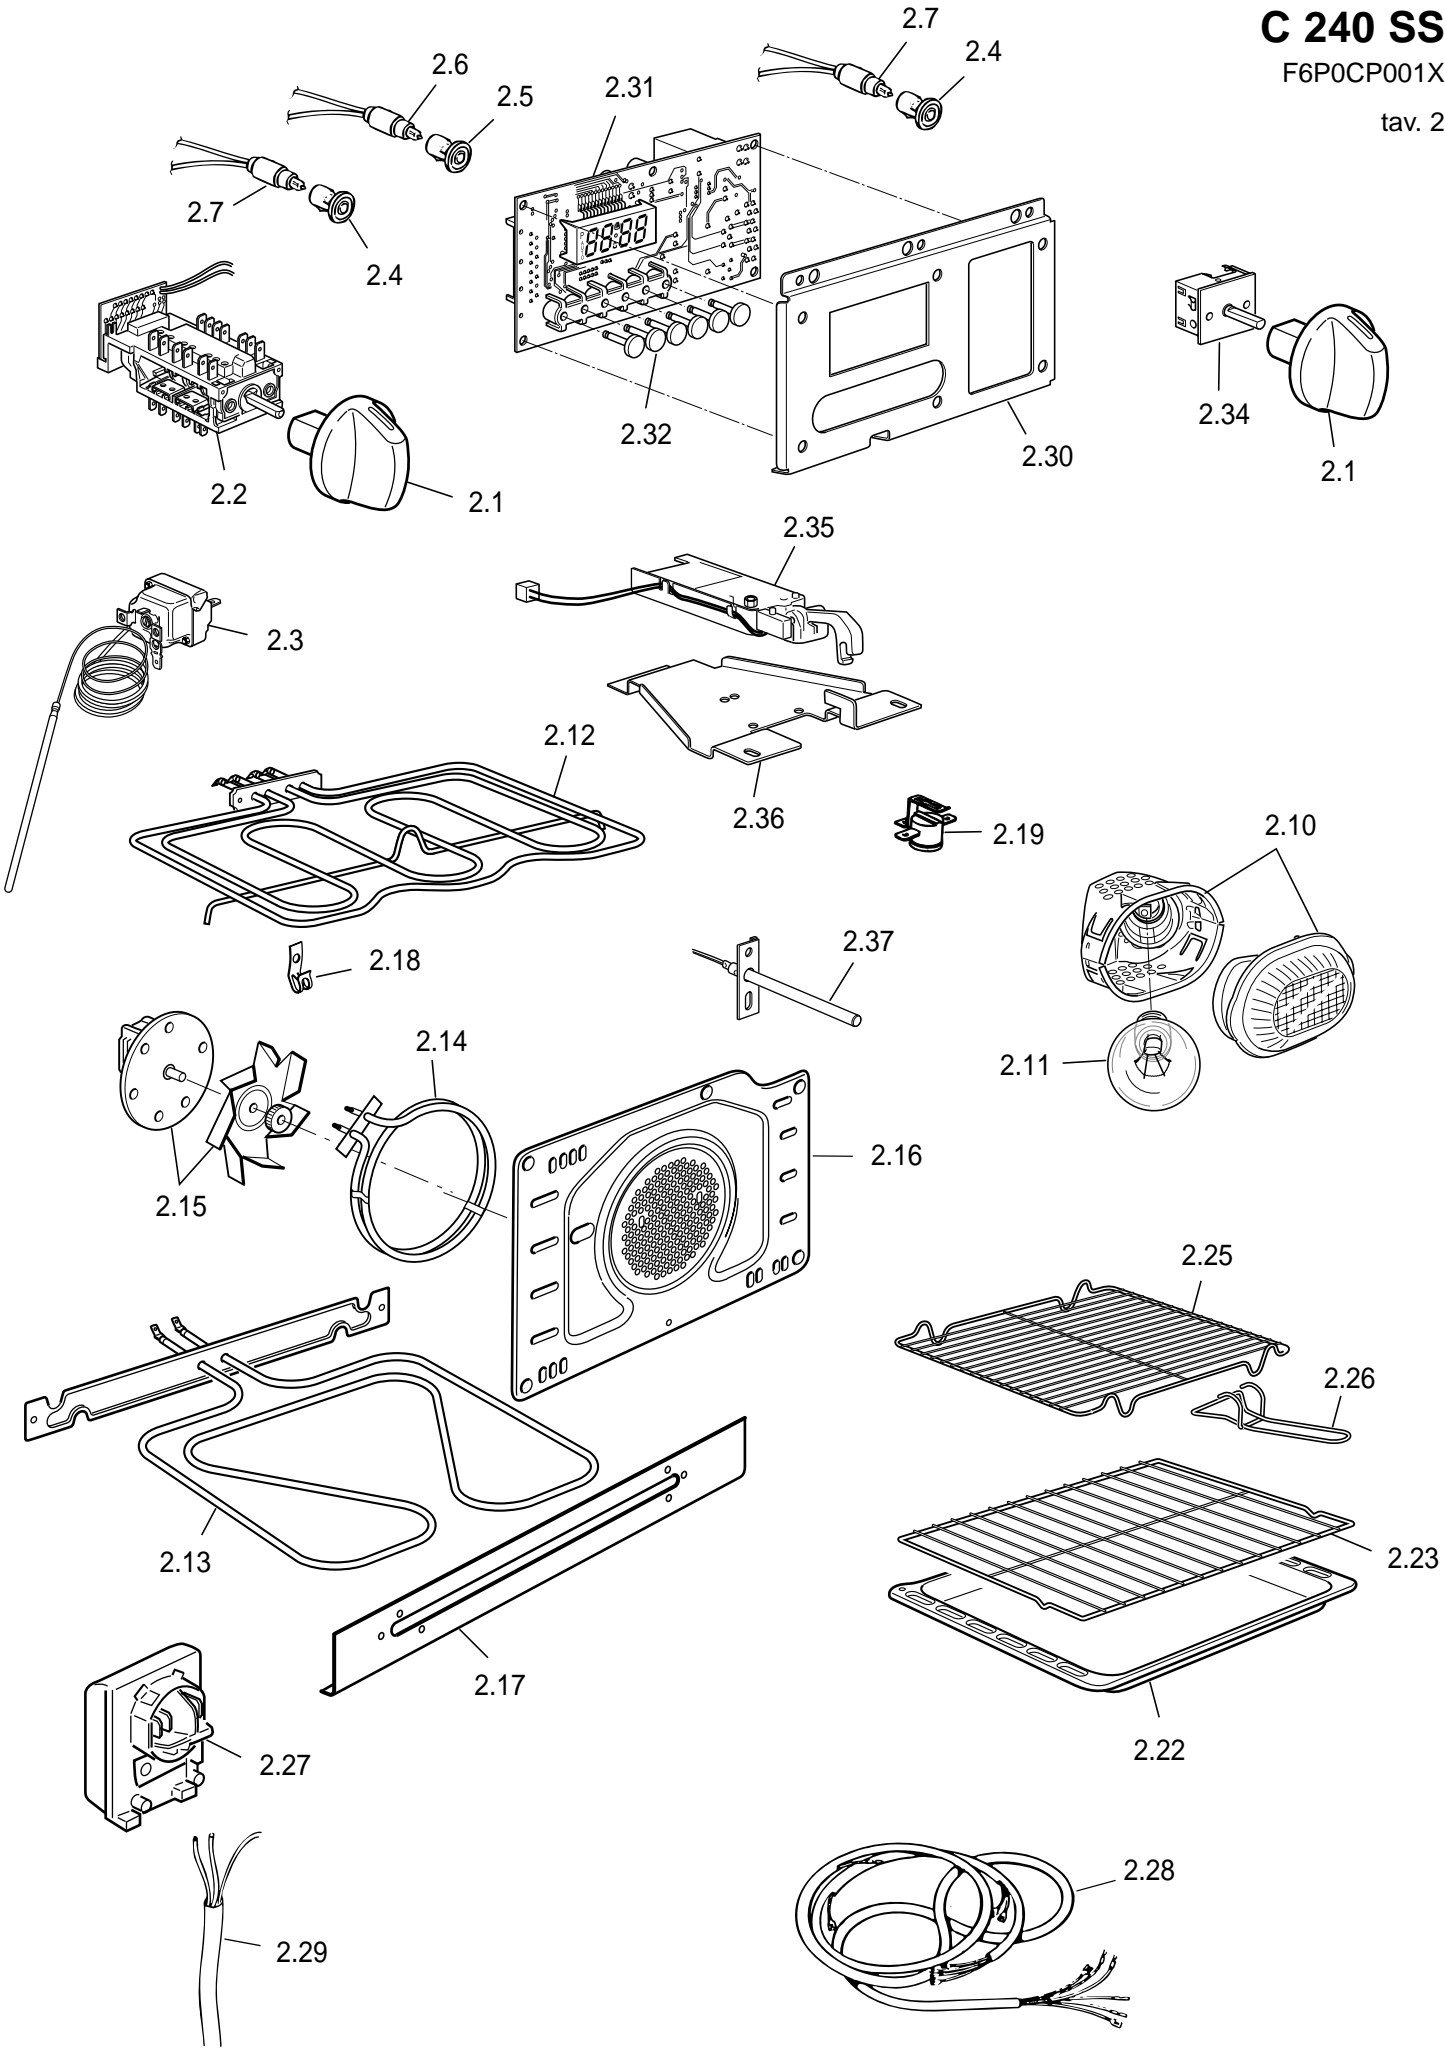

REF.	CODE	DESCRIPTION
2.1	218G00X332	Control knob
2.2	050061	Switch
2.3	066143	Thermostat
2.4	07306202.2	Control lamp cover (Red)
2.5	07306201.2	Control lamp cover (Orange)
2.6	073044.2	Control lamp L 600
2.7	073039.2	Control lamp - 230/240 V~
2.10	072007	Lamp holder
2.11	073013001	Lamp
2.12	062092004	Top + grill element - 230 V~
2.13	062093004	Bottom element - 230 V~
2.14	062097004	Fan element - 230 V~
2.15	079023	Fan motor - 220/240 V~
2.16	47AF601P	Fan diffuser
2.17	51BF603	Bottom element support
2.18	213031	Clip
2.19	066068	Cut-off thermostat 130°
2.22	48BF601P	Oven tray
2.23	217526	Wire shelf
2.25	217546	Grill-pan grid
2.26	037144	Grill-pan grid handle
2.27	051046	Terminal block
2.28	1131443	Wiring
2.29	054041	Cord 3x1,5
2.30	094399	Programmer electronic card support
2.31	074058SG	Programmer electronic card
2.32	10327100X	Button
2.34	050063	Potentiometer
2.35	103619	Door lock
2.36	094398	Door lock support
2.37	107054	Probe
-	1102091	Instruction booklet

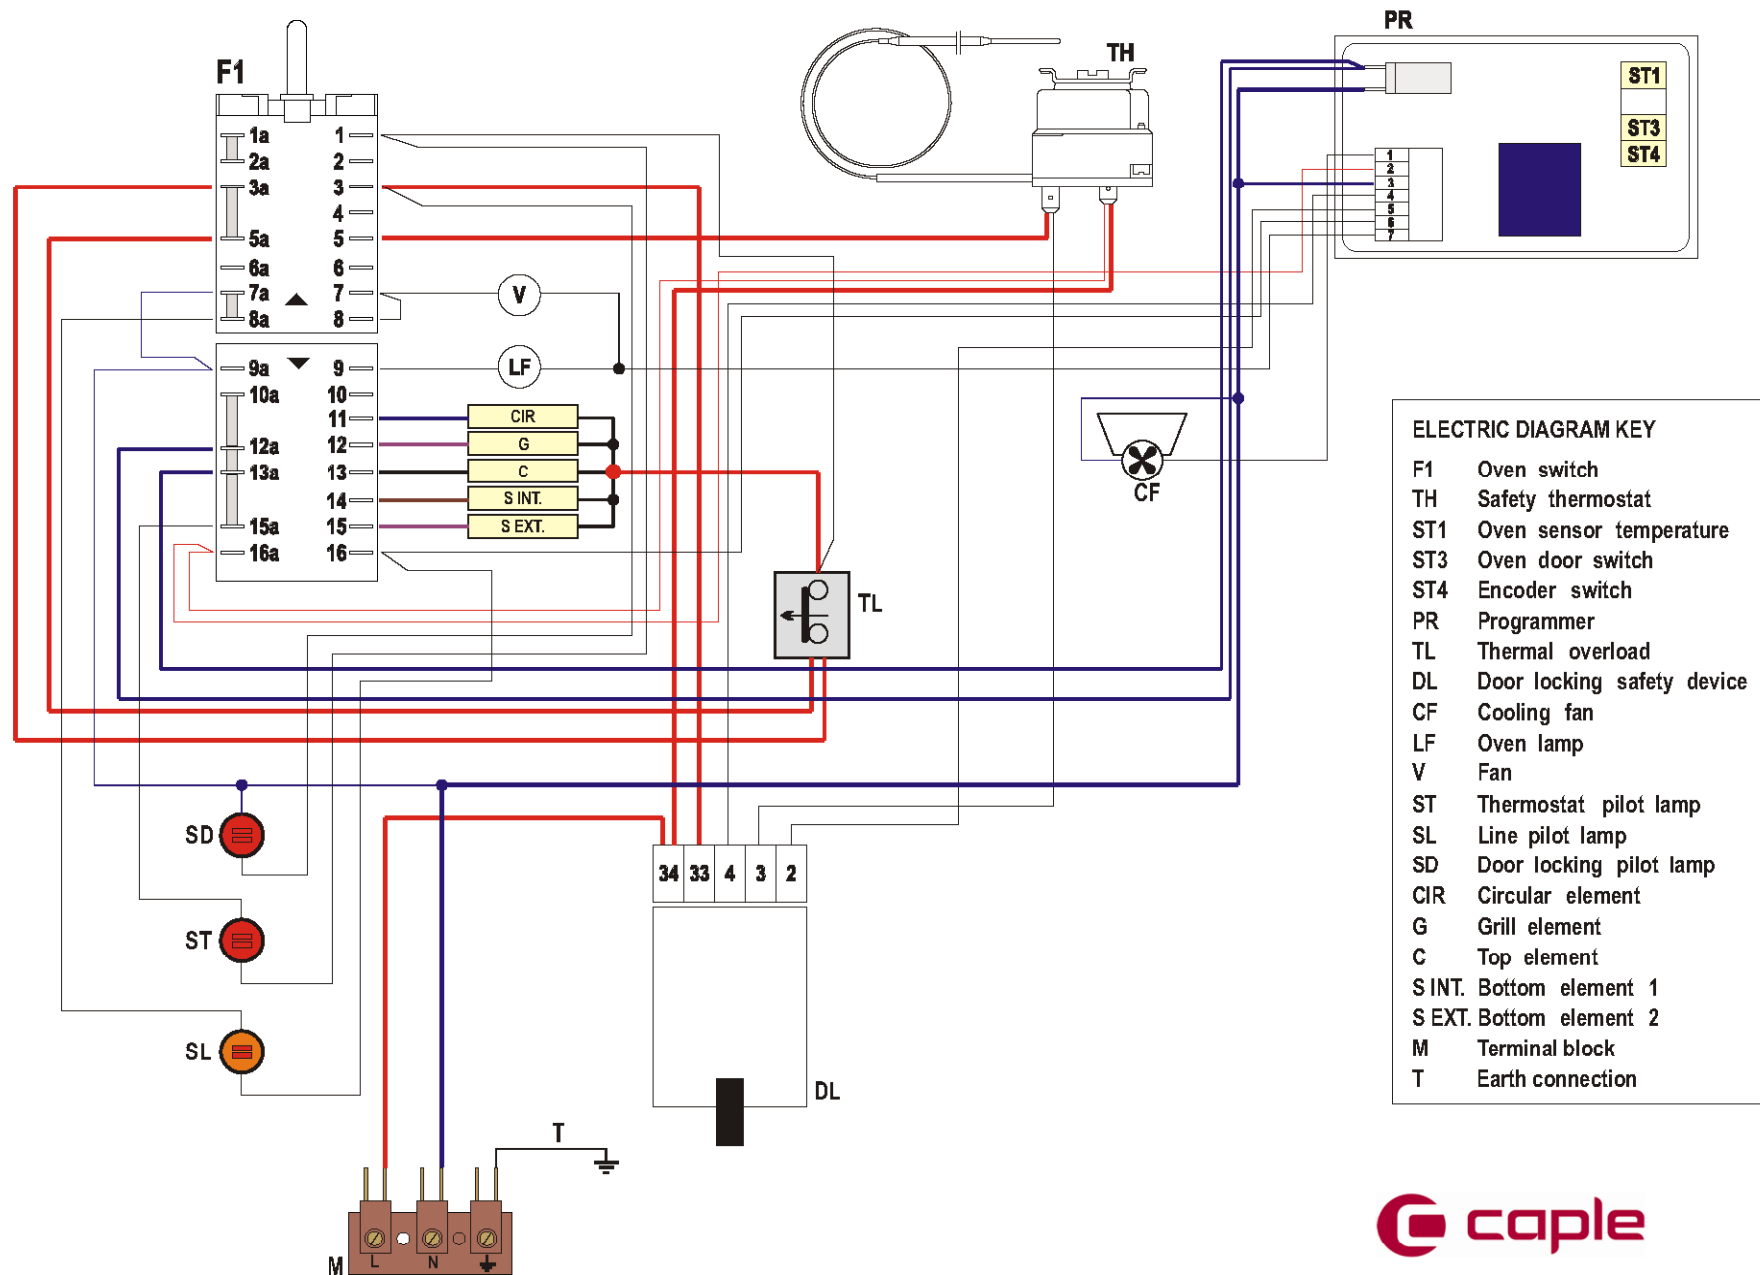

ELECTRIC DIAGRAM KEY

F1	Oven switch
TH	Safety thermostat
ST1	Oven sensor temperature
ST3	Oven door switch
ST4	Encoder switch
PR	Programmer
TL	Thermal overload
DL	Door locking safety device
CF	Cooling fan
LF	Oven lamp
V	Fan
ST	Thermostat pilot lamp
SL	Line pilot lamp
SD	Door locking pilot lamp
CIR	Circular element
G	Grill element
C	Top element
S INT.	Bottom element 1
S EXT.	Bottom element 2
M	Terminal block
T	Earth connection



C240SS

Caple Premium Pyro Oven Stainless Steel