




C291 M/SS

Caple 900mm M.Func Oven Stainless


INSTRUCTION MANUAL

D In Übereinstimmung mit den Anforderungen der Europäischen Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte (WEEE) ist vorliegendes Gerät mit einer Markierung versehen. Sie leisten einen positiven Beitrag für den Schutz der Umwelt und die Gesundheit des Menschen, wenn Sie dieses Gerät einer gesonderten Abfallsammlung zuführen. Im unsortierten Siedlungsmüll könnte ein solches Gerät durch unsachgemäße Entsorgung negative Konsequenzen nach sich ziehen. Auf dem Produkt oder der beiliegenden Produktdokumentation ist

folgendes Symbol  einer durchgestrichenen Abfalltonne abgebildet. Es weist darauf hin, dass eine Entsorgung im normalen Haushaltsabfall nicht zulässig ist. Entsorgen Sie dieses Produkt im Recyclinghof mit einer getrennten Sammlung für Elektro- und Elektronikgeräte. Die Entsorgung muss gemäß den örtlichen Bestimmungen zur Abfallbeseitigung erfolgen.

Bitte wenden Sie sich an die zuständigen Behörden Ihrer Gemeindeverwaltung, an den lokalen Recyclinghof für Haushaltsmüll oder an den Händler, bei dem Sie dieses Gerät erworben haben, um weitere Informationen über Behandlung, Verwertung und Wiederverwendung dieses Produkts zu erhalten.


GB This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

F Cet appareil porte le symbole du recyclage conformément à la Directive Européenne 2002/96/CE concernant les Déchets d'Équipements Électriques et Electroniques (DEEE ou WEEE). En procédant correctement à la mise au rebut de cet appareil, vous contribuerez à empêcher toute conséquence nuisible pour l'environnement et la santé de l'homme.

Le symbole  présent sur l'appareil ou sur la documentation qui l'accompagne indique que ce produit ne peut en aucun cas être traité comme déchet ménager. Il doit par conséquent être remis à un centre de collecte des déchets chargé du recyclage des équipements électriques et électroniques.

Pour la mise au rebut, respectez les normes relatives à l'élimination des déchets en vigueur dans le pays d'installation.

Pour obtenir de plus amples détails au sujet du traitement, de la récupération et du recyclage de cet appareil, veuillez vous adresser au bureau compétent de votre commune, à la société de collecte des déchets ou directement à votre revendeur.

NL Dit apparaat is voorzien van het merkteken volgens de Europese richtlijn 2002/96/EG inzake Afdankte elektrische en elektronische apparaten (AEEA).

Door ervoor te zorgen dat dit product op de juiste manier als afval wordt verwerkt, helpt u mogelijk negatieve consequenties voor het milieu en de menselijke gezondheid te voorkomen die anders zouden kunnen worden veroorzaakt door onjuiste verwerking van dit product als afval.


Het symbool  op het product of op de bijbehorende documentatie geeft aan dat dit product niet als huishoudelijk afval mag worden behandeld. In plaats daarvan moet het worden afgegeven bij een verzamelpunt voor recycling van elektrische en elektronische apparaten.

Afdanking moet worden uitgevoerd in overeenstemming met de plaatselijke milieuvorschriften voor afvalverwerking.

Voor nadere informatie over de behandeling, terugwinning en recycling van dit product wordt u verzocht contact op te nemen met het stadskantoor in uw woonplaats, uw afvalophaaldienst of de winkel waar u het product heeft aangeschaft.

E Este aparato lleva el marcado CE en conformidad con la Directiva 2002/96/EC del Parlamento Europeo y del Consejo sobre residuos de aparatos eléctricos y electrónicos (RAEE).

La correcta eliminación de este producto evita consecuencias negativas para el medioambiente y la salud.


El símbolo  en el producto o en los documentos que se incluyen con el producto, indica que no se puede tratar como residuo doméstico. Es necesario entregarlo en un punto de recogida para reciclar aparatos eléctricos y electrónicos.

Deséchelo con arreglo a las normas medioambientales para eliminación de residuos.

Para obtener información más detallada sobre el tratamiento, recuperación y reciclaje de este producto, póngase en contacto con el ayuntamiento, con el servicio de eliminación de residuos urbanos o la tienda donde adquirió el producto.

P Este aparelho está classificado de acordo com a Directiva Europeia 2002/96/EC sobre Resíduos de equipamento eléctrico e electrónico (REEE).

Ao garantir a eliminação adequada deste produto, estará a ajudar a evitar potenciais consequências negativas para o ambiente e para a saúde pública, que poderiam derivar de um manuseamento de desperdícios inadequado deste produto.


O símbolo  no produto, ou nos documentos que acompanham o produto, indica que este aparelho não pode receber um tratamento semelhante ao de um desperdício doméstico.

Pelo contrário, deverá ser depositado no respectivo centro de recolha para a reciclagem de equipamento eléctrico e electrónico. A eliminação deverá ser efectuada em conformidade com as normas ambientais locais para a eliminação de desperdícios.

Para obter informações mais detalhadas sobre o tratamento, a recuperação e a reciclagem deste produto, contacte o Departamento na sua localidade, o seu serviço de eliminação de desperdícios domésticos ou a loja onde adquiriu o produto.

I Questo apparecchio è consegnato in conformità alla Direttiva Europea 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).

Assicurandosi che questo prodotto sia smaltito in modo corretto, l'utente contribuisce a prevenire le potenziali conseguenze negative per l'ambiente e la salute.

Il simbolo  sul prodotto, o sulla documentazione di accompagnamento, indica che questo prodotto non deve essere trattato come rifiuto domestico ma deve essere consegnato presso l'idoneo punto di raccolta per il riciclaggio di apparecchiature elettriche ed elettroniche.

Disarsene seguendo le normative locali per lo smaltimento dei rifiuti.

Per ulteriori informazioni sul trattamento, recupero e riciclaggio di questo prodotto, contattare l'idoneo ufficio locale, il servizio di raccolta dei rifiuti domestici o il negozio presso il quale il prodotto è stato acquistato.

Table of Contents

Technical specifications	Page 2
Preparing the oven	Page 3
Control panel	Page 4
Description of control panel symbols	Page 5
Using the spit	Page 6
Using the grill	Page 6
Electronic programmer	Page 7-8
120' mechanical programmer	Page 9
Cleaning the removable glass panel	Page 9
Removing the oven door	Page 9
Replacing the bulb	Page 10
Cleaning and maintenance	Page 11
Technical support	Page 11
Instructions for building in	Page 12

Dear Customer,

Thank you for choosing one of our products. We are sure that it will satisfy all your requirements and guarantee excellent results at all times.

It is important to carefully follow the instructions for correct use of the appliance.

The manufacturer will not be liable for damage to property or injury to persons caused by faulty or incorrect installation.

The manufacturer reserves the right to make alterations to the product at any time without notice.

Technical specifications

This appliance complies with regulations for the suppression of radio interferences.

Power supply voltage

230V 50Hz

Internal dimensions

Height	360 mm
Width	630 mm
Depth	395 mm
Working volume	100 litres

Absorption of heating elements (kW)

Upper heating element	1.050 kW
Lower heating element	1.550 kW
Circular heating element	2.500 kW
Grill heating element	2.500 kW
Radial fan	0.025 kW
Spit gearmotor	0.004 kW
Oven light	0.015 kW
Cooling fan	0.053 kW

INSTALLATION

Declaration of conformity. The parts of this appliance designed to come into contact with foodstuffs comply with the prescriptions of EEC directive 89/109, assimilated by Legislative Decree n° 108 of 25/01/92

CE Appliance compliant with European Directives 89/336/EEC, 73/23/EEC and subsequent modifications.

WARNING

- Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Accessible parts may become hot when the grill is used. Children should be kept away.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT

This appliance may only be used to cook foodstuffs.

Any other use (heating rooms, for example) is considered as improper and therefore dangerous.

The maker declines all responsibility for damage caused by improper, incorrect or unreasonable use.

The following fundamental rules must be observed when using an electrical appliance:

- do not remove the plug from its socket by pulling the power cable
- do not touch the appliance with wet or damp feet
- do not use the appliance barefooted
- children or incapable people may only use the appliance under supervision
- adapters, multiple sockets and extension cables should not be used.
- in case of faults and/or malfunctions, switch off the appliance; do not attempt to repair it yourself.

If the cable is damaged, replace it immediately as follows:

- open the terminal board cover, remove the power cable and replace it with one of a relative length with rubber insulation (HO5RRF) and sufficiently large for the rated power of the appliance.

This operation must be carried out by a qualified technician.

The earth wire (yellow - green) must be about 10 mm longer than the line wires.

In case the appliance needs repairing, contact an authorised technical service centre and make sure original spare parts are used.

Non-compliance with the above points may jeopardise the safety of the appliance.

All work on the appliances must be carried out by qualified personnel.

For maintenance, moving, installation and cleaning of the appliance use suitable prevention and protection equipment (gloves, etc.).

Lifting and moving of appliances weighing more than 25Kg must be carried out using proper equipment, or by two persons, in order to avoid risks or injuries.

 
Preparing the oven for use

Clean the inside of the oven using non-abrasive soap and warm water, then rinse and dry. Switch the oven on at maximum temperature for approximately 20 minutes in order to eliminate oil, grease and remains of any other products used during manufacturing that can cause unpleasant smells during cooking. The appliance must be **electrically disconnected** before cleaning.

Caution!

Keep children well away from the oven during operation.

Note: It is recommended that tin foil or aluminium not to be placed inside the oven.

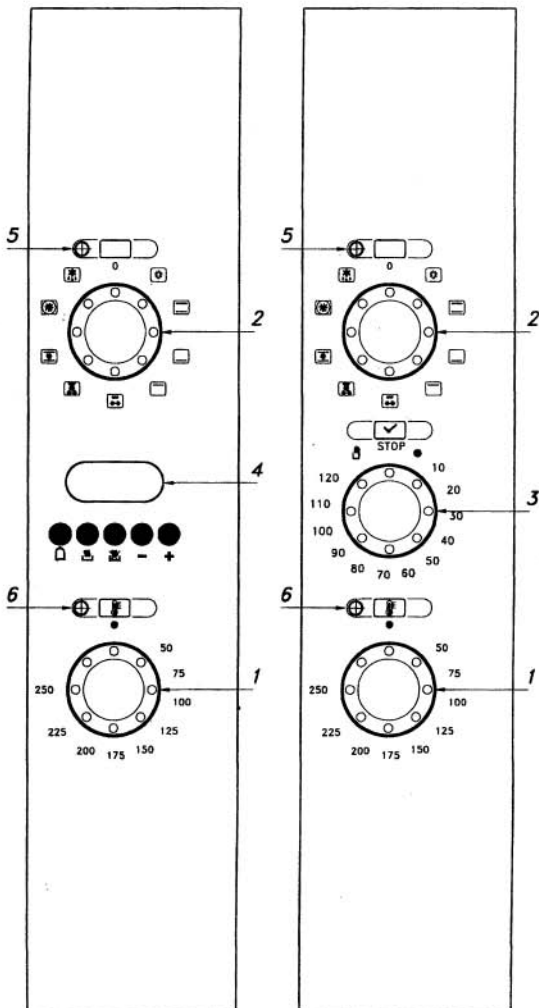

- 1 - Thermostat
- 2 - Switch
- 3 - 120' end of cooking timer
- 4 - Electronic programmer
- 5 - Power supply pilot light
- 6 - Temperature pilot light

Description of control panel symbols



- Oven light



- Upper + lower heating element



- Lower heating element



- Upper heating element



- Grill heating element (with spit when provided)



- Grill + fan heating element (with spit when provided)



- Upper heating element + lower heating element + fan



- Ventilated circular heating element



- Ventilated defrosting

Using the oven

To obtain good results, you are advised to pre-heat the oven to maximum temperature for approximately 10 minutes. Place the food inside and set the thermostat to the required temperature. When the oven has reached the set temperature, the yellow light on the control panel will go out.

Using the spit (fig. 1)

Insert the spit rod "A" into the drive unit and the groove "B" into the bend "C".

Turn the plastic handle "D" anticlockwise and slide the rack into the oven runners ensuring that the rod "E" slots into the hole "F".

The spit rack must always be fitted in the middle of the oven (second position from bottom).

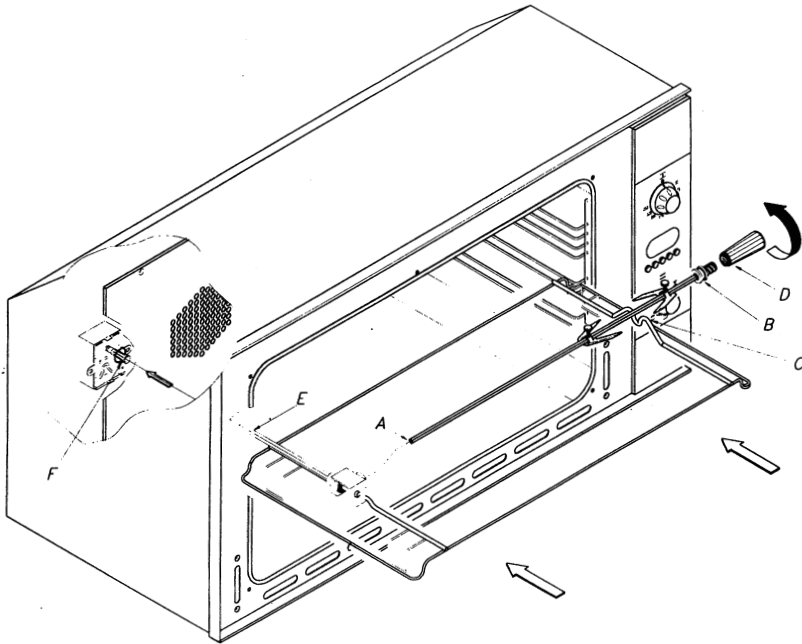 


Fig. 1

Using the grill

Place the food to be grilled directly on the rack or insert on the spit.

The rack must be positioned at the top of the oven whereas the spit rack must always be positioned in the middle (second position from bottom).

The dripping pan can be fitted at the bottom to collect the fat.

CAUTION: WHILE THE GRILL IS OPERATING, THE ACCESSIBLE PARTS ARE VERY HOT - KEEP CHILDREN WELL AWAY FROM THE OVEN.

Note:

Do not use aluminium foil to cover the grill tray or to wrap the food being cooked as the reflected heat will damage the grill element and the aluminium foil can catch fire.

Ventilated cooking

The air distributed by the fan allows you to cook different types of food together (fish, meat etc.) without mixing smells and flavours. A fan uniformly distributes the heat provided by the heating element positioned behind the oven wall. Temperature range 50°-250°C.

Electronic programmer

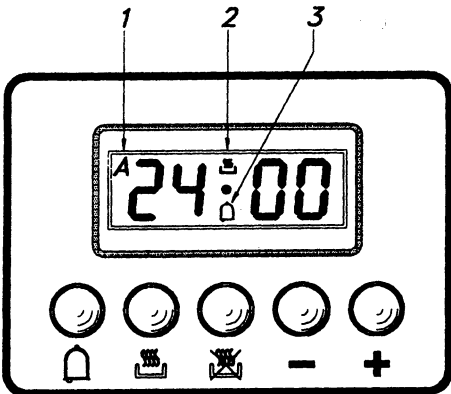 










Fig. 2

-  Timer
-  Cooking time with automatic operation
-  End of cooking time
-  Moves back one number in all programs
-  Moves forward one number in all programs
-  Automatic program
-  Duration and manual mode
-  Minute control



Settings

After pressing a function button, the required time can be set via the +/- keys. For quicker regulation, keep the required key pressed. By pressing the function key and then releasing it, the pre-selected function appears on the display and remains for 5 seconds: during this time the setting can be performed (with one hand). Five seconds after releasing the function key or finishing the setting, the display returns to the clock. Any program set will start immediately. Program selection is accompanied by the sounding of a buzzer.

Setting the time (clock)

Select the clock function by simultaneously pressing the Duration and End of cooking time keys and adjust the clock by means of the +/- keys. All the programs set will be cancelled and the relay will switch off.

Manual operation

Simultaneously press the  and  (the auto symbol will be cancelled): the saucepan symbol will light up.

Any program set will be cancelled.

Semi-automatic operation and cooking duration

Press the Cooking duration key and set the duration by means of the +/- keys. The saucepan symbol will appear.

The relay output will be activated.

If clock = end of cooking time, the relay and saucepan symbol will be off.

The buzzer will sound and symbol A will blink.

Semi-automatic operation and end of cooking time

Press the end of cooking time key and set the required time by means of the +/- keys. The symbol A and the symbol of the saucepan will light up.

The relay output will be activated.

If clock = end of cooking time, the relay and saucepan symbol will switch off.

The buzzer will sound and the symbol A will blink.

Completely automatic operation

Press the duration key and set the required time by means of the +/- keys. The symbol A will appear.

The relay will come on and the saucepan symbol will appear.

Select the End of cooking time function - the minimum setting time will appear. Set the required time by means of the +/- keys.

The relay and the saucepan symbol will switch off.

The saucepan symbol will re-appear when the clock time = the calculated switch-on time.

After setting the automatic program the symbol A will blink. The buzzer will sound and the saucepan symbol and relay will switch off.

Minute control

Press the Minute control key and set the required time by means of the +/- keys.

While the set time runs, the bell symbol will appear.

When the set time elapses, the buzzer will sound.

Buzzer

The buzzer remains active for 7 minutes after the minute control cycle or the cooking program have finished.

Press any function key to stop the buzzer.

Program start-up and check

A set program is run when the required time has also been set. The remaining timers can be checked at any time by selecting the relevant function.

Setting error

The setting is not correct if the clock time is between the beginning of cooking time and the end of cooking time.

The error is indicated via sounding of a buzzer and blinking of the Auto symbol. An incorrect setting can be corrected by re-setting either the beginning or end of cooking time.

Cancelling a program

A program can be cancelled by selecting the manual function.

A set program is automatically cancelled when it reaches the end of its cycle.

120 minute mechanical programmer


The function of the clock is to set a cooking time.

1) OPERATION

After setting the thermostat knob to the required temperature, turn the clock knob clockwise to the required time (max 120 minutes).

When the clock returns to position 0, sounding of a buzzer will indicate that the oven has automatically switched off.

2) MANUAL POSITION

If the cooking time exceeds 2 hours, or if you wish to use the oven manually, turn the clock knob to position  (fig. 3).

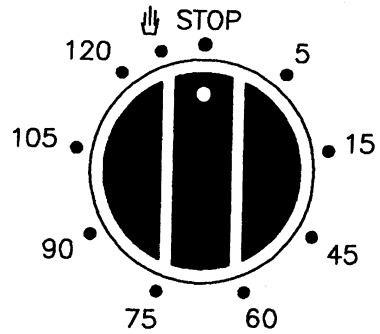 


Fig. 3

Oven door

Clean the oven door using non-abrasive products.

The glass panel can be easily removed and cleaned by unscrewing the four screws at the side (fig.4).

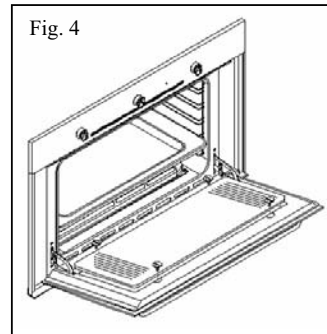 


Fig. 4

REMOVING OVEN DOOR

To make it easier to clear the oven, the door may be removed.

Hinge with mobile U-bolts (Fig. 5)

The hinges "A" are fitted with two mobile U-bolts "B" which block the door when it is completely open if they are hooked onto sections "C" of the hinges. After this has been done, the door must be lifted up and taken out. When carrying out this operation, hold the sides of the oven door beside the hinges. To refit the door first slide the hinges into their grooves.

Lastly, before closing the door do not forget to detach the two mobile U-bolts "B" which were used to hook the two hinges.

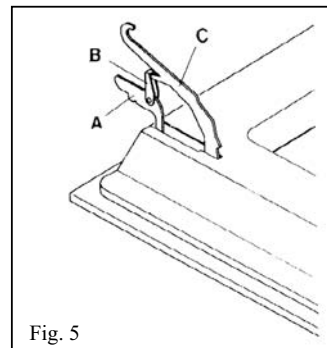 


Fig. 5

Replacing the bulb (fig.6)

CAUTION: disconnect the oven power supply cable.

If you have to replace the bulb B, remove the protective cover A by turning it anticlockwise. After replacing the bulb, refit the protective cover A (Fig.6).

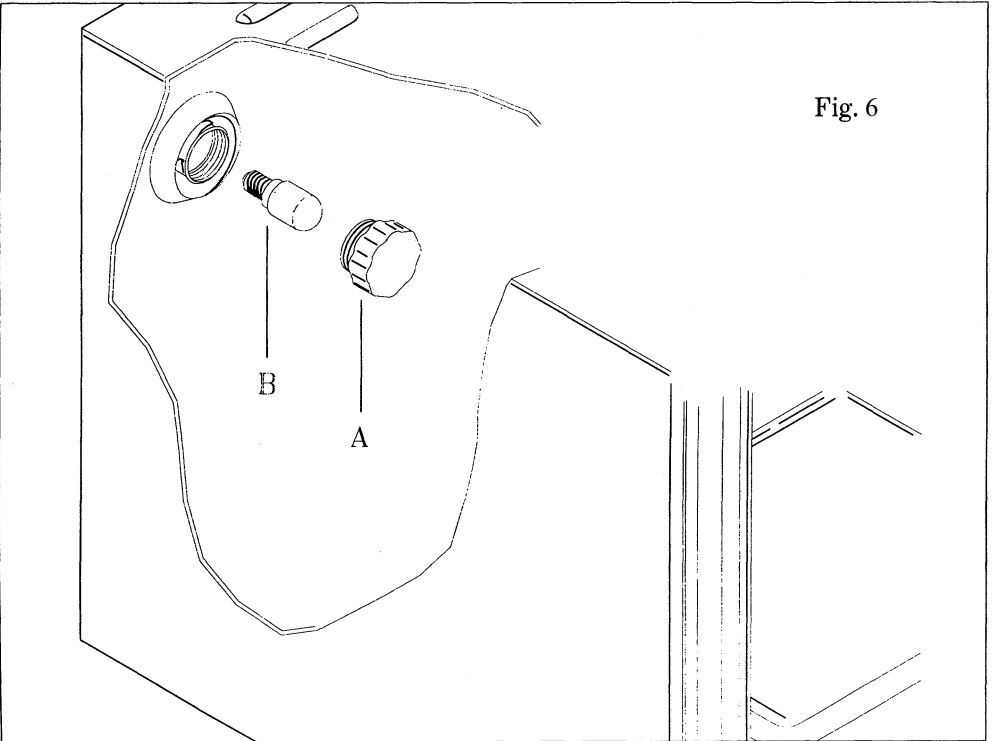 


Fig. 6

Cleaning and maintenance

Important: before carrying out maintenance on the oven, it must always be unplugged from the power supply or disconnected from the mains via the electrical system master switch.

The stainless steel and enamelled parts will keep their finish if cleaned with water or using specific products, drying them thoroughly.

Avoid using products that contain chlorine or diluted chlorine solutions, caustic soda, abrasive detergents, hydrochloric acid, vinegar and other products that can scratch.

Stains left on the bottom of the oven (sauces, sugary substances, egg white and fats) are caused by spatters or spillages of food. Spattering occurs during roasting and is due to the temperature being too high whereas spilling is due to containers being too small or to food increasing in volume during cooking.

These two problems can be solved by using high-sided containers or by using the dripping pan supplied with the oven. When cleaning the lower part of the oven, you are advised to remove any stains while the oven is still warm - the longer you wait, the more difficult it will be to remove them.

Immediately after use while the oven is still warm but switched off, you are also advised to place a cloth soaked in ammonia - a few drops are sufficient - on the bottom of the oven. Close the oven door, wait approximately 10 minutes and then dry thoroughly.

Technical support

If the oven does not work correctly, you are advised to check the following before calling the technical support service:

CHECK THAT THE PLUG IS CORRECTLY INSERTED IN THE SOCKET

CHECK THE PROGRAMMING OF THE ELECTRONIC PROGRAMMER

If the cause of the fault is identified, switch the appliance off, do not tamper with it and call the Technical Support Service, specifying the model indicated on the identification plate at the bottom of the front of the oven.

The appliance is provided with a guarantee certificate which entitles the user to free use of the **TECHNICAL SUPPORT SERVICE** for one year from the date of purchase, the only expense being a fixed call-out fee. The guarantee certificate must be filled in and kept so that it can be shown to the **TECHNICAL SUPPORT SERVICE**.

Instructions for building in the oven (fig.7)

The oven can be housed below the worktop or in a column unit by means of 4 screws. Follow the drawing below.

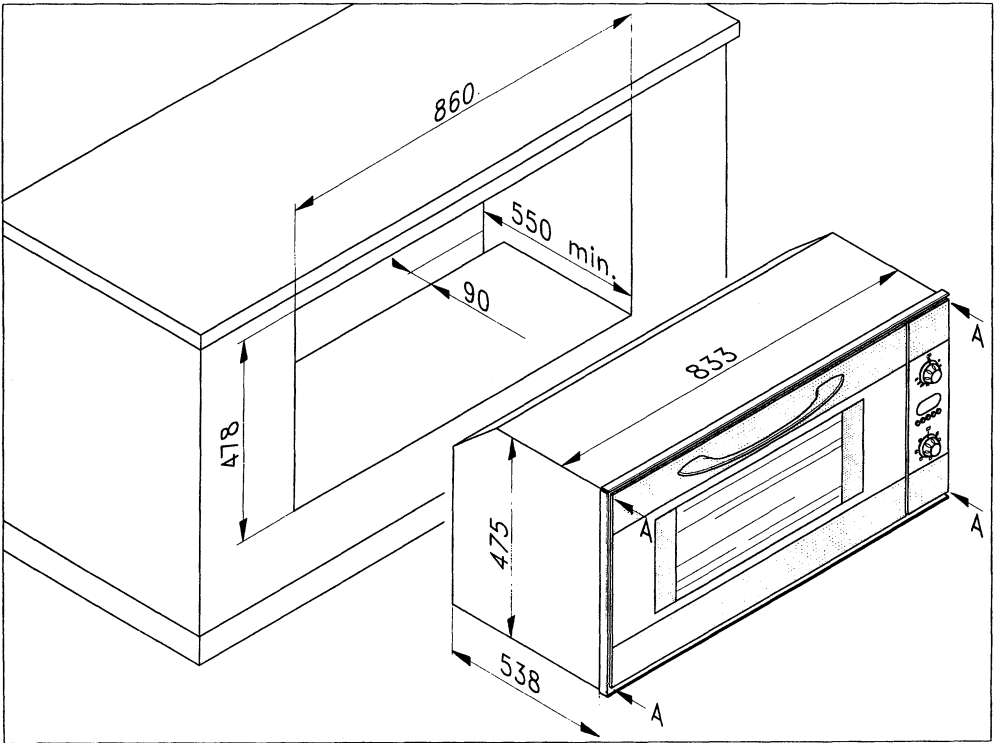 


Fig.7

IMPORTANT

To ensure the built-in appliance works correctly, the unit must correspond to certain characteristics.

The panels of the units near the oven must be made of heat-resistant material. Especially as regards veneered wooden furniture, the glues must withstand temperatures of up to 120°C: plastic or binders that cannot withstand this temperature will deform or come unstuck.

In compliance with safety regulations, once the appliance is built in, contact with electrical components must no longer be possible.

All protective coverings must be fixed so they cannot be removed without the aid of a tool.