



C270G/SS



Caple GAS Oven Stainless Steel

TECHNICAL INFORMATION

C 270G/SS

FFG0CP001X

tav. 1
cat. 18.F2359

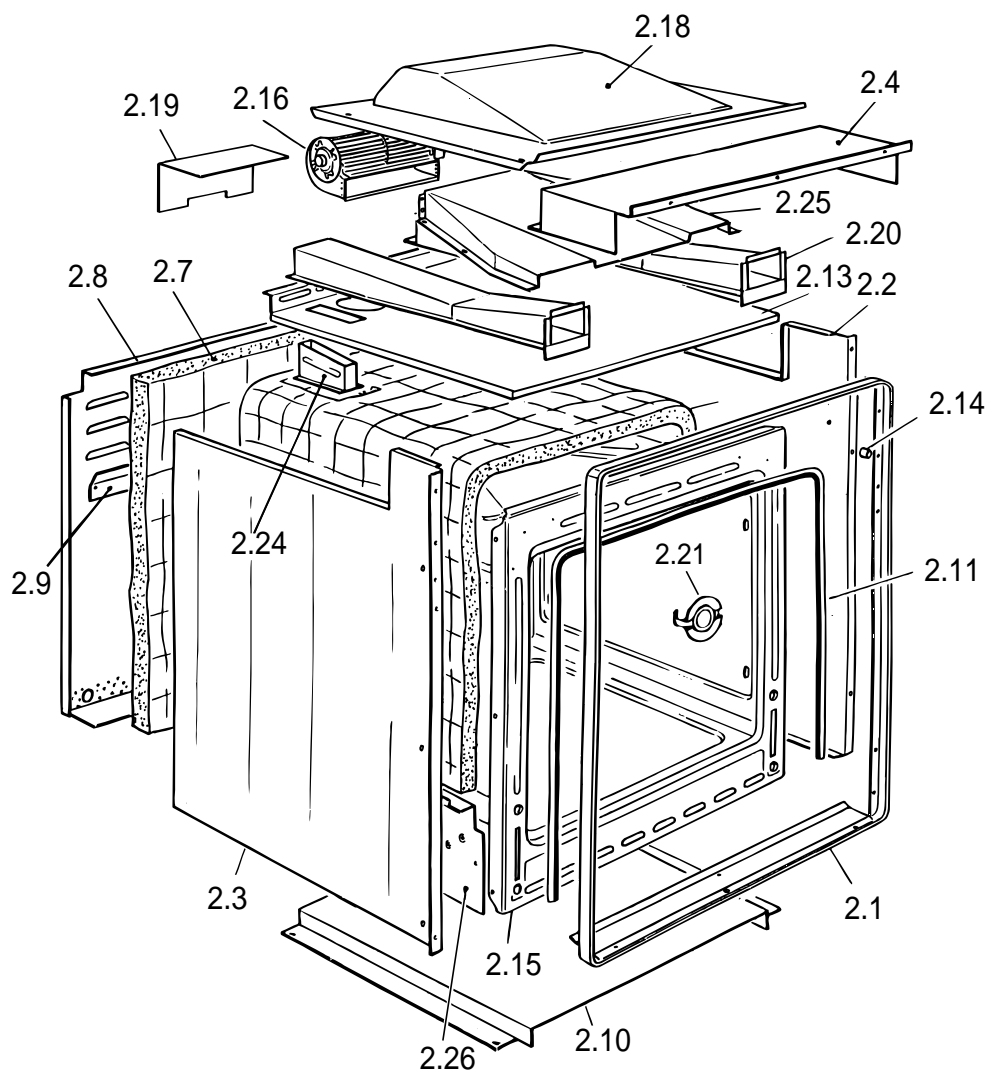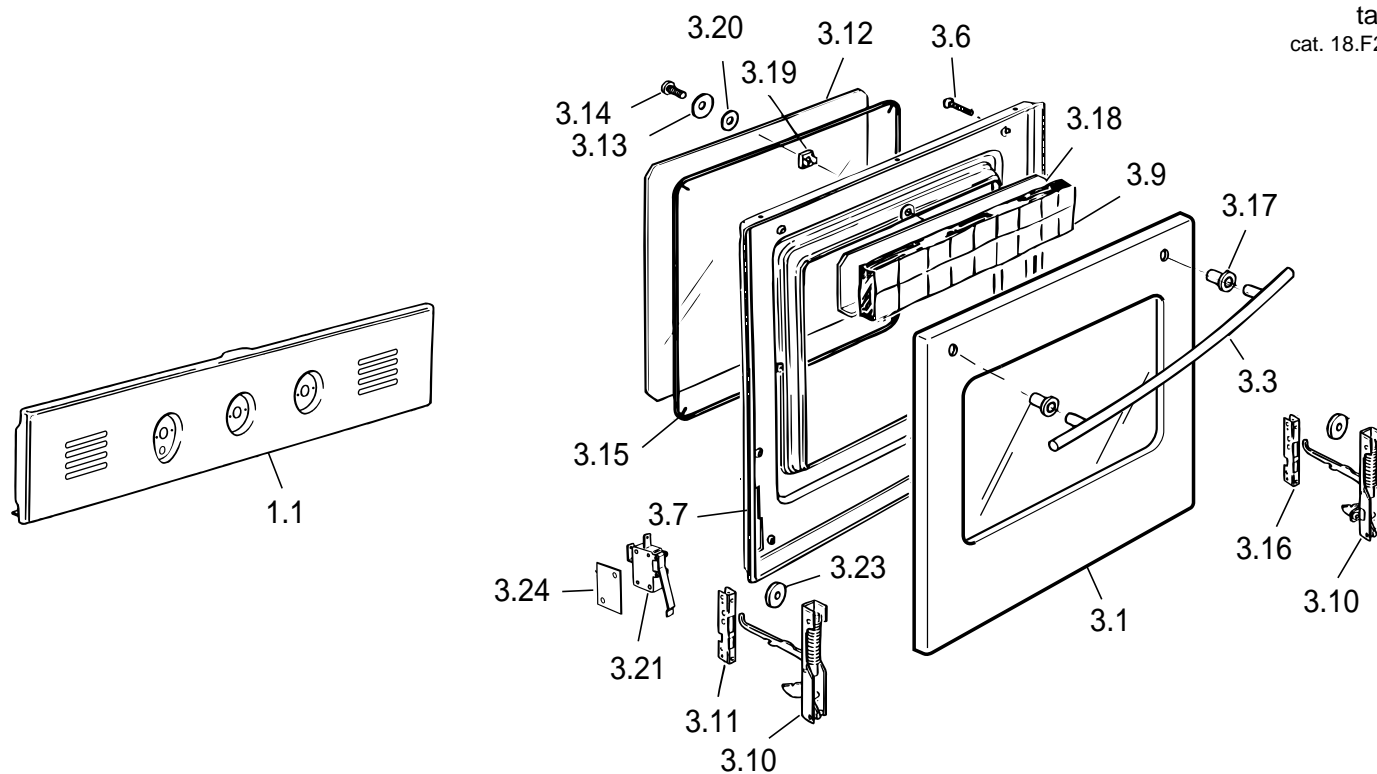


REF.	CODE	DESCRIPTION
1.1	35F712SYCP	Control panel
2.1	083184067	Trim surround
2.2	411F719	Right side panel
2.3	411F721	Left side panel
2.4	411FG03	Control panel shelter
2.6	030069.1	Oven insulation
2.7	030068	Rear insulation
2.8	411FG01	Rear panel
2.9	4216003Z	Insulation cross-piece
2.10	411F706	Bottom panel
2.11	053039	Seal
2.13	421FG01Z	Upper shelter
2.14	085019	Spacer
2.15	450FG1GE11	Oven cube
2.16	079017	Tangential fan
2.18	411FG07	Upper shelter
2.19	411F715	Upper air conveyor
2.20	51AFG01	Stack
2.21	035097	Rotisserie hole plug
2.24	094213	Funnel
2.25	411F716	Air conveyor
2.26	094212	Bracket
3.1	032F71016F	Outer glass
3.3	037174060	Handle
3.6	001184	Screw
3.7	373FF706K	Door skin
3.9	030057	Door insulation
3.10	063103	Hinge (male)
3.11	063064	Left hinge (female)
3.12	0311000.1	Inner glass
3.13	103205	Inner glass washer
3.14	001214	Screw
3.15	053084	Glass seal
3.16	063025	Right hinge (female)
3.17	085039061	Sleeve
3.18	411F729	Insulation support
3.19	214021	Nut with clips
3.20	003035	Silicone washer
3.21	077053	Switch
3.23	003041	Washer
3.24	039046	Insulating paper


C 270G/SS

FFG0CP001X

tav. 2
cat. 18.F2359

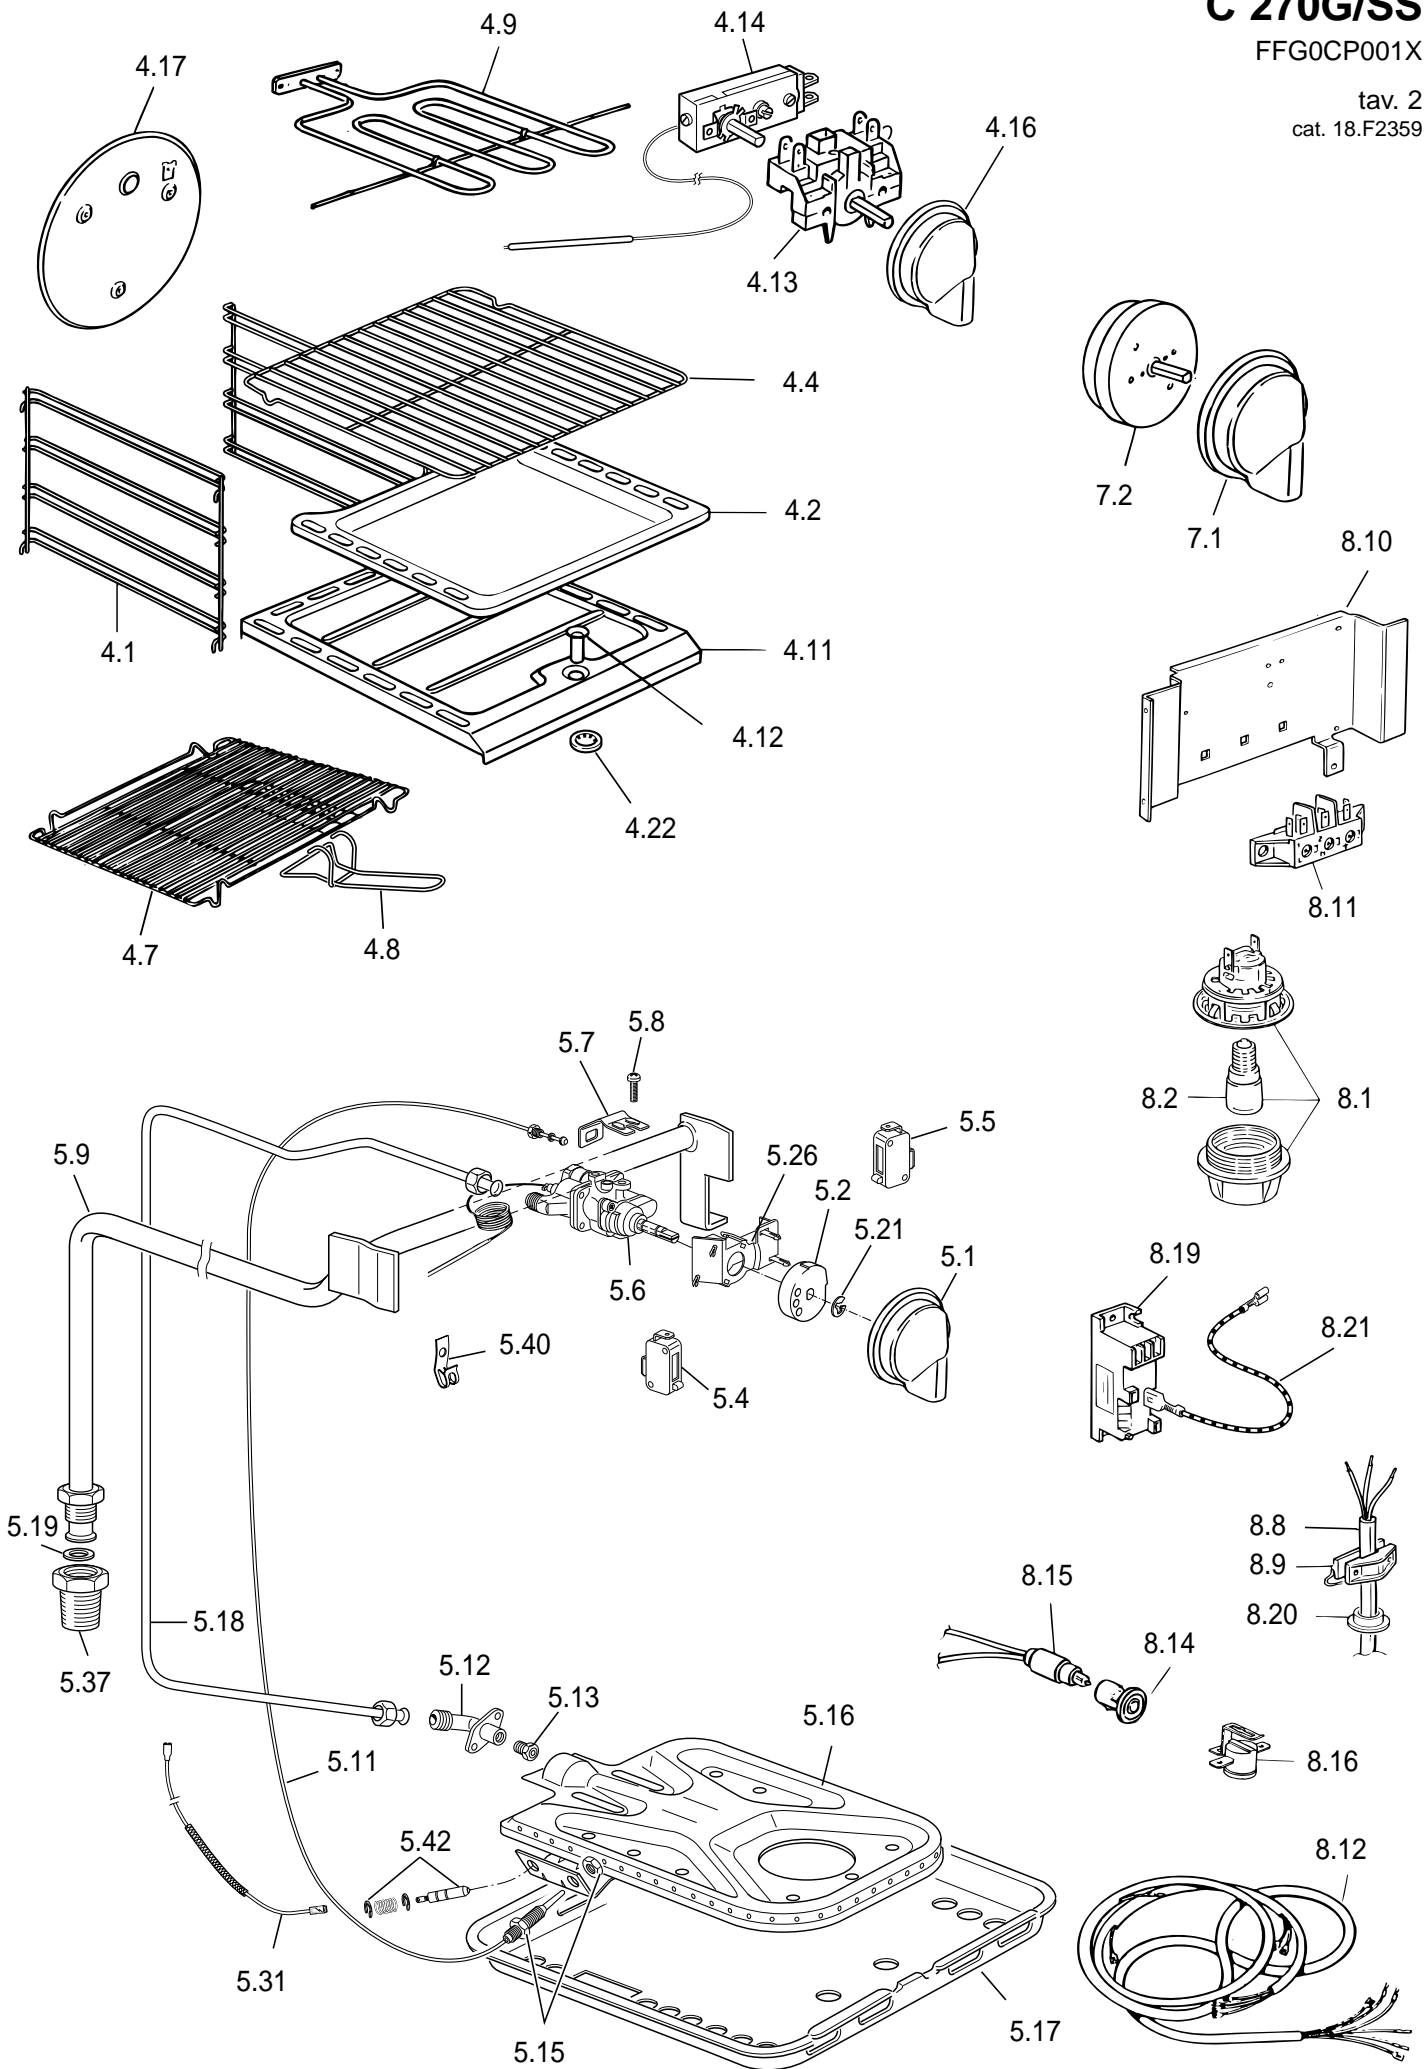

REF.	CODE	DESCRIPTION
4.1	217291	Shelf support
4.2	48B6101K	Oven tray
4.4	217270.1	Wire shelf (flat)
4.7	217397	Grill-pan grid
4.8	037144	Grill-pan grid handle
4.9	062053004	Grill element
4.11	47EFG01K	Oven floor
4.12	103057	Lighting tube
4.13	050044	Oven switch
4.14	066081	Thermostat
4.16	218PN02200	Knob
4.17	51BFG01	Disk
4.22	003043	Retaining ring
5.1	218PN02200	Oven thermostat knob
5.2	103392	Cam
5.4	077073	Ignition switch
5.5	077066	Switch
5.6	066135	Oven burner thermostat
5.7	094316	Bracket
5.8	001189	Screw
5.9	342FG00G04	Feed pipe
5.11	107013	Thermocouple L=1000 mm
5.12	067025	Oven elbow
5.13	101069	Oven burner injector - Ø 0.83 LPG
=	101090	Oven burner injector - Ø 1.25 NG
5.15	R00550280	Nut
5.16	215431	Oven burner
5.17	47EFG02K	Burner shelter
5.18	029387	Oven inlet pipe
5.19	053024.1	Gasket
5.21	003039	Retaining ring
5.26	103370	Switch support
5.31	103261	Oven ignition wire
5.37	067026	Connection
5.40	213007	Clip
5.42	084027	Oven burner igniter
7.1	218PN02210	Alarm knob
7.2	074009	60' alarm
8.1	072003	Lamp holder
8.2	073013001	Lamp
8.8	054041	Cord
8.9	052008	Wire fastener
8.10	094211	Terminal bracket
8.11	051038	Terminal block
8.12	1131174	Wiring
8.14	073035	Control lamp cover (Red)
8.15	073037	Control lamp L=150
8.16	066057	Cut-off thermostat - 140°C
=	066080	Cut-off thermostat - 55°C
8.19	082050.1	Burners ignition coil
8.20	052007	Anti-shock
8.21	103488	Burner ignition coil cable
-	1101894	Instruction booklet

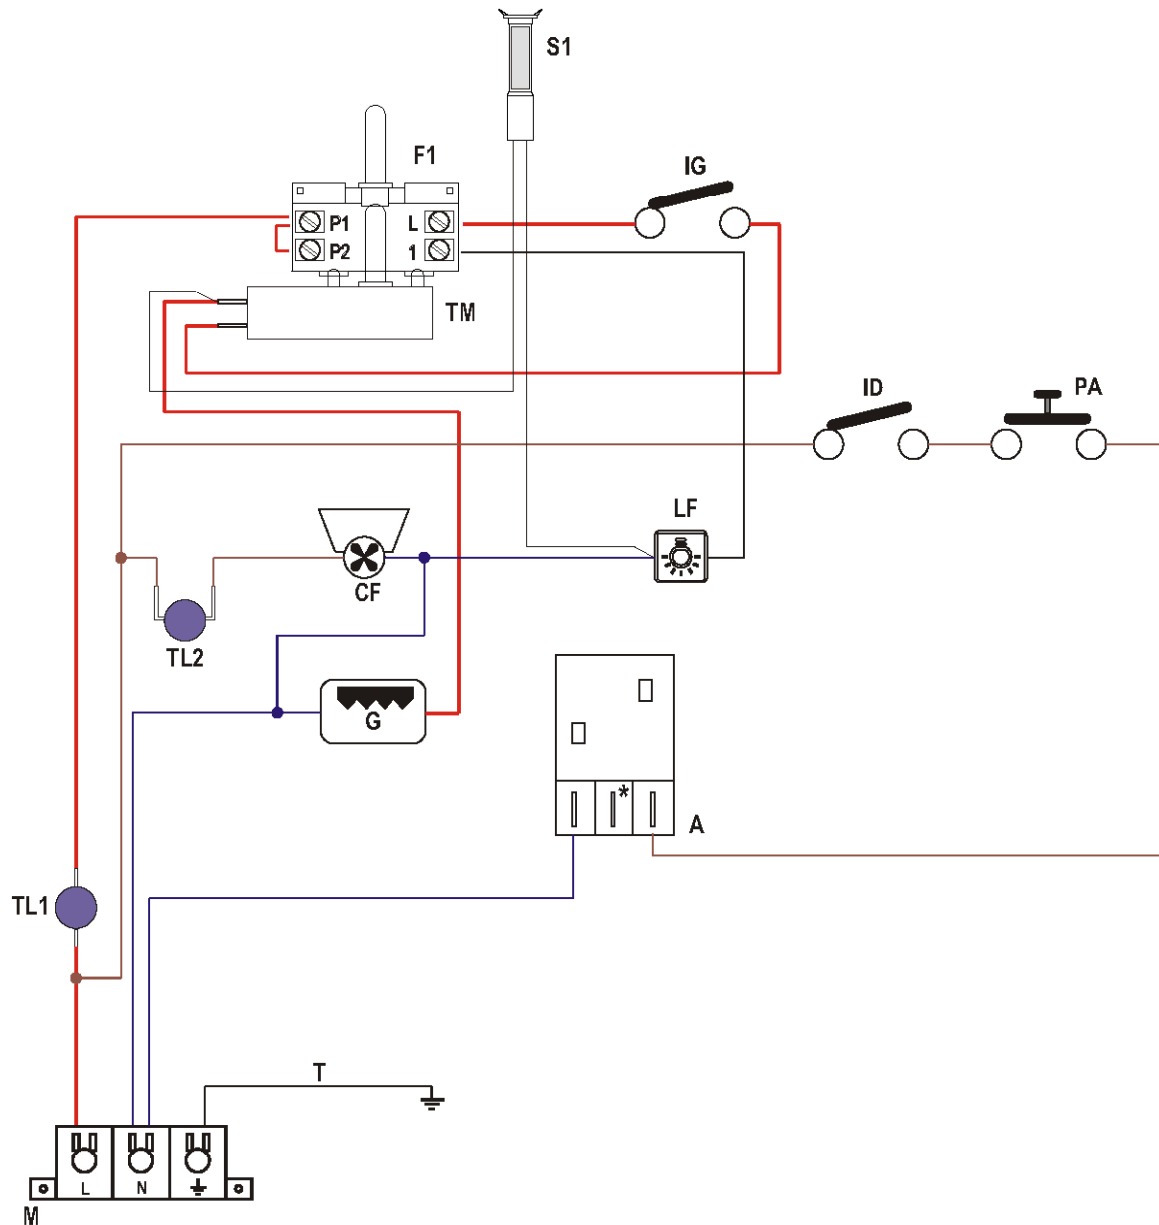

ELECTRIC DIAGRAM KEY

- F1 Grill element switch
- IG Grill security switch
- G Grill element
- LF Oven lamp
- TM Thermostat
- TL1 Thermal overload
- S1 Thermostat pilot lamp
- TL2 Cooling fan thermolimitator
- CF Cooling fan
- PA Ignition switch
- ID Door switch security
- A Ignition coil
- M Terminal block
- T Earth connection



C270G/SS

Caple GAS Oven Stainless Steel