



# CR9224

Caple Sense 900mm Range







TECHNICAL INFORMATION

# Product installation diagrams


---

Models:  
CR9204  
CR9224


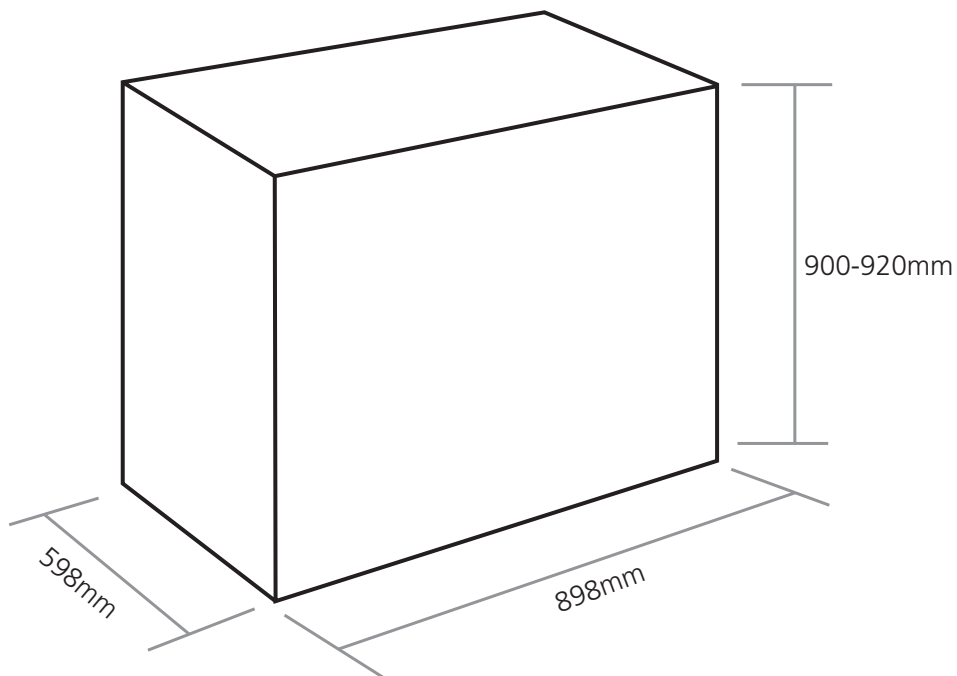


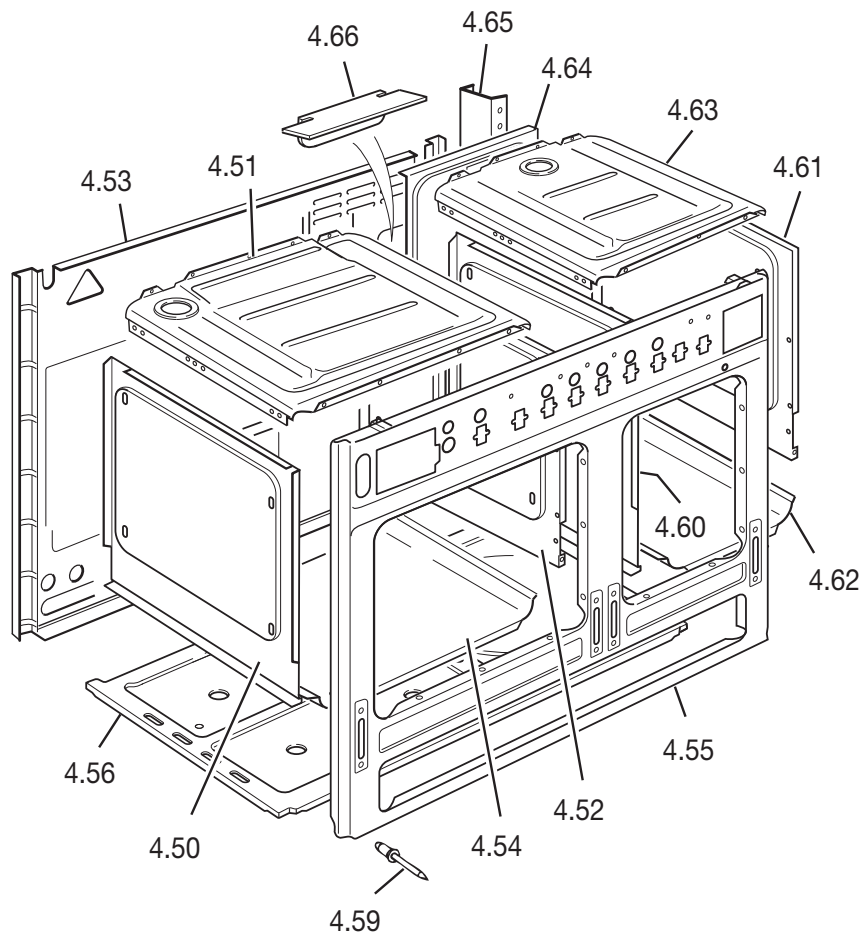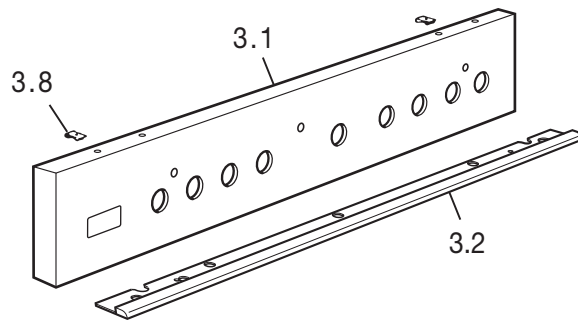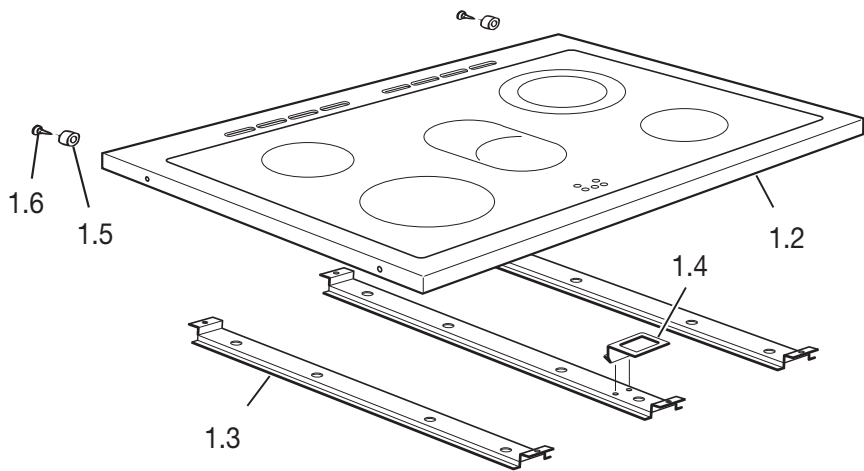


Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
1.1	Rear trim		103637063
1.2	Glass with frame		355VC9S03
1.3	Hotplate support		51B9S02
1.4	Front control lamp support		094408
1.5	Spacer left/right		040041001
1.6	Stainless steel screw		001057
3.1	Control panel		0329T004
3.2	Control panel trim		1031191
3.3	Interior control panel		35M9S004H
4.50	Left oven side panel (Left)		45EN6106K
4.51	Left top oven panel		45EN6101K
4.52	Left oven side panel (Right)		45EN6107K
4.53	Body rear panel		45H9S001K
4.54	Left oven floor		47E6102K
4.55	Body front panel		45B36T01K
4.56	Lower element cover		45K96004Z
4.59	Rivet		211012
4.60	Right oven side panel (Left)		45E65104K
4.61	Right oven side panel (Right)		45E65105K
4.62	Right oven floor		47E9S001K
4.63	Right top oven panel		45E9T001K
4.64	Body rear panel		45H9T001K
4.65	Right oven rear spacer channel		4219S02Z
4.66	Right oven lower rear panel spacer		4219S03Z

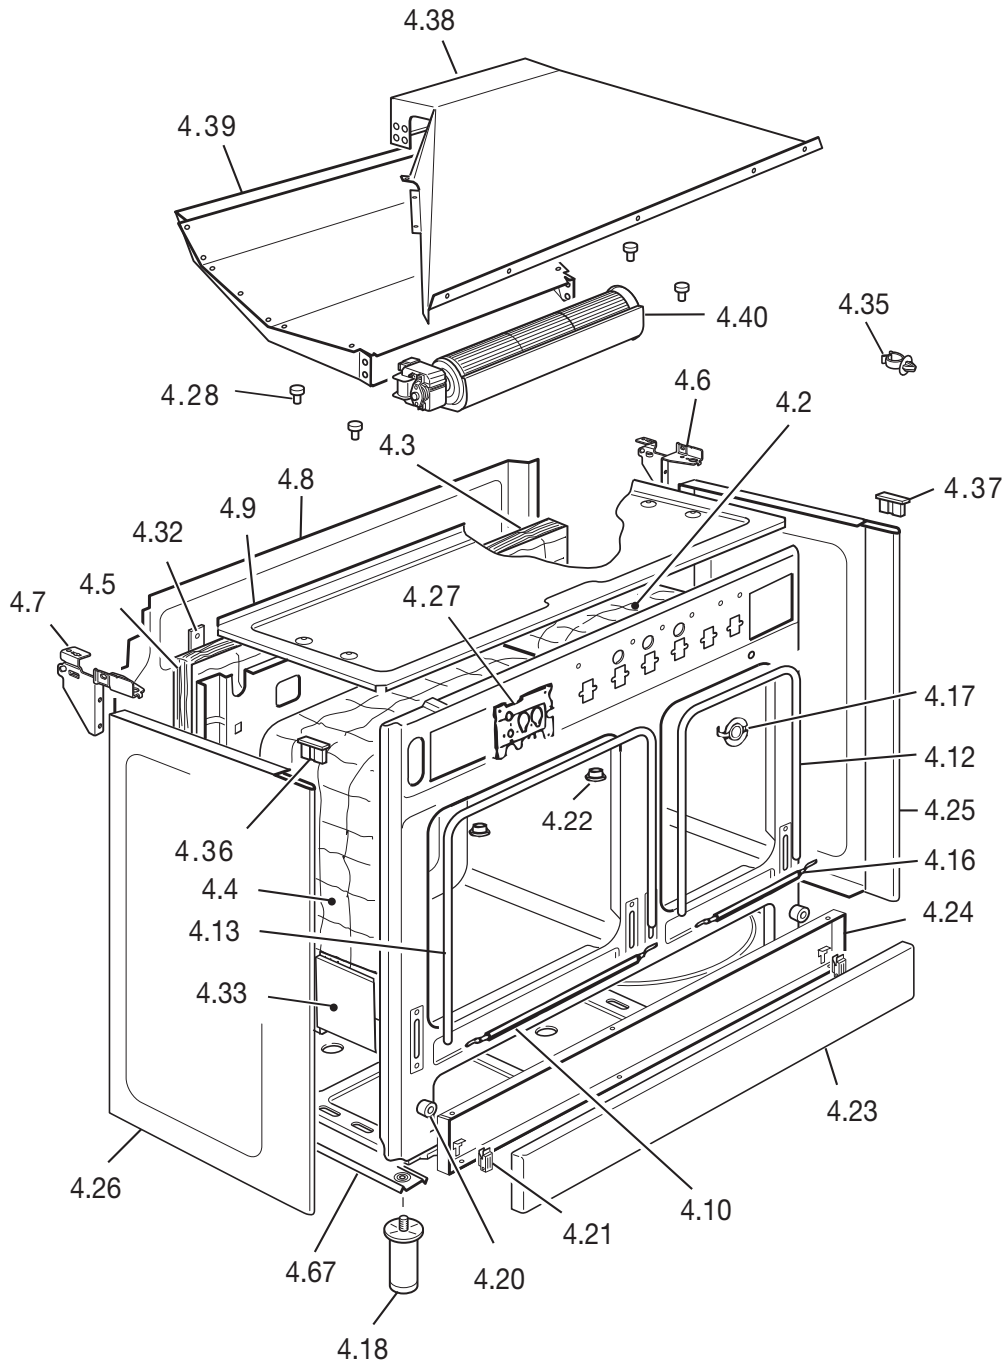


Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
4.2	Oven insulation		030172.1
4.3	Rear insulation		030207
4.4	Oven insulation		030206
4.5	Rear insulation		030185
4.6	Rear right coupler		094502DX
4.7	Rear left coupler		094502SX
4.8	Rear panel		4119T02
4.9	Upper shelter		4219S01Z
4.10	Top/bottom seal		053074
4.12	Seal		053093
4.13	Seal		053039
4.16	Bottom seal		053094
4.17	Rotisserie hole plug right oven		035097
4.18	Shim		103564
4.20	Buffer		040061
4.21	Hinge		063075
4.22	Sleeve		085044
4.23	Front panel		371V9609L
4.24	Inside panel		373V9601Y
4.25	Side panel right		36C91D1S
4.26	Side panel left		36C91S1S
4.27	Timer support front up		094136
4.28	Buffer		040056
4.32	Rear insulation support		4219604Z
4.33	Hinge protection		58BN601
4.35	Tube retainer		531533
4.36	Left stopper		081084/NS
4.37	Right stopper		081083/NS
4.38	Air conveyor		46A9S02Z
4.39	Funnel		46A9S01Z
4.40	Tangential fan		079025
4.67	Leg base support left/right		51B9604

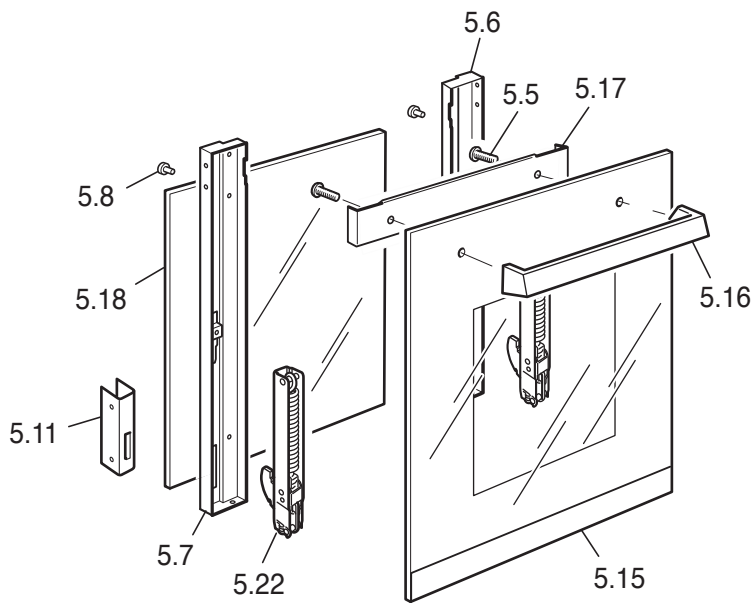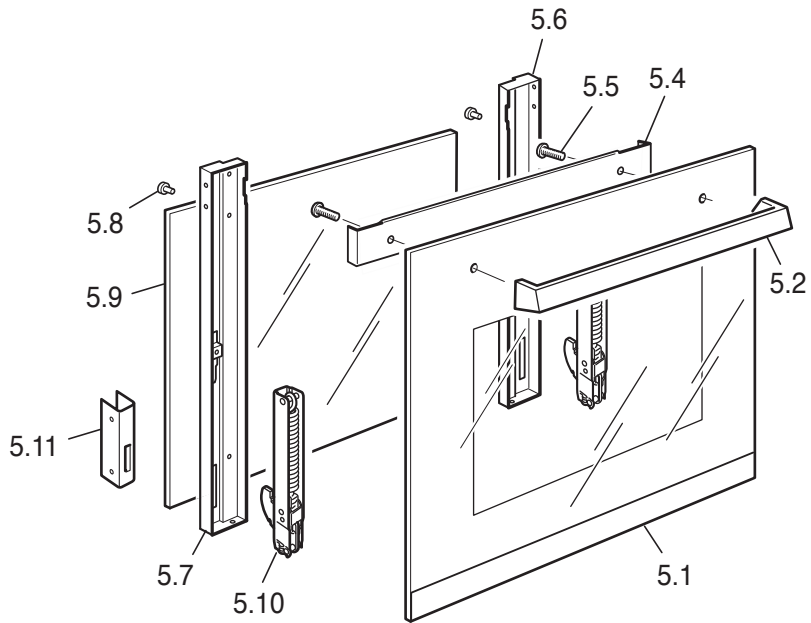




Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
5.1	Door glass		0321T004
5.2	Door handle		037299061
5.4	Fixing bar		51B9103H
5.5	Door handle screw		001265
5.6	Right door trim		51A9T01DH
5.7	Left door trim		51A9T01SH
5.8	Rubber		040051
5.9	Inner glass		0312726TH
5.10	Right door hinge (male)		063123
5.11	Door hinge (female)		063109
5.15	Door glass		0329S2728B
5.16	Door handle		037300061
5.17	Fixing bar		51B9S07H
5.18	Inner glass		0312727TH
5.22	Left door hinge (male)		063124

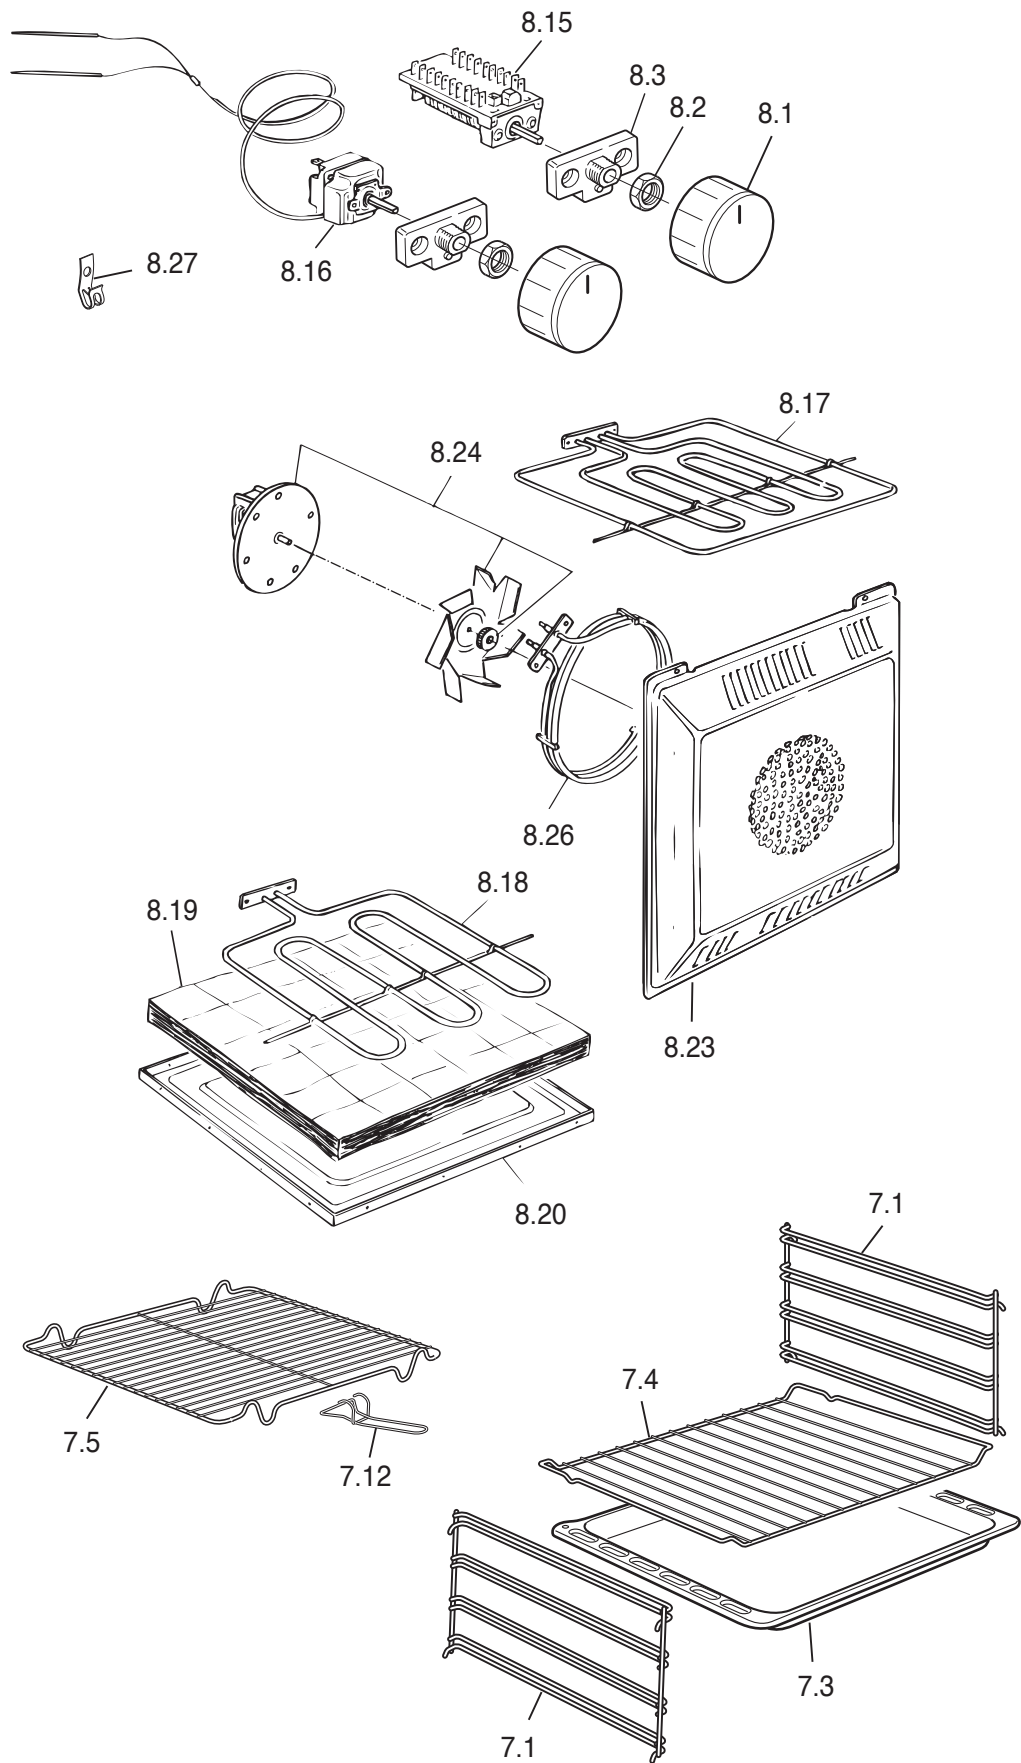

Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
8.1	Oven knob		2183009482
8.2	Switch nut		214063
8.3	Switch plate support		103210.1
8.15	Oven switch		050028.1
8.16	Oven thermostat		066072
8.17	Top + grill element	230V	062103004
8.18	Bottom element	230V	062107004
8.19	Bottom element insulation		030083.1
8.20	Bottom insulation support		4216102Z
8.23	Fan diffuser		47AN604K
8.24	Fan motor		079008001F
8.26	Fan element	230 V	062097004
8.27	Clips		213025
7.1	Shelf support		217291
7.3	Oven tray		48B6101K
7.4	Oven shelf		217220
7.5	Grill-pan grid		217397
7.12	Grill-pan grid handle		037144

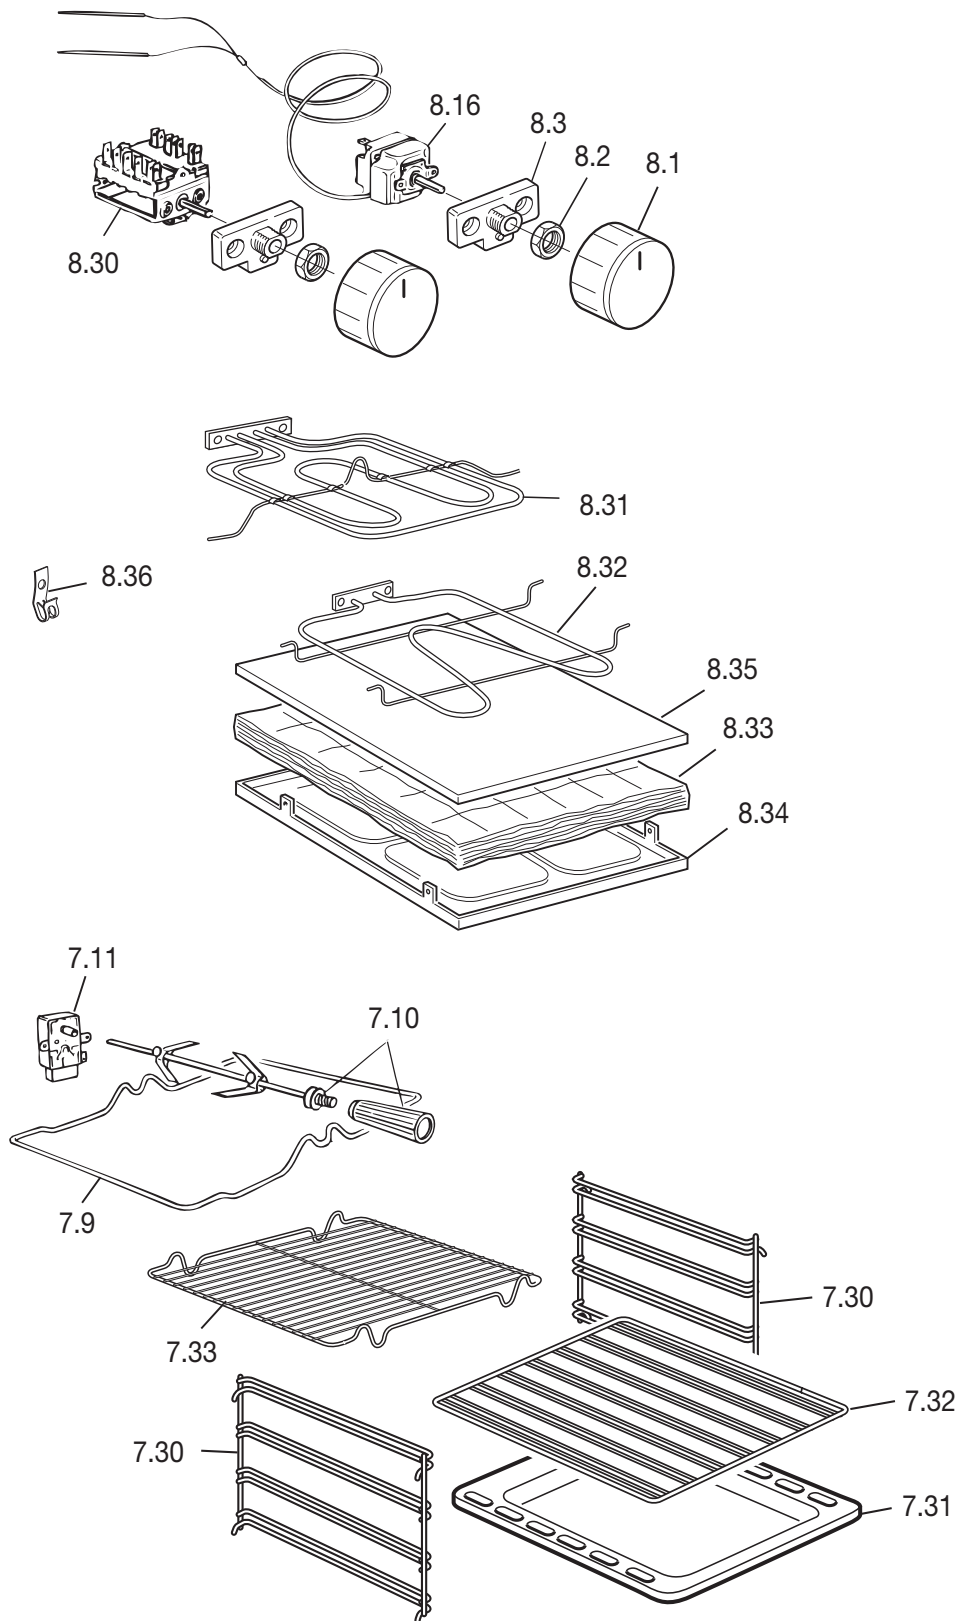

Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
8.1	Oven knob		2183009482
8.16	Oven thermostat		066072
8.30	Oven switch		050030
8.31	Top + grill element		062102004
8.32	Bottom element	230V	062096004
8.33	Bottom element insulation	230V	030129.1
8.34	Bottom element support		4219S04Z
8.35	Bottom element protection		4219S05Z
8.36	Clip		213025
7.9	Rotisserie support		217539
7.10	Rotisserie spear		080025+037012
7.11	Rotisserie motor		079014
7.30	Shelf support		217307
7.31	Oven tray		48B9S001K
7.32	Oven shelf		217542
7.33	Grill-pan grid		217537

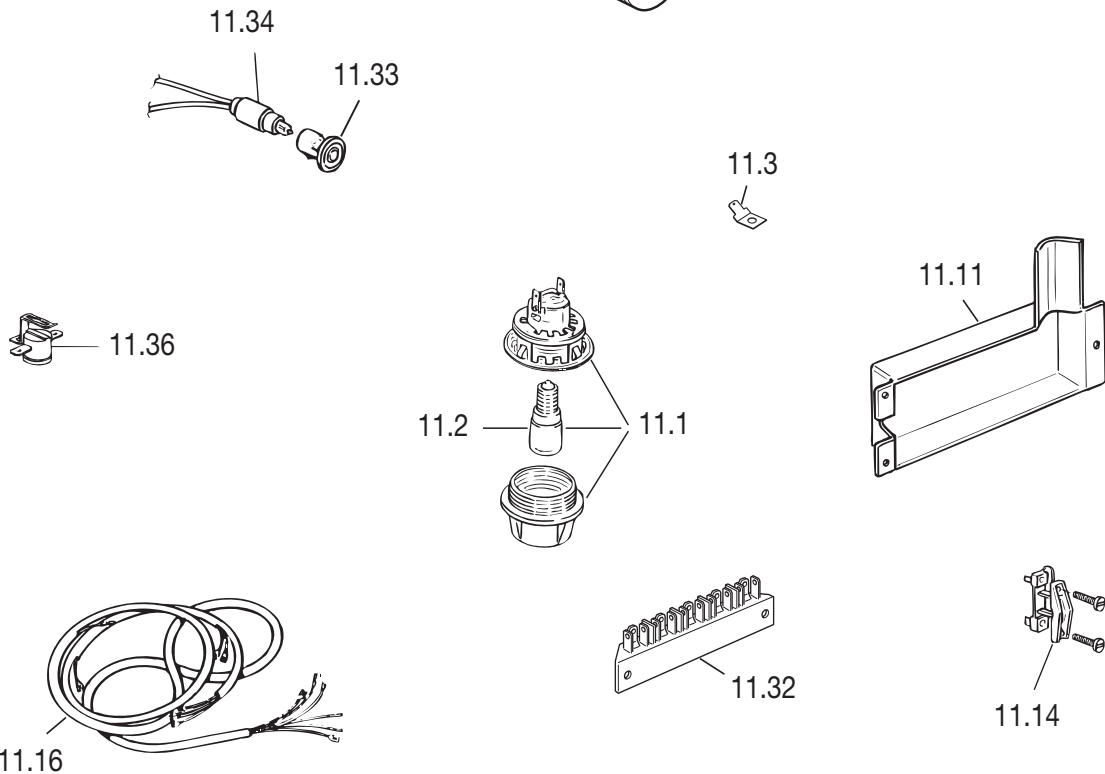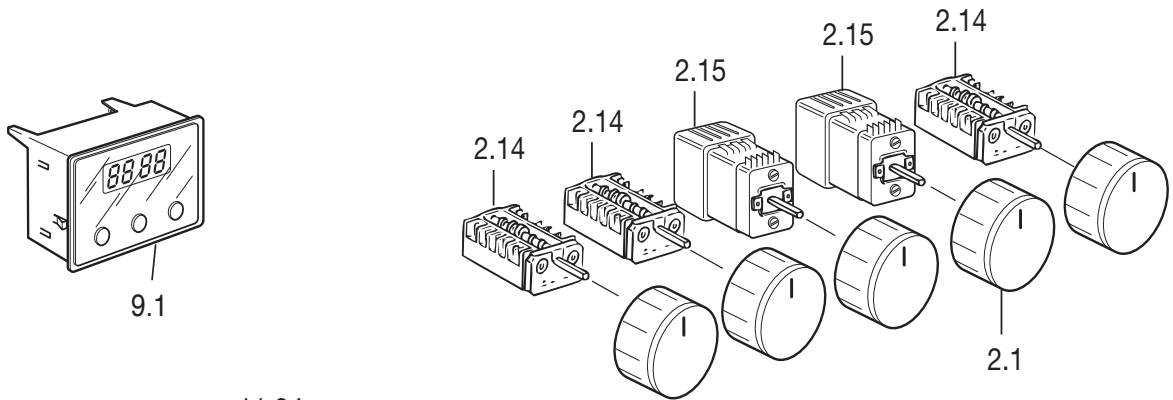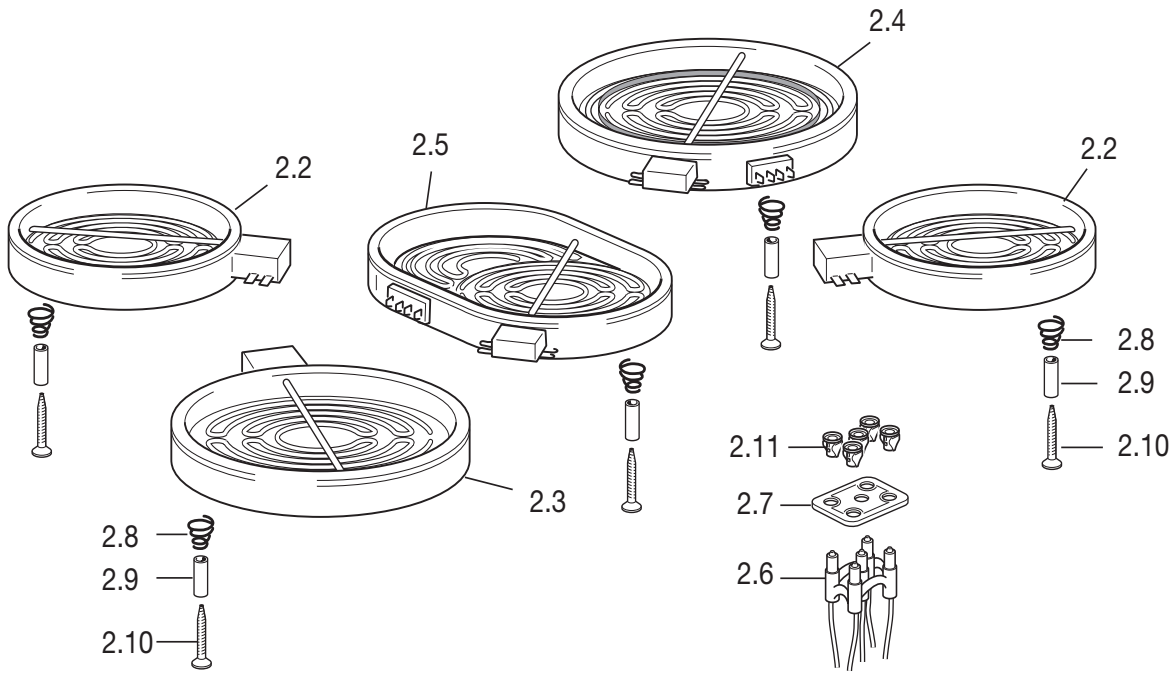

Ref.	Part description	Product code	
		<b>C9T0CP019X</b>	
		Feature	Part code
2.1	Knob		2183009482
2.2	Radiant hotplate - rear left, front right	Ø 145 - 1200W	04714230
2.3	Radiant hotplate - front left	Ø 180 - 1700W	04716230
2.4	Double radiant hotplate - rear right	210/120 - 2100/700W	04744230
2.5	Oval radiant hotplate - centre	Ø 140x250 - 1800/1000W	04745230
2.6	Hob hot assembly front centre		073087
2.7	Control lamp plate		1031134
2.8	Spring hob for each hot plate (2 for each hotplate)		035075
2.9	Spacer hob for each hot plate (2 for each hotplate)		085043
2.10	Screw hob for each hot plate (2 for each hotplate)		001111
2.11	Control lamp support		1031121
2.14	Switch pack - rear left, front right, front left		050021/E
2.15	Energy regulator - centre, rear right		050052230
9.1	Electronic timer		074105
11.1	Lamp holder assembly		072003
11.2	Lamp - 15 W		073013001
11.3	Earth plate		094221
11.11	Terminal block cover - rear cooker		103658A
11.14	Cable clamp - rear cooker		052008
11.16	Wiring loom		1131877
	Wires for hotplates		1131300
11.32	Terminal block - rear cooker	40A - 6P	051037
11.33	Control lamp lens - Red		073041.2
11.34	Control neon	L = 230	073039.2
11.36	Cut-out thermostat - left oven	160°C	066123
	Cut-in thermostat - left oven / right oven cooling fan	80°C	066145
	Cut-out thermostat - right oven	150°C	066073
-	Instruction booklet		1103423