




WDI1210

Caple Integrated Washer Dryer

INSTRUCTION MANUAL

INSTALLATION INSTRUCTIONS

Positioning

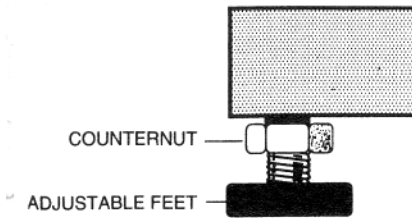


After your washing machine has been placed in the desired location, level it by means of the front left foot, then the counter nut must be locked by means of the special key provided.

Warning: if the machine is not perfectly leveled, it will be unstable, noisy and may lead to malfunctions and broken parts. Do not place the machine on mats or carpets.


Water connection

COLD WATER HOSE = WHITE HOSE
HOT WATER HOSE = BLACK HOSE

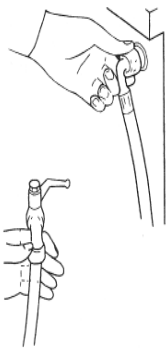

Connect the water supply hoses to hot & cold-water taps with a 3/4" (gas type) fitting insert the rubber sealing washers supplied with the machine and fully tighten the ring nuts. If the water tap is new or has not been used for a long time it is recommended to let the water run for a while before completing the connection. Connect the other end of the water supply hose to the machine and again insert the rubber washer between the hose and the solenoid valve fitting.

Drain Hose

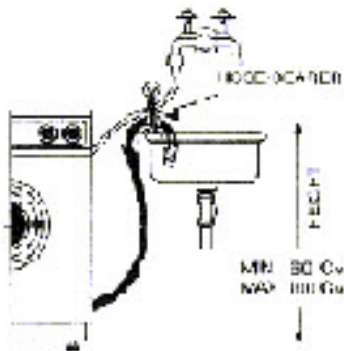

Insert the drain hose into a drain pipe (with a minimum internal diameter of 4cm) or hook it on a sink or bathtub, without crimping or creating any sharp curves. The hose should be positioned at a height ranging from a minimum of 60cm to a maximum of 100cm, as shown in the figure.

Electrical Connection

Make sure that the electrical system can support the maximum current load indicated on the rating plate on the rear side of the machine. The washing machine should be connected to an electrical grounded outlet, as prescribed by law. This outlet must be easily accessible after the installation of the washing machine.

If the supply card is damaged, it should be replaced by a special cable available at the manufacturers or at the technical service.


The company will not be responsible for any damage to persons or things due to non-compliance with these instructions.

CLEANING AND MAINTENANCE

This washing machine does not require any particular maintenance. At the end of each wash it is recommended to leave the door open so that air will circulate and dry the interior of the


machine. The external parts of the machine should never be cleaned with abrasive detergents since this would ruin the enamel coating as well as the synthetic parts.

Removing and cleaning filter

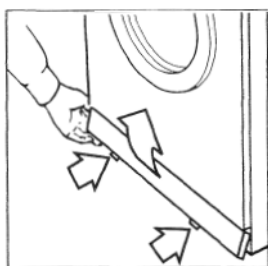

Remove the plastic base guard at the bottom of the machine by pressing and pulling upwards on the two tabs.

Place a rag under the washing machine to adsorb any residual water. The filter is located under the base. Turn the filter handle counterclockwise and pull out the filter. Clean it under running water. Reinsert the filter and turn the handle clockwise until it is completely locked. **WARNING:** water may leak from the filter if it is not properly tightened. Remember to clean the filter frequently to avoid excessive clogging.

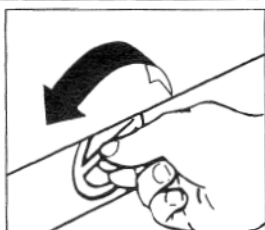

TECHNICAL FEATURES

Length 595 mm

Depth 530 mm

Height 850 mm

Capacity

Cotton 5 kg max. of dry linen

Synthetic and mixed fabrics. 2,5 kg max. of dry

linen


Wool 1 kg max, of dry linen

Voltage and frequency 230 V / 50 Hz

Fuse 10 amp

Water pressure required in water mains min. 0.1 Mpa (1 Bar)

max. 1.0 Mpa (10 Bar)

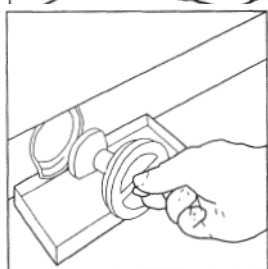

BEFORE CALLING THE TECNICAL SERVICE CENTRE

Check if plug is inserted

Check that power is available

Check that the door is properly closed

Check that the water tap is open

Check that the water supply hose and water drain hose are not blocked

NOTE: - if you have to call the service centre, specify the model of your washing machine and if necessary the Serial Number which is indicated on the rating plate on the back of the machine.

How to use your washing machine economically and ecologically.


Optimum load - Always try to use the washing machine at full load, as this will use less water, washing powder and energy than two smaller loads.

You want to use the pre-wash? - Only use the pre-wash for very dirty linen. If you don't use the pre-wash, you save from 5% to 15% in energy, washing powder, water and time.

Is a high temperature wash required? - To avoid high temperature washing, treat particularly dirty items with a stain remover or leave the worst stains to soak beforehand. You will save energy in this way.

FUNCTIONS AND PREPARATION FOR WASHING

Detergent dispenser

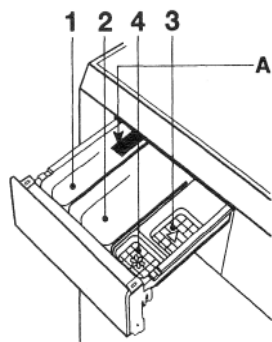

The detergent dispenser is divided into four compartments

1. Pour washing detergent in this compartment for the prewash cycle (MAX 45 grams).
2. Washing detergent in this compartment for the wash cycle (MAX 130 grams).
3. Pour bleaching liquid into this compartment following the advice on the packing (do not exceed in quantity over the filter grid)
4. Pour softener into this compartment following the advice on the packing (max 60 ml - do not exceed in quantity over the filter grid)


Close the dispenser after the detergent compartments have been filled. It is recommended to use non-foaming detergents and a softener in case of hard water.

Cleaning of the dispenser

It is advisable to clean the compartment regularly, as explained below: - press lever (A) and slide the compartment out of it's housing;

- Remove the siphon cover of compartment 3-4;
- Wash everything with running water;
- Replace the siphon cover in the compartment making sure it fits perfectly in its housing;
- Replace the compartment in its housing.

Door

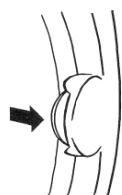

Use the handle to open the door.

During the wash cycle, a special safety device keeps the door locked. To open the door, turn off the machine using the ON-OFF switch and wait 2 minutes before turning the handle to open the door.

Sorting clothes



Each of the following groups should be sorted and washed separately according to the cycle specified in the cycle table:

- White and resistant colored fabrics
- Non-resistant colored fabrics
- Delicate fabrics (silk, polyester, nylon, etc.)
- Wool

This Washer Dryer is designed to WASH only, to DRY only or to WASH & DRY, for instructions on how to dry cloths, read the "Drying" section carefully.

Washing Operations

- sort the clothes
- Place them uniformly inside the drum
- Select the most suitable cycle for the fabrics (see wash cycle table)
- Set the cycle by following the instructions in the "control panel" section and turn on the machine by pushing the ON/OFF button.

WARNING: Set the cycle only when the machine is off. - Always turn the control dial clockwise. If you pass the desired position, make a complete turn and reset the dial to the exact position.

FUNCTIONS AND PREPARATION FOR WASHING & DRYING

The clothes are dried by a flow of warm air made to circulate inside the drum by a fan, which gradually removes the damp from the clothes.

This steam then condenses inside the machine when it comes into contact with the cold water.

This is the reason why the water tap must remain on and the draining pipe must be positioned correctly during the drying cycle.

To obtain the best results, spin-dry the clothes before putting them in the machine. The smaller the amount of water in the clothes, the less time it will take to dry them and the lower the consumption of electricity will be.


Warnings: Always use the drying cycle best suited to the fabric to be dried.

Only dry articles washed with water in the machine.

The following articles must not be dried in the machine:

- Clothes that have been dry-cleaned or cleaned with chemical products
- Wool or wool mixture clothes that shrink in hot water
- Extremely delicate fabrics, such as silk and synthetic curtains
- Articles made of foam rubber
- Articles made of glass fibre
- Materials that tend to fray, for example, woolen bows, felt or worn carpets.

Before any drying cycle may be executed, the following four conditions must be respected:

- a) The timer is set in the specific drying position indicated by the symbol 
- b) The timer is set with a drying time selected in its sector according to the fabric to be dried
- c) The "half-load/drying" button is pressed
- d) There is no water in the drum.

Procedure for Executing the Drying Cycle Only

- Turn the timer control clockwise until the reference mark is aligned with either of the two drying symbols indicated by W
- Turn the drying timer control clockwise until the reference mark is aligned with the selected drying time. (The "drying cycle" table contains instructions on how to choose the times, according to your machine's spin-drying speed, the fabric to be dried and the degree of dryness)
- Press the "half-load/drying" key (The maximum amount that can be dried is 2.5 kg of dry cotton clothes)
- Press the on/off key to switch on the machine.

Procedure for Executing the Washing and Manual Drying Cycle


If you wish to dry the clothes after washing a load of more than 2.5 kg, at the end of the wash cycle, divide it into 2 roughly equal loads and proceed as for the drying cycle only, drying one load at a time.

Procedure for Executing the Washing and Automatic Drying Cycle

Having loaded the machine with a maximum of 2.5 kg of dry cotton clothes and set one of the cotton washing cycles (cycles 1, 2, 3, 4, 5, 6 or 7), the washing cycle can be run and followed automatically by the drying cycle, as follows:

- Turn the timer control clockwise until the reference mark is aligned with the desired washing cycle, selecting it from the "cotton and linen cycles" table.
- Turn the drying timer control clockwise until the reference mark is aligned with the selected drying time. (The "drying program" table contains instructions on how to choose the times, according to your machine's spin-drying speed, the fabric to be dried and the degree of dryness)
- Press the "half-load/drying" key (The maximum amount that can be dried is 2.5 kg of dry cotton clothes)
- Press the on/off key to switch on the machine.

CONTROL PANEL

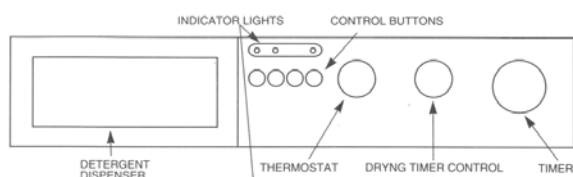

To become familiar with your machine functions, compare the symbols on the control panel with those described below.

ON/OFF



 
By pressing this button the machine turns on and executes the set wash cycle. It is used to turn the Washer Dryer on and off.

POWER INDICATOR



When lit, it indicates that the washing machine is electrically energized.

HALF LOAD



This key has two functions:

It reduces the amount of water used in the wash and rinse cycles, thus providing a considerable saving in the consumption of water, electricity & washing powder. Use in cotton & linen cycles for washing a limited amount of dry clothes (MAX 2.5 kg).

DRYING: It must always be pressed for the drying cycle to be executed.

DRYING INDICATOR LED



It lights up during the execution of a drying cycle.

STOP WITH WATER IN THE TANK



Can be used on the wool & delicate cycle.

The machine stops before draining the water, leaving the cloths to soak. To drain the water and execute a short spin-dry cycle, release the key.

To drain water only, turn the timer control to the drainage cycle (see cycle table).

Always set the program with the machine switched off.

In both cases the machine ends the cycle automatically.

SPIN SELECTION BUTTON




By pushing this button (according to the model type) the machine will perform the final spin at the maximum spin speed setting (i.e. **850 -1000-1200-1300-1400**). It is used for resistant fabrics so that there will be less water in the wash at the end of the spin cycle.

SPINNING INDICATOR LIGHT

850/1000
1200

When lit it indicates that the final spin at the maximum rotation speed has been selected.


TIMER DIAL

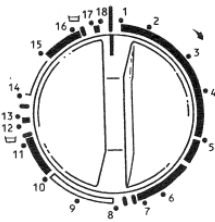

Used to select the wash cycles and to display them during operation. To select the cycles, turn the dial clockwise until the mark coincides with the selected cycle.

WARNING: Do not turn the timer dial while the machine is energized. Do not turn the timer dial counterclockwise.


THERMOSTAT DIAL

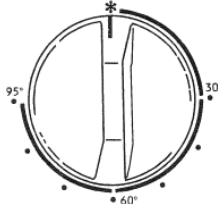

To set the temperature, turn the dial until the mark coincides with the selected temperature. It is used to regulate the washing temperature from 30°C to 95°C based on the selected wash cycle and the type of fabrics to be washed. It is recommended to follow the wash cycle table. By turning the dial to this symbol

the machine will perform a cold wash cycle, which is particularly indicated for delicate temperature-sensitive fabrics.

DRYING TIMER CONTROL

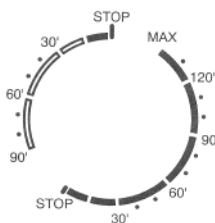


Enables you to select the drying time and temperature. When set on the right-hand side, the drying cycle will be executed at a high temperature with a maximum programmable temperature of over 130 min (for drying cotton and linen) while, when set on the left, the drying cycle will be executed at a low temperature with a maximum time of 90 minutes (for drying synthetic and delicate fabrics).

To set the drying timer, turn the control clockwise so that the reference mark is aligned with the selected drying time (The "drying program" table contains instructions on how to choose the times, according to your machine's spin-drying speed, the fabric to be dried and the degree of dryness)

WARNING: -

Do not turn the timer control anticlockwise.

DOOR OPENING KNOB

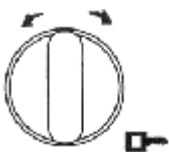

On the models where this function is provided, the door can be opened simply by turning the knob either to the right or to the left.

WARNING!

If the washer-dryer is not used for a long period of time, the door may not open spontaneously the first time when the handle is turned. In this case, turn the handle and pull the door at the same time.

COTTON AND LINEN CYCLES

Cycles Description		Type of clothing	Trays to be used	Thermostat Position	Wash cycle Description
1	Very dirty	To wash resistant fabrics and clothes	1-2-(3-4)	40°-95°	Prewash/Wash from 40°C to 95°C - Rinse - Intermediate and final spin
2	Dirty	To wash resistant fabrics and clothes	2-(3-4)	*40°-95°	Wash from 40°C to 95°C - Rinse - Intermediate and final spin
3	Slightly dirty	To wash resistant fabrics and clothes	2-(3-4)	40°-60°	Wash from 40°C to 60°C - Rinse - Intermediate and final spin
4	Rapid	To wash resistant fabrics and clothes	2-(4)	* -40°	Wash from * to 40°C Rinse - Intermediate and final spin
5	Rinse - Bleaching	To rinse resistant fabrics and clothes	(3-4)		Rinse - Intermediate and final spin
6	Softener	To soften resistant fabrics and clothes	4		Last rinse - Intermediate and final spin
7	Spin dry				Final spin

WASH CYCLES FOR SYNTHETIC AND MIXED FABRICS

8	Dirty	To wash synthetic and delicate Fabrics and clothes	2-(4)	40°-60°	Wash from 40°C to 60°C - Rinse - Stop with water in drum
9	Slightly dirty	To wash synthetic and delicate fabrics and clothes	2-(4)	* -40°	Wash from * to 40°C - Rinse - Stop with water in drum
10	Rinse	To rinse synthetic and delicate fabrics and clothes	(4)		Rinse - Stop with water in drum
11	Softener	To soften synthetic and delicate fabrics and clothes	4		Last rinse - Stop with water in drum
12	Delicate spin				Delicate spin dry
13	Drain water	To drain water without spin dry.			Drain water with slow drum spinning.

WOOL CYCLES

Cycles Description		Type of clothing	Trays to be used	Thermostat position	Wash cycle description
14	Wool	To wash fabrics and clothes that require slow drum spinning	2-(4)	* -40°	Wash from * to 40°C - Rinse - Stop with water in drum
15	Rinse	To rinse fabrics and clothes that require slow drum spinning	(4)		Rinse - Stop with water in drum
16	Softener	To soften fabrics and clothes that require slow drum spinning	4		Last rinse - Stop with water in drum
17	Spin-dry wool				Delicate spin
18	Drain	To drain water without any drum spinning			Water drainage without drum spinning

* EN 60456 Program 2/60°C

DRYING CYCLE TABLE

Spin-drying speed revs/min		850	850	1000	1000	1200	1200
Type of fabric	Quantity kg	Wardrobe dry min.	Iron damp min.	Wardrobe dry min.	Iron damp min.	Wardrobe dry min.	Iron damp min.
Cotton and linen	2.5	130 - 120	100 - 90	120 - 110	90 - 80	100 - 90	70 - 60
Cotton and linen	1.5	110 - 100	90 - 80	100 - 90	80 - 70	80 - 70	60 - 50
Spin-drying speed revs/min		650		850		800	
Synthetic and delicate	1.5	70 - 60		70 - 60		70 - 60	
Synthetic and delicate	1	60 - 50		60 - 50		60 - 50	


FITTING DÉCOR DOOR

Make holes on the wooden door according to the instructions enclosed with the machine.

- Take hinges (A) out of the bag and fix them to the door.
- Take jack (B), its support (C) and fix one to the other by means of screws (G).
- Install hinges (A), jack (B) and separator (E) to the door.
- Fix stopping hook (D) to front panel of the washing machine by means of screws (F).
- Insert caps (H) into the holes, as shown in the figure.
- Make holes into the base and fix magnets (L).

DOOR OPENING REVERSAL

To open the door from left to right, follow the instructions by turning the position of the holes. If the machine is to be fitted underneath a work surface and the distance that the appliance needs to be raised is greater than 10mm, then a solid one-piece baseboard should be used.

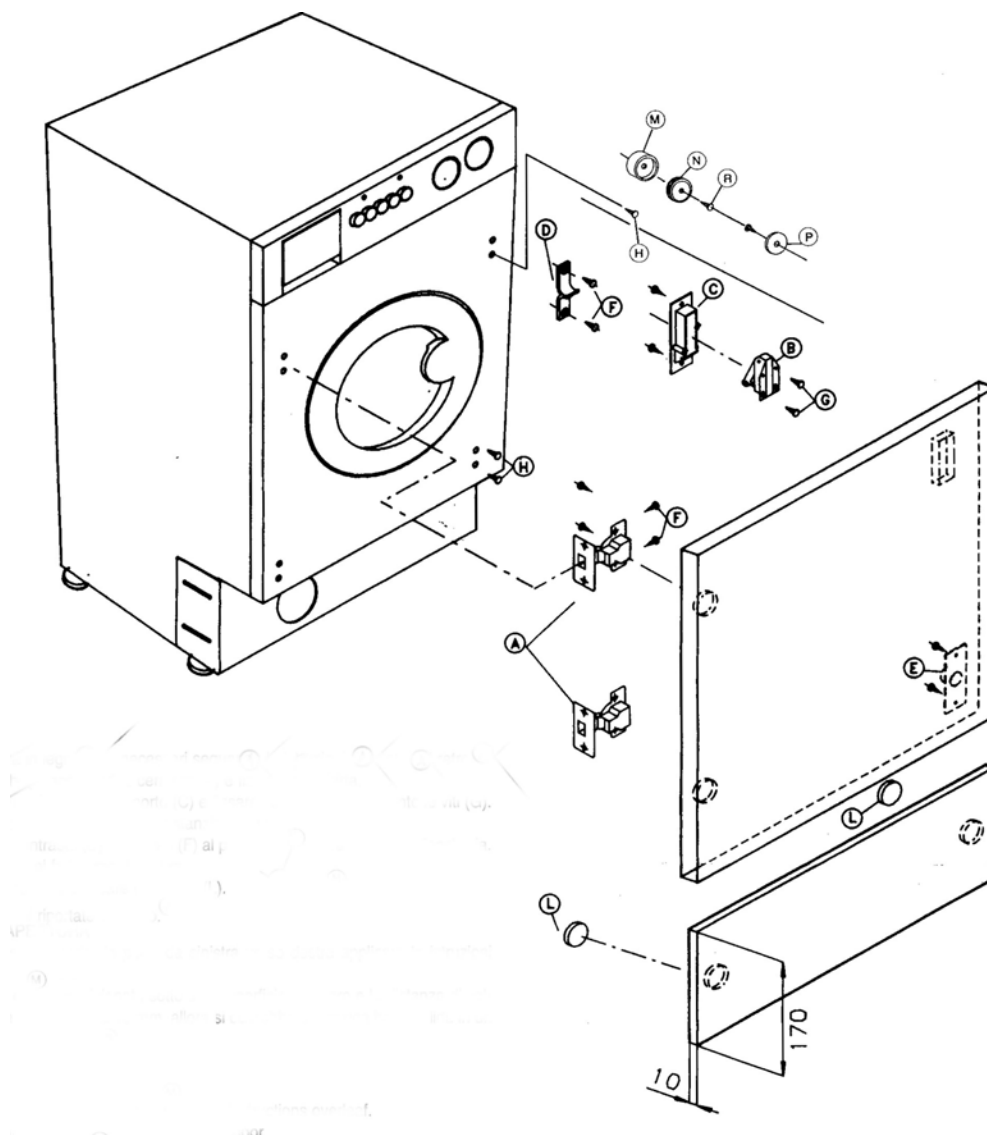

WASHING MACHINE UPPER LEVEL

