



C2500SS

Caple gas/gas single oven
Stainless Steel



INSTRUCTION MANUAL

Dear customer,

We thank you and congratulate you on your choice.

THE MANUFACTURER

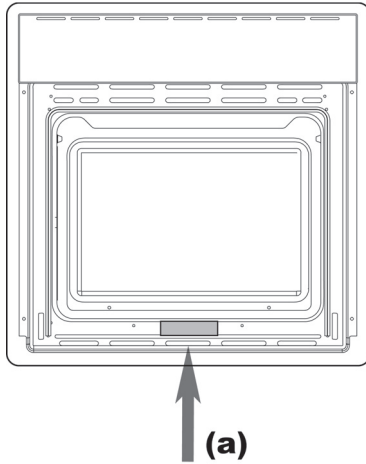


Fig. 1

!! IMPORTANT !!



The appliance must be connected by qualified technician in accordance with the applicable regulations. The data plate (a) of the oven is still visible after the appliance has been installed. This plate, which is visible when the oven door is open, contains all the identification data of the appliance, as well the type of gas and service pressure for which it has been calibrated. Follow the instructions and suggestions carefully to ensure the safe and proper use of this product.

CONTENTS

INSTRUCTIONS FOR THE INSTALLER (PAG. 4)

INSTRUCTIONS FOR INSTALLATION OF THE APPLIANCE	PAG. 4
POSITIONING	4
VENTILATION	4
GAS CONNECTION	5
RIGID PIPE CONNECTION	5
CONVERSION TO A DIFFERENT TYPE OF GAS	6
NOZZLE TABLE	6
ADJUSTMENT OF THE MINIMUM SETTING FOLLOWING CONVERSION TO A DIFFERENT GAS TYPE	7
FLUSH FITTING	8
ELECTRICAL CONNECTIONS	9

INSTRUCTIONS FOR THE USER (PAG. 10)


THE FIRST TIME YOU USE THE OVEN	PAG. 10
SELF-CLEANING CATALYTIC PANELS	11
DESCRIPTION OF THE FRONT CONTROL PANEL	
- GAS OVEN WITH ELECTRIC GRILL	12
- OVEN TEMPERATURE CONTROL	12
- ELECTRIC GRILL	12
- MECHANICAL MINUTE TIMER	13
DESCRIPTION OF THE FRONT CONTROL PANEL	
- GAS OVEN WITH GAS GRILL	14
- OVEN TEMPERATURE CONTROL	14
- GAS GRILL	15
- OVEN LIGHT- SPIT ROASTER	15
COOKING IN THE OVEN	16
REMOVAL OF THE BURNER COVER PLATE	17
REPLACING THE OVEN LIGHT	17
REMOVING THE OVEN DOOR	18
RESPECT FOR THE ENVIRONMENT	18

INSTRUCTIONS FOR THE INSTALLER

INSTRUCTIONS FOR INSTALLATION OF THE APPLIANCE (positioning and ventilation requirements)


The regulations covering the installation, maintenance and operation of gas appliances for domestic use are applicable regulations.

An extract of these regulations appears below. For all indications not covered, refer to the above-mentioned regulations.

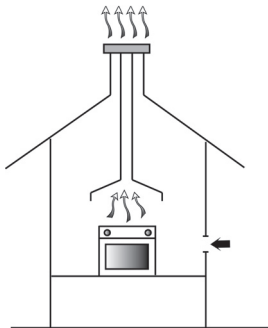

POSITIONING:

(Fig. 2) the products of combustion from cooking appliances must always be discharged into suitable extractor hoods, which must be connected to a chimney, flue or vented directly to outside the building. In situations where it is not possible to install an extractor hood, an electric extractor fan installed in a window or external wall may be used, provided that all requirements of the ventilation regulations are satisfied; the fan should switch on whenever the appliance is in operation.

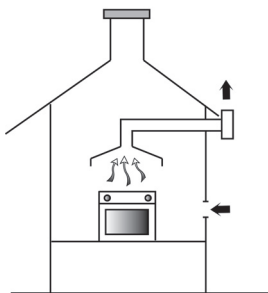

VENTILATION:

(Fig. 2) it is essential that the room in which gas appliances are installed is adequately ventilated to ensure that all the appliances receive the required quantity of fresh air for combustion.

To ensure an adequate air flow, it may be necessary to create apertures in accordance with the following requirements:

- a) with cross-sectional area of 6 cm^2 per kW with a minimum cross-sectional area of 100 cm^2 (these apertures may also be created by increasing the gap between the bottom of doors and the floor);
- b) situated at the bottom of an external wall, preferably opposite the wall on which combustion products are extracted ;
- c) the positions of the apertures should be selected so as to avoid the possibility of their being obstructed and, if made in external walls, they must be protected with grilles, metal meshes, etc. installed on the outside face of the wall.

If an electric extractor fan for the removal of foul air is installed in the room, the apertures provided for air changes must allow a ventilation rate of at least $35 \text{ m}^3/\text{h}$ per kW of power installed.

Fig. 2

GAS CONNECTION

The oven is designed to operate with both natural gas (methane) and liquid gas (LPG), and can be easily converted from one type to another following the instructions given in the relative section of this booklet. Connection to the gas supply must be carried out by qualified technicians and in conformance with the requirements.

If the appliance is to operate with gas bottles (LPG), a pressure regulator conforming to the requirements.

RIGID PIPE CONNECTION

Connection to the mains gas supply may be made via a rigid pipe firmly attached to the fitting "G" (Fig. 3), or via a flexible stainless steel continuous-wall hose, conforming with a maximum length of 2 metres.

The fitting "G" and seal "C" are supplied with the appliance, and comply with standards.

Important:

Use two wrenches to turn the fitting "G" to the required position. When the fitting is in the desired position, firmly tighten nut "A" (Fig. 3).

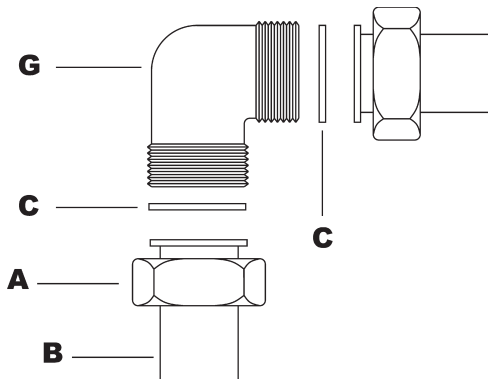


Fig. 3

WARNING - IMPORTANT: after connecting the appliance to the gas supply (or to the liquid gas bottles) CHECK FOR LEAKS at the union using a solution of soapy water (never use a naked flame).

CONVERSION TO A DIFFERENT TYPE OF GAS

Before converting the appliance for operation with a different gas type, check which type of gas it is currently set to operate with (adhesive label (Figure 1) on appliance). For the correct nozzle diameter, refer to the relative table in this booklet.

- Conversion procedure

- * Disconnect the electrical power supply to the appliance;
- * Change the main oven nozzle:
 - 1) Remove the burner cover plate (see REMOVAL OF THE BURNER COVER PLATE page 42).
 - 2) Remove the screw securing the oven burner and withdraw the burner from the support together with the heat sensor and the ignition spark plug. (Figure 5)
 - 3) Remove the nozzle using a 7 mm box wrench (Figure 6)
 - 4) Screw the new nozzle in fully (diameter in hundredths of millimetre stamped on the nozzle), taking care not to cross the thread.
 - 5) Replace the burner reversing the operations in step 2 above.
 - 6) Replace the cover plate.

Fig. 5


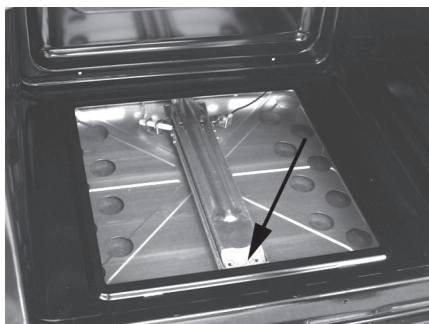


Fig. 6

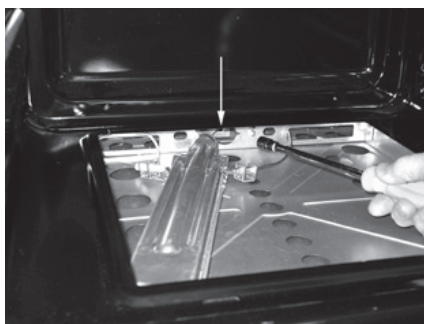

NOZZLE TABLE

The diameters in hundredths of millimetre are stamped on the nozzle.

Burner	kW rated load	Ø Nozzle bore in mm		
		G20 20 mbar	G30 50 mbar	G30 29 mbar
Oven burner	2,50	1,13	0,67	0,76
Grill burner	2,20	1,12	0,65	0,75

ADJUSTMENT OF THE MINIMUM SETTING FOLLOWING CONVERSION TO A DIFFERENT GAS TYPE:

1) Conversion from natural gas to LPG:

Ovens with stainless steel front

Turn the temperature control knob to the minimum position, then remove the knob. Insert a screwdriver through the aperture to engage the bypass screw "A" . Turn the screw fully to the right (see fig. 4).

Ovens with glass fronts

Remove the front by unscrewing the two ring nuts. Insert a screwdriver through the hole in the front wall of the oven and turn the screw A fully clockwise.

2) Conversion from LPG to natural gas:

Turn the oven temperature control knob to the "min" position and allow the appliance to warm up for about 10 minutes.

Then turn the bypass screw anticlockwise to obtain a low but stable flame. Replace the front.

After converting the appliance to a different type of gas, remember to change the data plate to one with the new data (gas type and pressure). (Fig. 1).

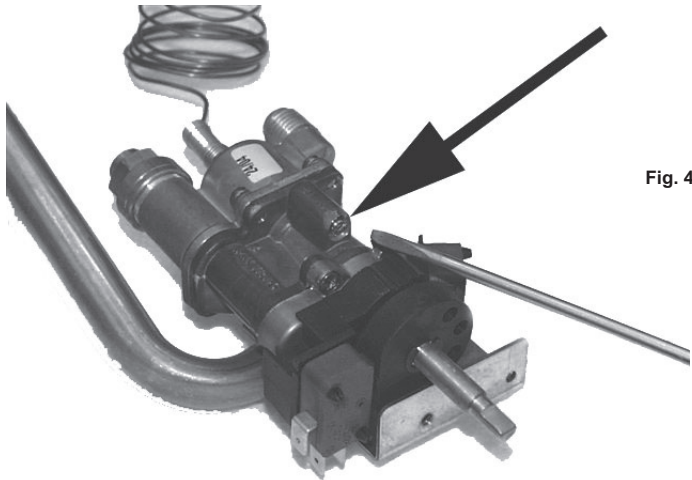


Fig. 4

FLUSH FITTING

The oven can be installed under a work top or in a cooking column. The dimensions of the housing for the oven are given in figure 7.

Make sure that surrounding materials are heat resistant. Align the oven centrally with respect to the side walls of the units surrounding it and fix it in place with the screws and Allen screws provided.

If a gas hob is to be installed in combination with the oven refer to the instructions supplied with the hob (figure 8).

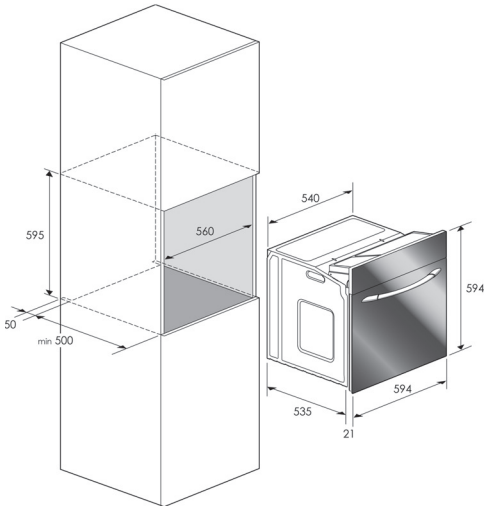


Fig. 7

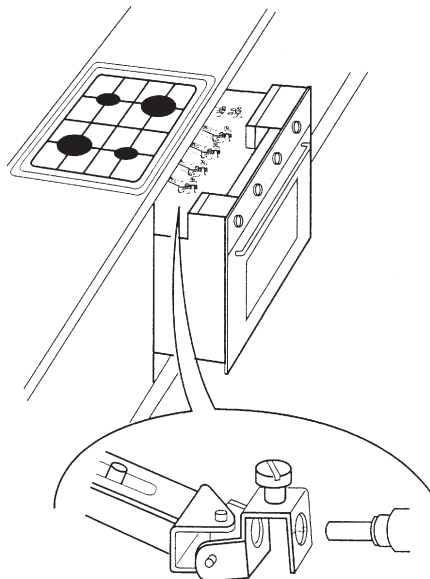
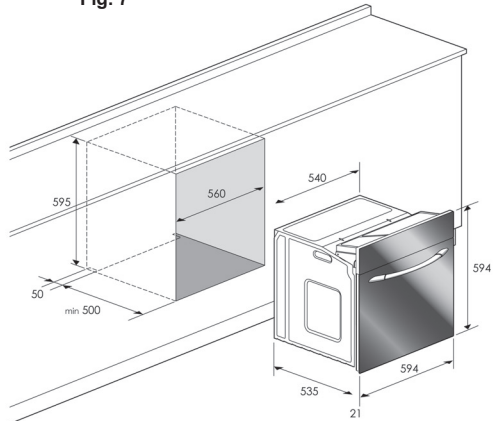


Fig. 8

ELECTRICAL CONNECTIONS

Before connecting the oven to the mains power supply, make sure that:

- The supply voltage corresponds to the specifications on the data plate on the front of the oven.
- The mains supply has an efficient earth (ground) connection complying with all applicable laws and regulations. Correct earthing (grounding) is a legal requirement. If the appliance is not pre-fitted with a power cable and/or plug, use only suitable cables and plugs capable of handling the power specified on the appliance's data plate and capable of resisting heat. The power cable should never reach a temperature 50° C above ambient temperature at any point along its length. If the appliance is to be connected directly to mains terminals, fit a switch with minimum aperture of 3 mm between the contacts. make sure that the switch is of sufficient capacity for the power specified on the appliance's data plate, and compliant with applicable regulations. The switch must not break the yellow-green earth wire. The socket or switch must be easily reachable with the oven fully installed.

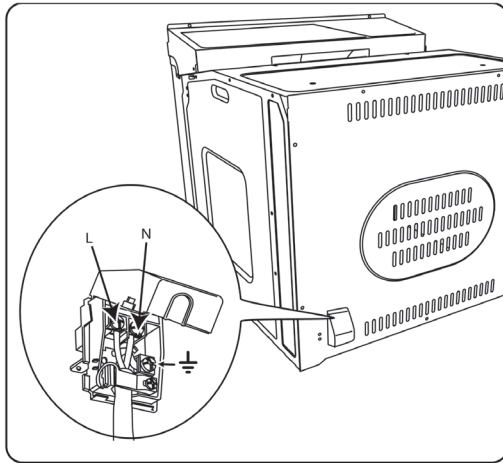


Fig. 9

* CABLE TYPES AND DIAMETERS

230V~ H05RRF 3 x 1 mm²

N.B. The manufacturer declines all responsibility for damage or injury if the above instructions and normal safety precautions are not respected.

INSTRUCTIONS FOR THE USER

THE FIRST TIME YOU USE THE OVEN

Clean the oven thoroughly with soapy water and rinse well. To remove the lateral frames from smooth-walled ovens, proceed as shown in the figure. Operate the oven for about 20 minutes at maximum temperature to burn off all traces of grease which might otherwise create unpleasant smells when cooking.

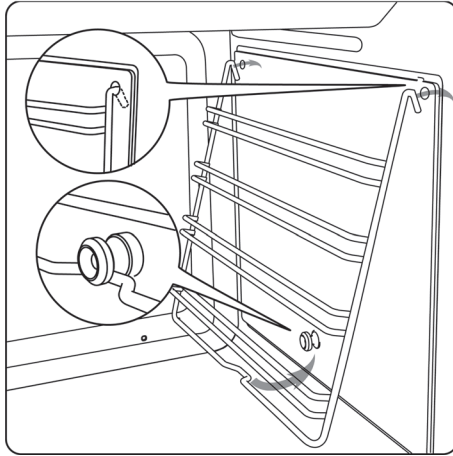


Fig. 10

Important:

As a safety precaution, before cleaning the oven, always disconnect the plug from the power socket or the power cable from the oven. Do not use acid or alkaline substances to clean the oven (lemon juice, vinegar, salt, tomatoes etc.). Do not use chlorine based products, acids or abrasive products to clean the painted surfaces of the oven.

SELF-CLEANING CATALYTIC PANELS

Our smooth walled ovens can be fitted with self-cleaning panels to cover the inside walls. These special panels are simply hooked on to the walls before the side frames are fitted. They are coated in a special, micro-porous catalytic enamel which oxidises and gradually vaporises splashes of grease and oil at cooking temperatures above 200° C.

If the oven is not clean after cooking fatty foods, operate the empty oven for 60 minutes (max.) at maximum temperature.

Never wash or clean self-cleaning panels with abrasive, acid, or alkaline products.

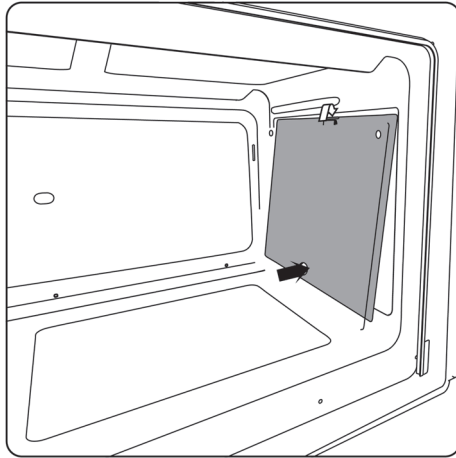


Fig. 11

DESCRIPTION OF THE FRONT CONTROL PANEL

GAS OVEN WITH ELECTRIC GRILL

CONTROLS (Fig. 12)

1. Gas oven temperature control
2. Grill, spit roaster and oven light knob
3. Gas oven indicator light
4. Mechanical timer
5. Grill indicator light



Fig. 12

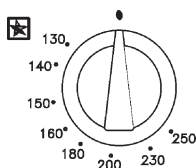


Fig. 13

OVEN TEMPERATURE CONTROL

The temperature control knob serves to set the desired oven temperature and is equipped with a safety valve. When the oven is in operation the green light is illuminated.

The minimum position corresponds to an oven temperature of 130°C. The control knob has stop in the minimum position.

The "max" position corresponds to an oven temperature of 250°C, and is obtained when the knob is turned fully anticlockwise.

To light the burner, push in the temperature control knob and turn it anticlockwise to the desired temperature.

Hold the knob pressed in for 5-10 seconds. The burner will be ignited electrically, and the safety valve temperature sensor will heat up thereby allowing gas to continue to flow to the burner.

Do not operate the ignition for longer than 15 seconds. If the burner fails to ignite, leave the door open for at least one minute, then try again.

If the electrical ignition fails to produce a spark, hold a lit taper or match near the burner inspection hole and press and hold the temperature control knob in the "max" position for 5 to 10 seconds.



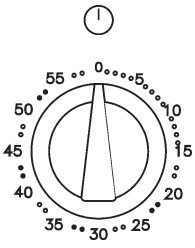


Fig. 14

ELECTRIC GRILL

Infrared grill: equipped with an energy regulator. The heat intensity of the grill can be set from 1 to MAX using the relative control knob (Fig. 14). When the grill is in operation, the grill indicator light and the oven interior light will be illuminated. To operate the spit roaster motor, turn the knob to the symbol  until you feel a click. Then turn the knob to desired power setting from 0 to 8.

WARNING: The grill will not operate when the oven is on.

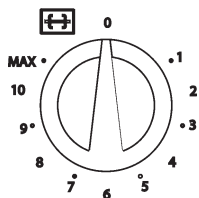

MECHANICAL MINUTE TIMER

The minute timer can be set to a maximum time of 60 minutes; it emits an alarm tone when the set time period has elapsed. The minute timer operates independently of the oven.

The timer knob (Fig. 15) must first be turned clockwise to the 60 minute position and then turned anti-clockwise to the desired time setting.

When the set time has elapsed, the alarm will sound. The alarm tone will stop automatically after a certain period.

Fig. 15

DESCRIPTION OF THE FRONT CONTROL PANEL

GAS OVEN WITH GAS GRILL

CONTROLS (Fig. 16)

1. Lower burner and gas grill temperature control knob
2. Oven and spit roaster control knob light
3. Gas oven indicator light
4. Mechanical timer
5. Electrical indicator light



Fig. 16 - Abb. 16 - Afb. 16

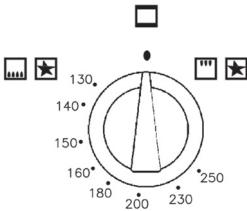


Fig. 17 - Abb. 17 - Afb. 17

OVEN TEMPERATURE CONTROL


The temperature control knob serves to set the desired oven temperature and is equipped with a safety valve. When the oven is in operation the green light is illuminated.

To turn on the bottom burner, push in the temperature control knob and turn it anticlockwise to the desired temperature.

The minimum position corresponds to an oven temperature of 130°C. The control knob has stop in the minimum position.

The maximum position corresponds to an oven temperature of 250°C, and is obtained when the knob is turned fully anticlockwise.

Hold the knob pressed in for 5-10 seconds. The burner will be ignited electrically, and the safety valve temperature sensor will heat up thereby allowing gas to continue to flow to the burner.

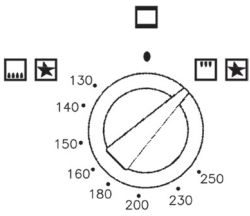

GAS GRILL

The gas grill must only be operated with oven door slightly open and the heat shield (supplied) inserted in the slots under the control panel.




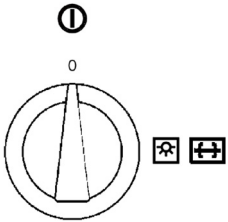
To turn on the grill, turn the knob clockwise to the position   and hold it pressed in for 5-10 seconds.

Fig. 18 - Abb. 18 - Afb. 18

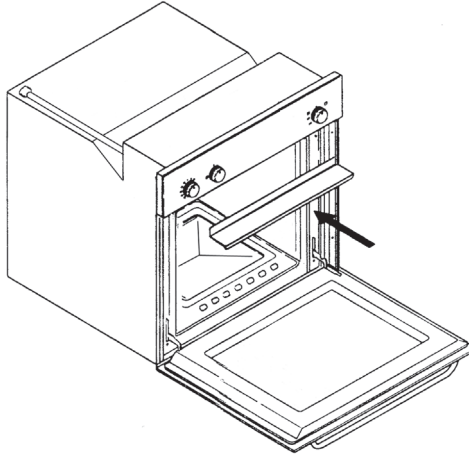

OVEN LIGHT - SPIT ROASTER

This knob is used to switch on the oven interior light and the spit roaster (on models so equipped).

Fig. 19 - Abb. 19 - Afb. 19

COOKING IN THE OVEN

With this cooking method, you can operate the oven in the normal way and follow the instructions in recipe books.

The food to be cooked should preferably be placed on the middle shelf of the oven.

MAIN COURSE	SHELF	TEMPERATURE (°C)	COOKING TIME (min)	PREHEAT
GENOESE SPONGE (SWISS ROLL)	4	210	15 - 20	Yes
SHORT PASTRY (BISCUITS)	5	200	10 - 12	Yes
DOUGH WITH RAISING AGENT (SCHIACCIATA)	4	200	25 - 30	Yes
SPONGE CAKE (SMALL PAPER PASTRY CASES)	4	190	20 - 25	Yes
LEAVENED DOUGH (STRUDEL)	4	180	40 - 50	Yes
PUFF PASTRY (TARTLETS)	4	190	20 - 30	Yes
SOUFFLÉ	4	180	35 - 40	Yes
SACHERTORTE	4	180	55 - 60	Yes
FRUIT PIE	2	160	160 - 180	Yes
CHOUX PASTRY	5	200	35 - 40	Yes
ROAST BEEF (APPROX. 1.5 KG)	2	200	90 - 120	Yes
ROAST PORK (APPROX. 1.5 KG)	2	200	100 - 120	Yes
PIZZA	2	190	20 - 25	Yes
BAKED FISH	4	180	50 - 60	Yes
BAKED VEGETABLES	4	170	30 - 40	Yes
POULTRY	4	190 - 200	60 - 70	Yes


Guideline values for cooking with the grill:

MAIN COURSE	SHELF	POSITION	COOKING TIME (min)	PREHEAT
STEAKS	5	10	10 - 15	--
CUTLET	5	10	15 - 25	--

REMOVAL OF THE BURNER COVER PLATE: (see fig. 20)

The burner cover plate is secured at the front by two tabs inserted in two slots; to remove the cover plate, raise the rear of the plate so that it pivots at the front and withdraw the tabs from the slots.

Fig. 16

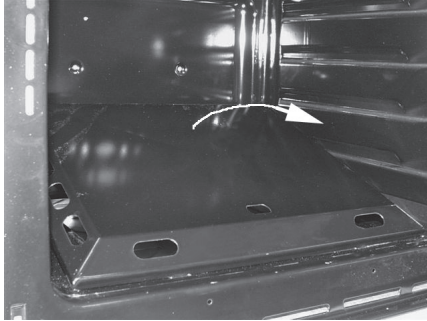

REPLACING THE OVEN LIGHT


IMPORTANT:

The oven light must have these precise features:

- a) it must be able to resist high temperatures (up to 300°C)
- b) power supply: see V/Hz indicated on data plate.
- c) power 25W.
- d) E 14 connection.

Before proceeding, disconnect the appliance from the main electricity supply.

- to prevent damage, place a tea cloth in the oven
- unscrew the glass cover of the light
- unscrew the old light bulb and replace it with the new one
- put back the glass cover and remove the tea cloth
- connect the appliance to the main electricity supply.

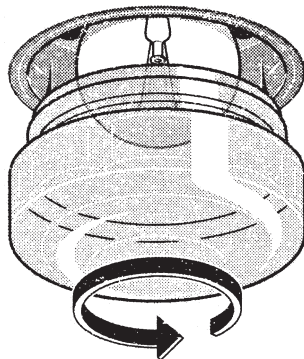

REMOVING THE OVEN DOOR

The oven door can be removed quickly and easily. To do so, proceed as follows:

- Open the door fully.
- Lift the two levers shown in fig. 21.
- Close the door as far as the first stop (caused by the raised levers).
- Lift the door upwards and outwards to remove it from its mountings.

To replace fit the door, fit the hinges in their mountings and lower the two levers.

Fig. 17


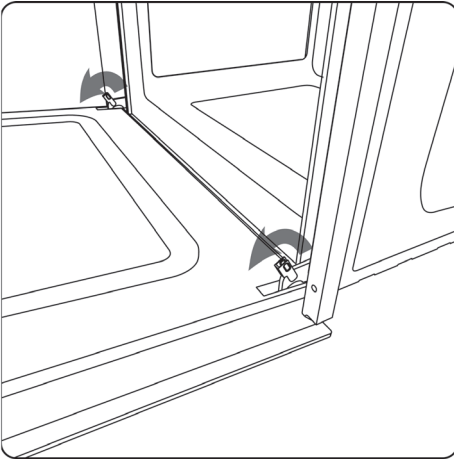


Fig. 18

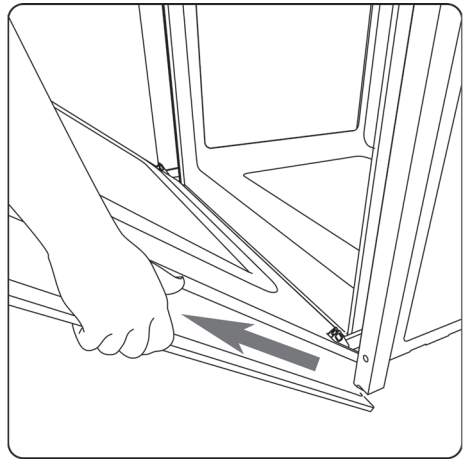

RESPECT FOR THE ENVIRONMENT

The documentation provided with this oven has been printed on chlorine free bleached paper or recycled paper to show respect for the environment.

The packaging has also been designed to avoid environmental impact. Packaging material is ecological and can be re-used or recycled.

By recycling the packaging, you will help save raw materials as well as reducing the bulk of domestic and industrial waste.

