 
 
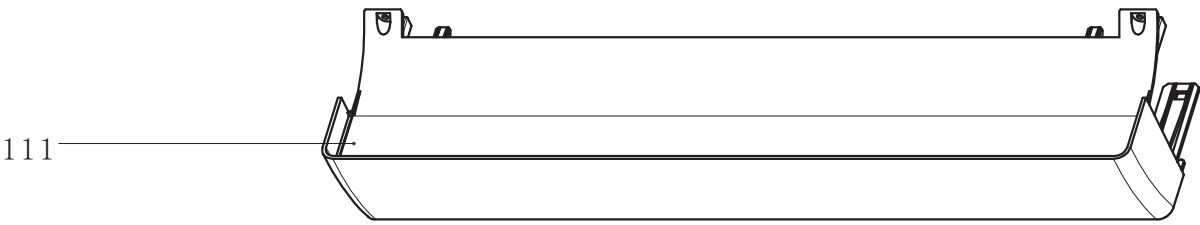 
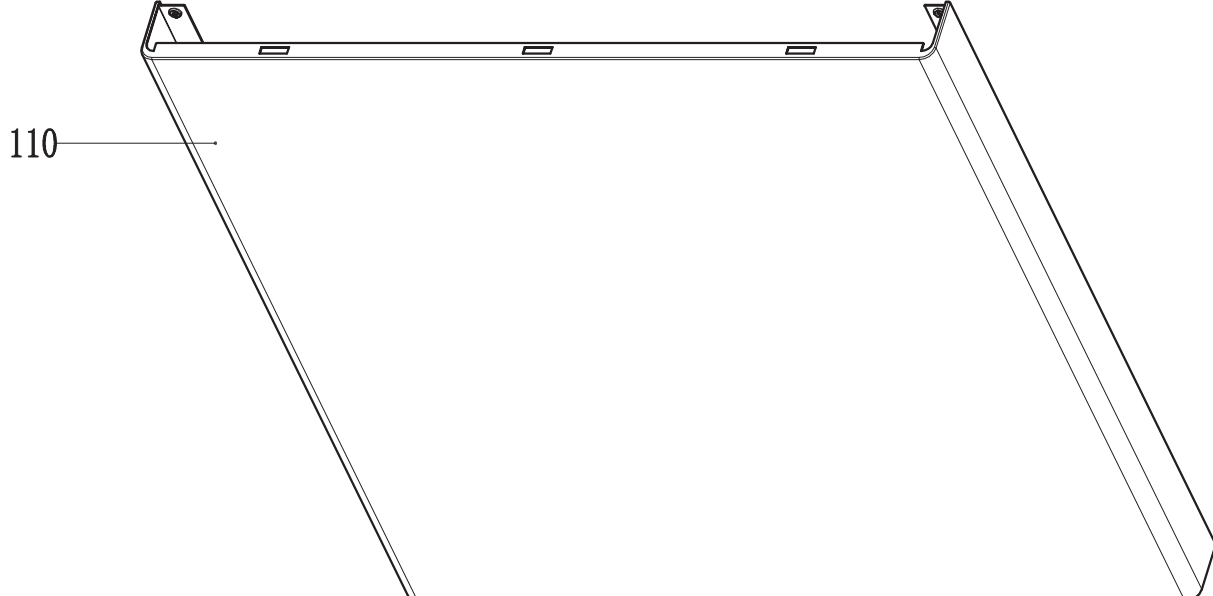 
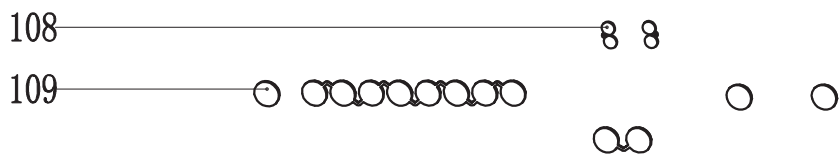 
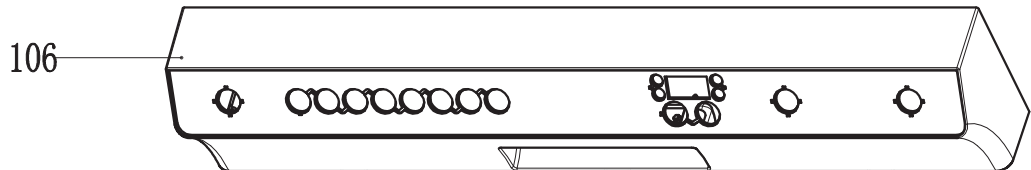 





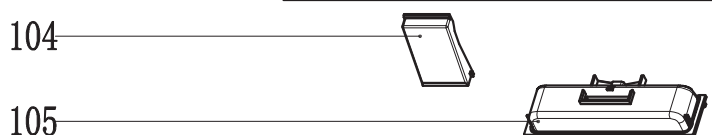



**DF630**


**Caple Freestanding Dishwasher**

       
**Technical information**

 


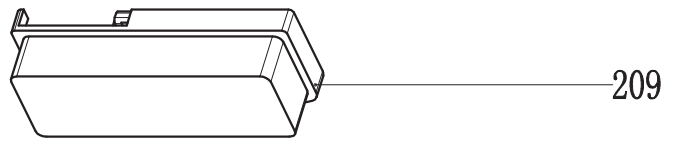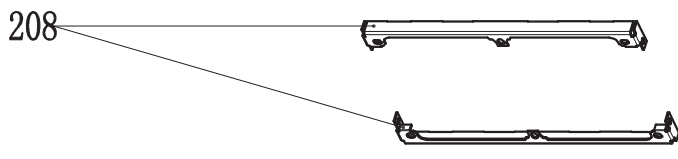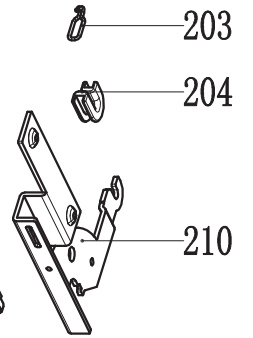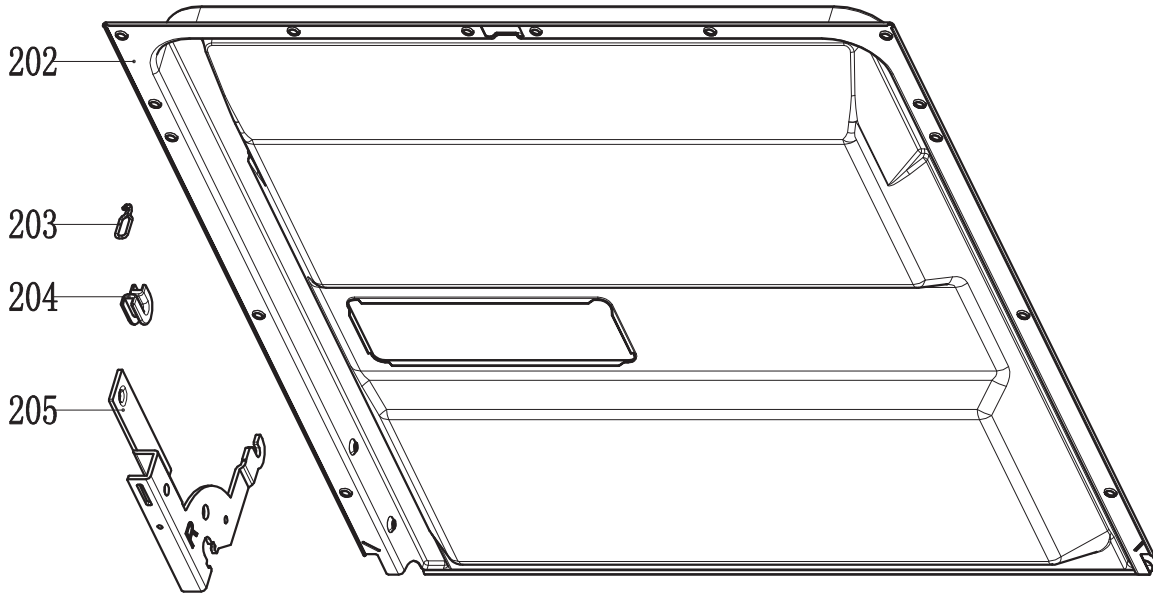



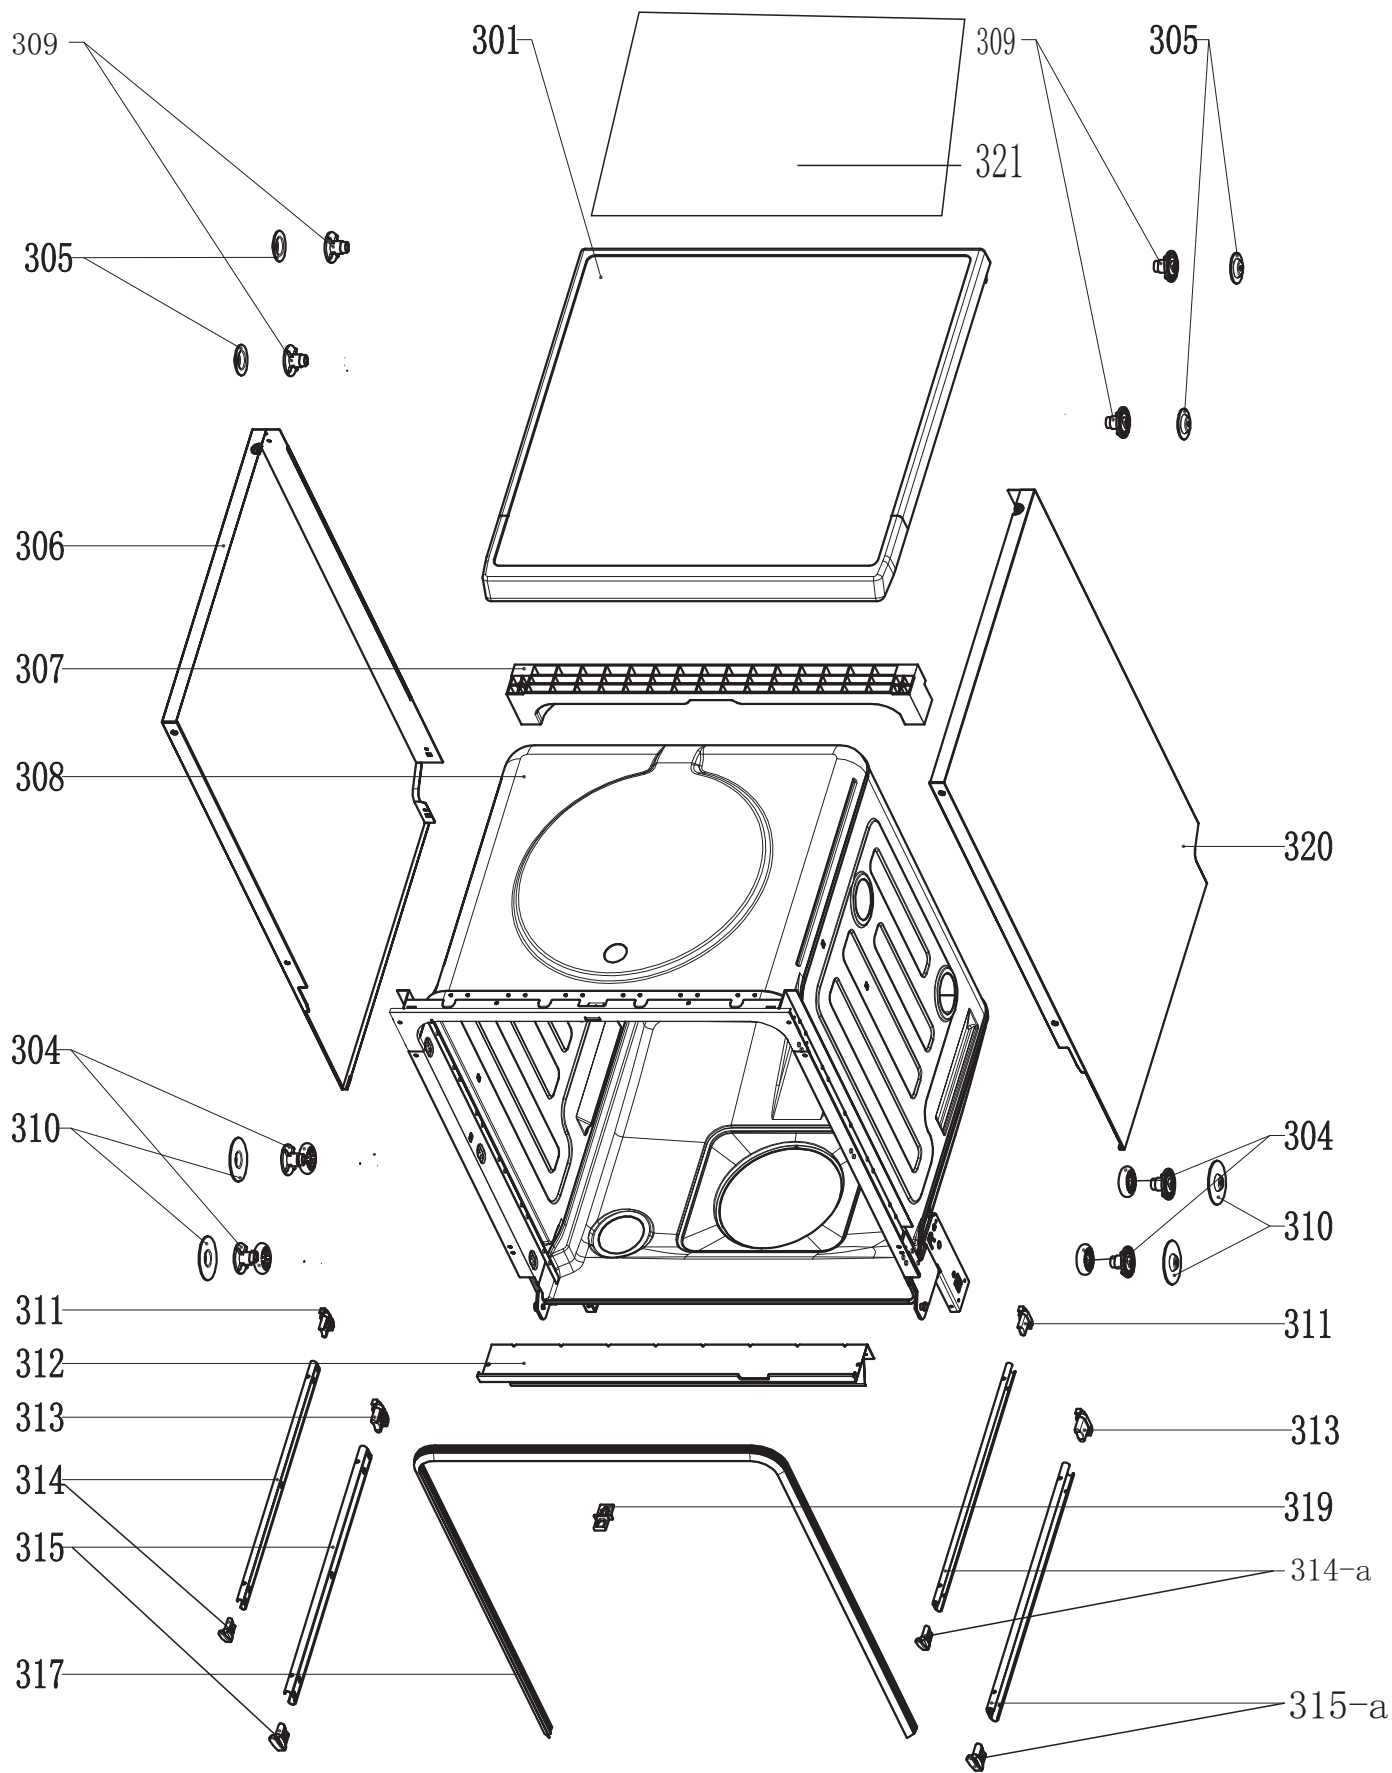


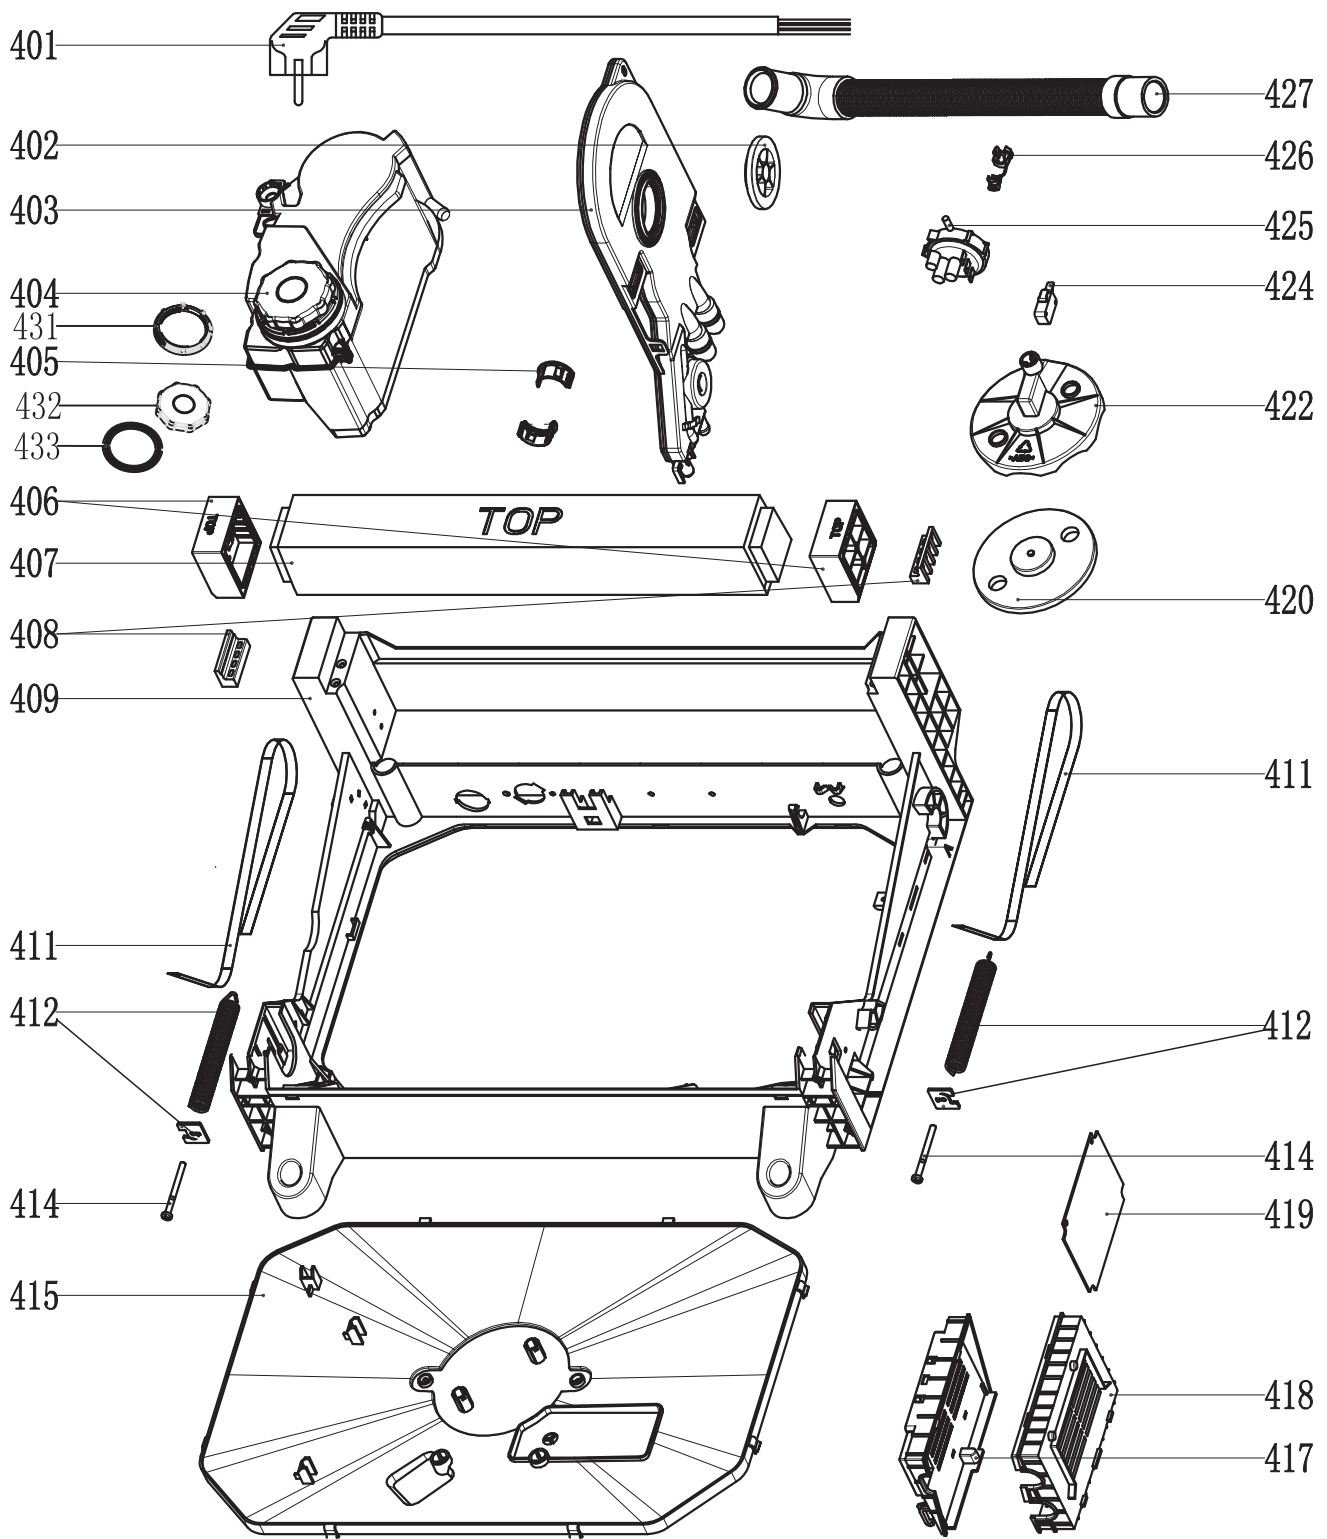

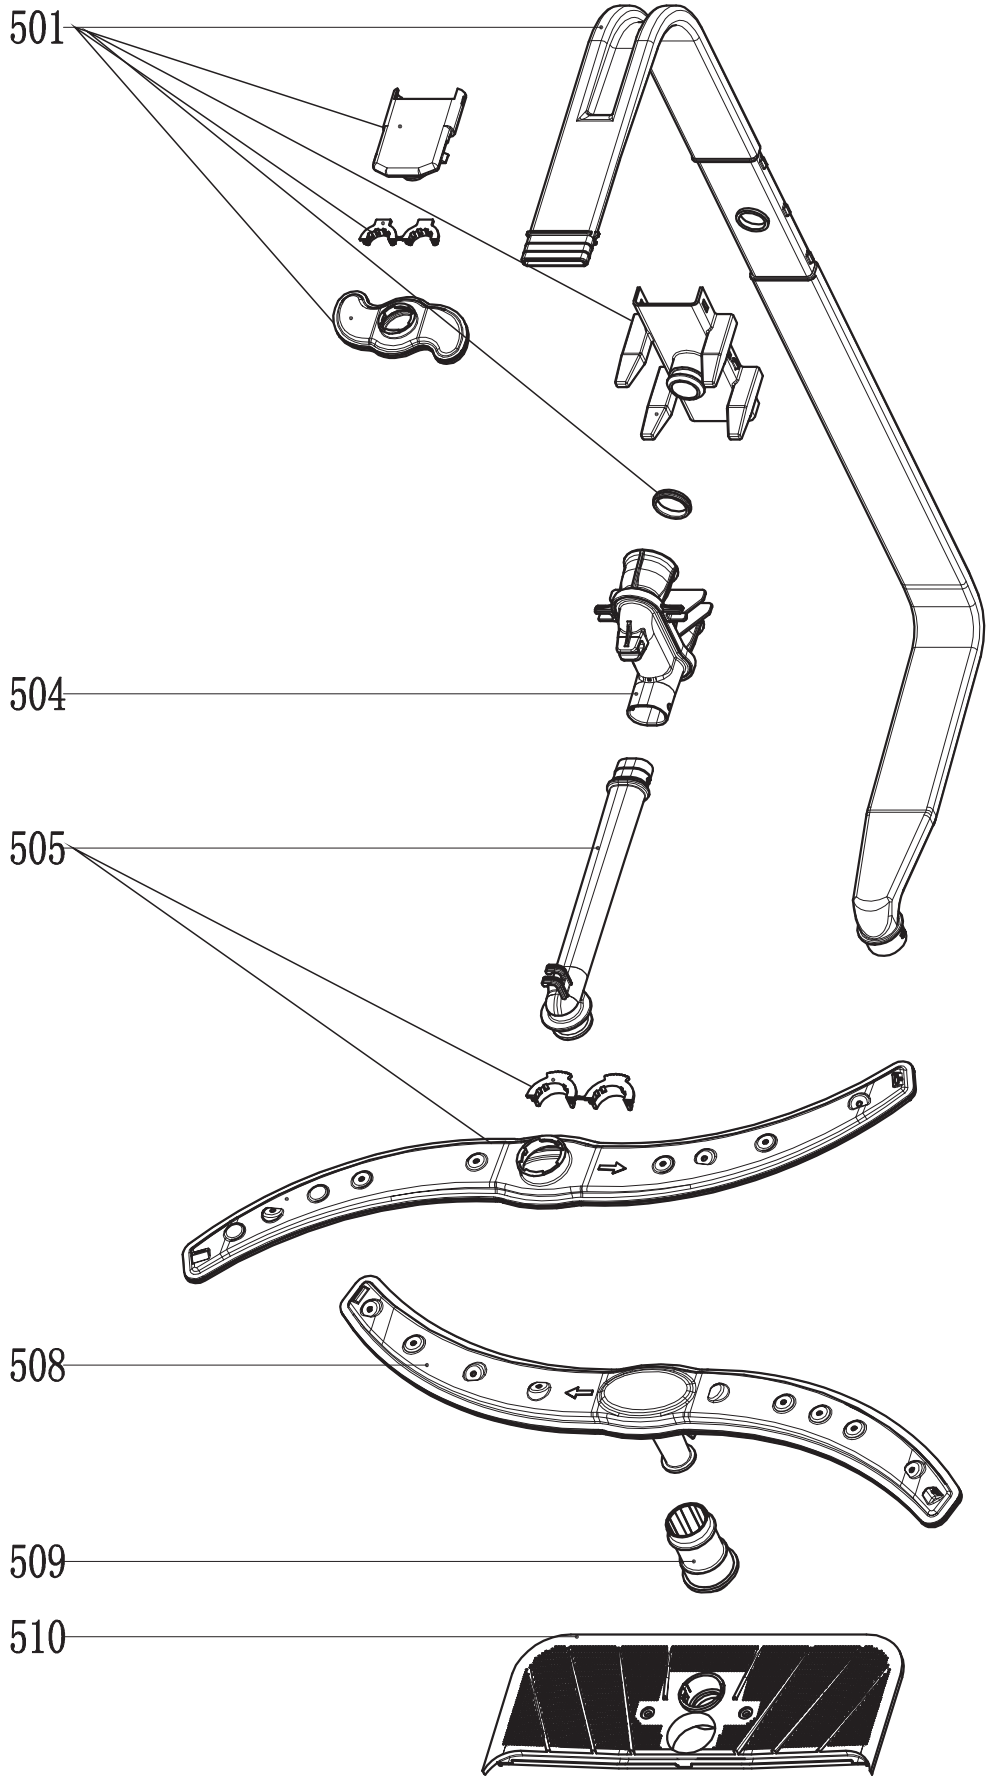

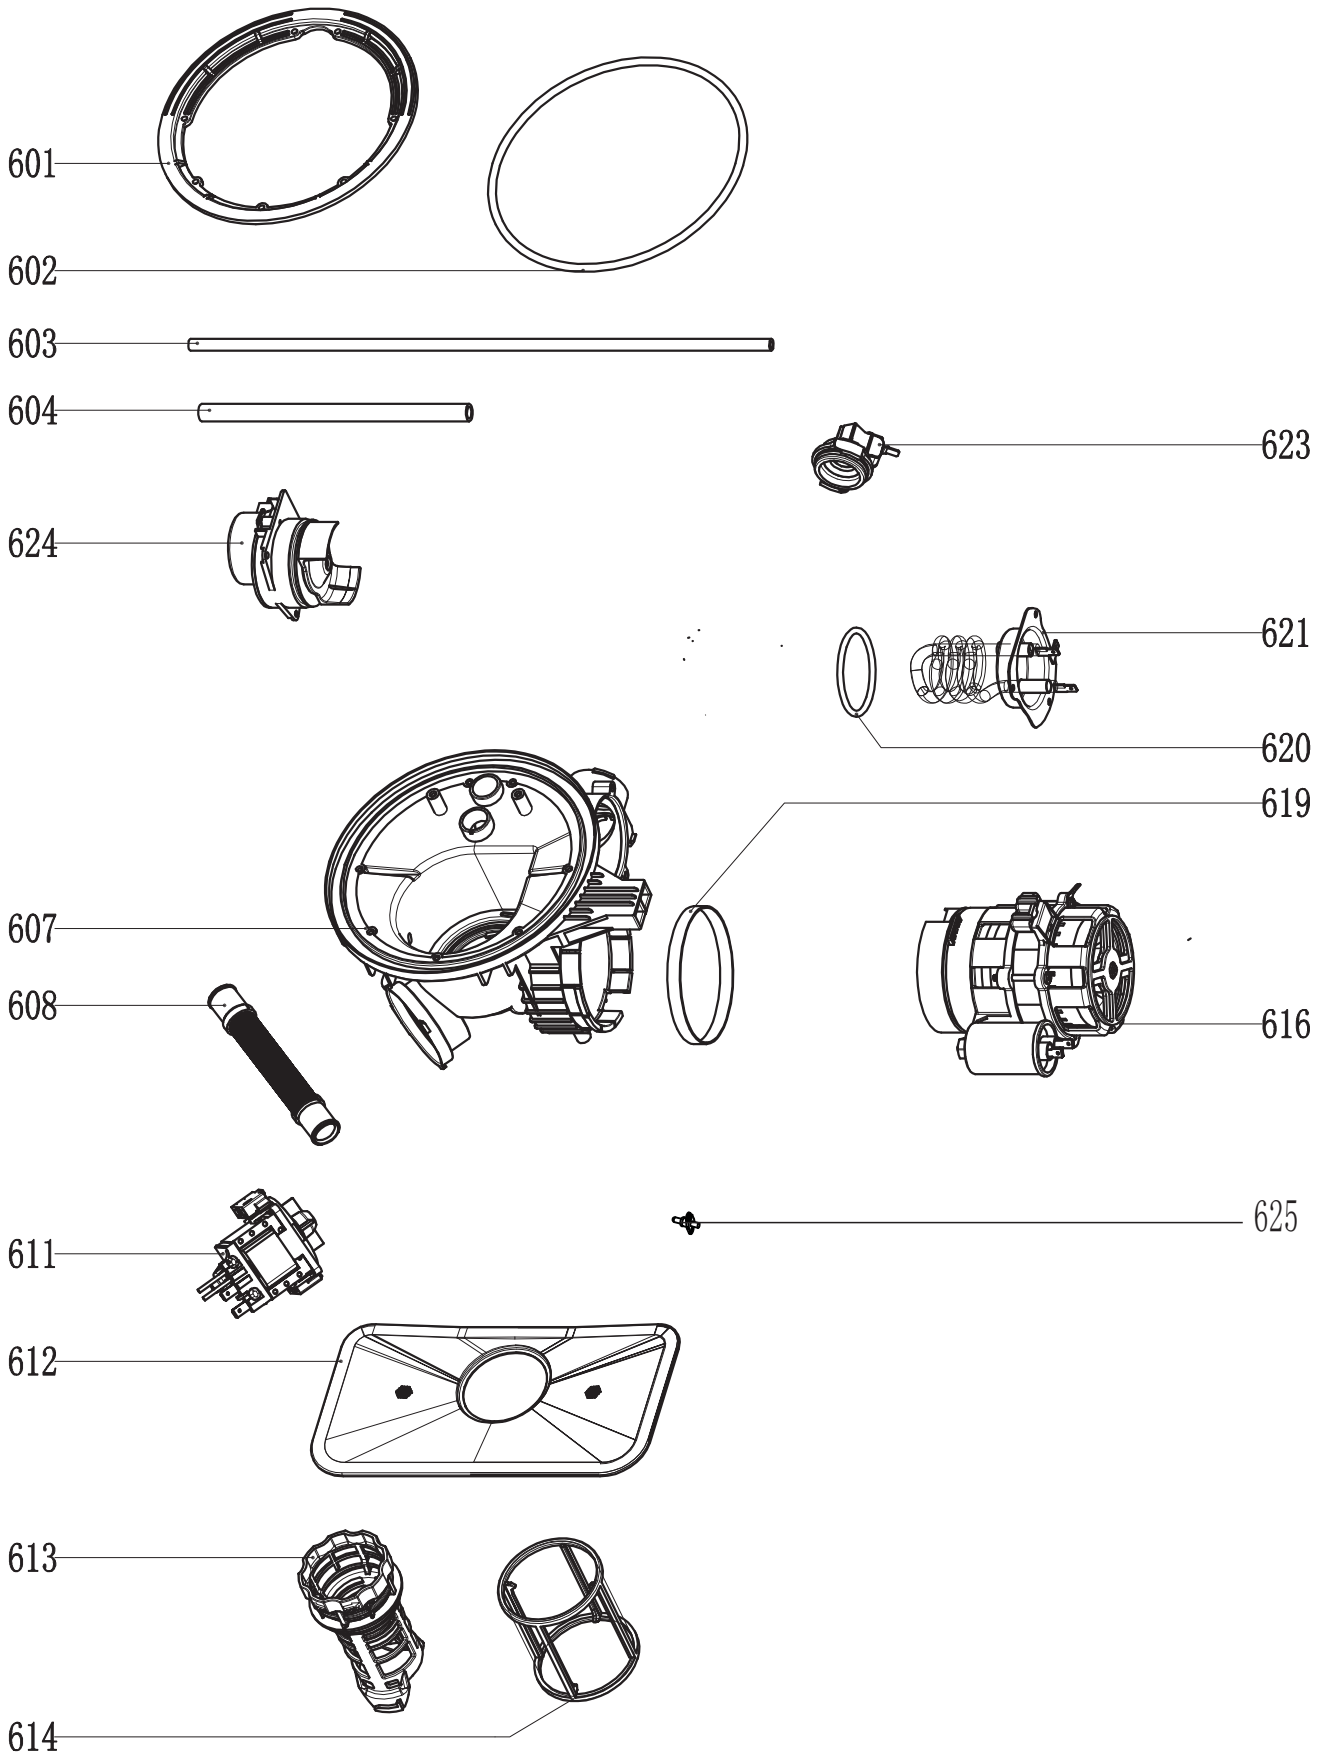


705

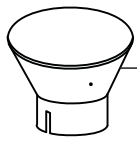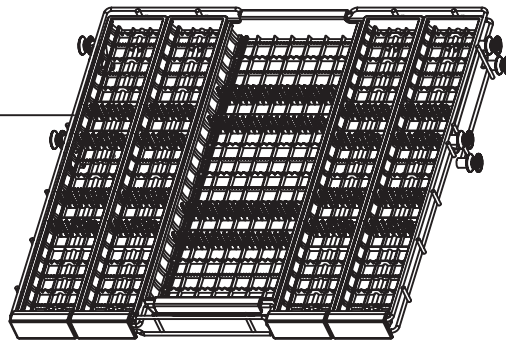   


712



 711

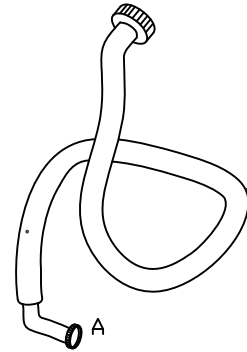

710

 


714


715

713

 706

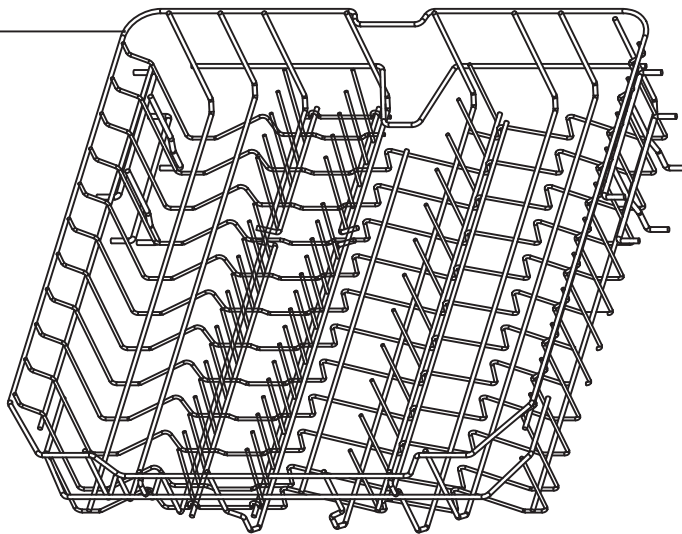

709

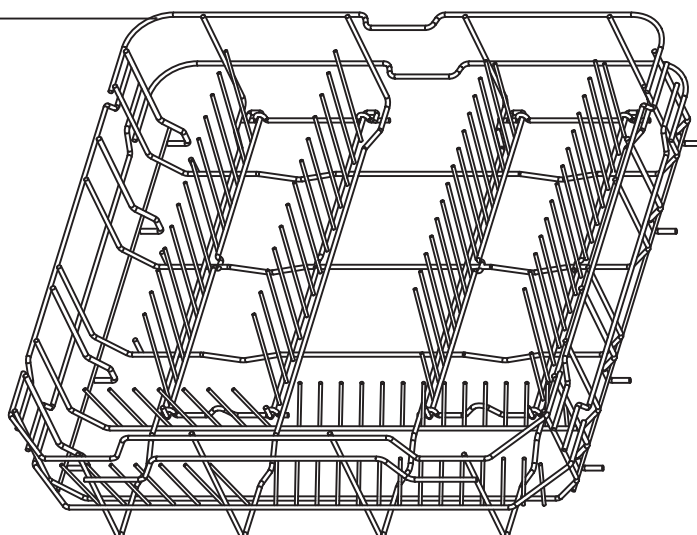 



## DF630 - Capele Freestanding Dishwasher

Item	Part Code	Description	Qty
101	673002400202	PCB box	1
103	673002400208	PCB cover	1
104	673000904001	Retaining box	1
105	673001890108	HANDLE COVER	1
106	673000450930	Control Panel	1
107	673002903311	Control panel film	1
108	673002801012	SCREEN cover	2
109	673002801003	top optical	1
110	672001804019	OUTER DOOR	1
111	673001100220	kick board	1
201	674010030017	DOOR SWICTH ASSEMBLY	1
202	672002200324	INNER DOOR	1
203	672002300037	FRICTION STRIP HOOKING	2
204	672002300049	FRICTION STRIP HOOKING clip tach	2
205	672001400059	LEFT HINGE	1
208	672001700002	DISPENSER BRACKET	2
209	674000800032	DISPENSER	1
210	672001400058	RIGHT HINGE	1
211	672001200061	HINGE join board	1
301	673000290131	TOP PANEL ASSEMBLY	1
304	672001700039	basket guider supporter	4
305	673001300552	basket guider supporting holder	4
306	672001602009	LEFT SIDE PANEL	1
307	673003100010	UPPER back support	1
309	673001400295	Cutlery shelf Rail support assembly	4
310	673001300555	basket guider supporting holder	4
311	673001300551	Cutlery shelf guider link stopper(back)	2
312	672002300035	anti-noise borad	1
313	673001300639	UPPER BASKET guider link stopper(back)	2
314	672001700023	SWORD FORK FRAME UPPER BASKET guider(Left)	1
315	672001700025	UPPER BASKET guider LEFT	1
317	673001700124	door seal GASKET	1
319	672001400068	DOOR LOCK HOOK	1
320	672001600542	RIGHT SIDE PANEL	1
321	673000102014	Back cover board	1
401	674000000186	Power cord	1
402	673001600058	AIR BREAKER NUT	1
403	673002700601	AIR BREAKER ASSEMBLY	1
404	674000700032	SOFTENER ASSEMBLY	1
405	673001300557	DRAIN pipe CLAMPING	4



## DF630 - Capele Freestanding Dishwasher

Item	Part Code	Description	Qty
406	673002400131	weight BLOCK holder	2
407	676000600017	weight BLOCK	1
408	673001300556	tub Support	2
409	673000103013	Tray assembly	1
411	672002300036	FRICTION STRIP	2
412	672000190028	DOOR SPRING	2
414	672001100016	adjust screw OF DOOR SPRING	2
415	673000101018	base cover	1
417	673002400216	pcb seat cover	1
418	673002400128	pcb seat	1
419	674001001160	pcb	1
420	673001490013	FLOAT	1
422	673001400197	overflow switch seat	1
424	674010030006	overflow switch	1
425	674000300072	PRESSURE SWITCH	1
426	673001400083	power supply loom clamping	1
427	673000900354	DRAIN pipe	1
431	673001600068	SOFTENER nut	1
432	673002800161	SOFTENER cover	1
433	673001500106	SOFTENER rubber	1
501	673000900364	INNER PIPE	1
504	673001900023	water DISPENSER ASSEMBLY	1
505	673001900027	MIDDLE SPAYER PIPE ASSEMBLY	1
508	673000330000	LOWER SPRAYER	1
509	673001300548	LOWER SPRAYER seat	1
510	673002500112	PLASTIC FILTER	1
601	673001600057	SUMP NUT	1
602	673001500104	SUMP GASKET	1
603	673000900160	PVC pipe	1
604	673000900350	softener outlet pipe	1
607	673000701025	SUMP ASSEMBLY	1
608	673000900367	INNER DRAIN pipe	1
611	674000600154	Drainage pump	1
612	673002500124	main filter	1
613	673001300644	filter handle	1
614	673002500111	CYLINDR FILTER	1
616	674005600087	WASH PUMP ASSEMBLY	1
619	672000700031	940 CLAMPING	1
620	673001500115	HEATING cab COVER GASKET	1
621	674001100053	HEATING ELEMENTS ASSEMBLY	1
623	674010020008	WATER PRESSURE SWITCH ASSEMBLY	1
624	674000200031	Distributary valve assembly	1
625	674000900053	Sensing device	1



## DF630 - Caple Freestanding Dishwasher

Item	Part Code	Description	Qty
701	672000810027	UPPER BASKET ASSEMBLY	1
704	672000820007	LOWER BASKET ASSEMBLY	1
705	673003200025	cutlery ASSEMBLY	1
710	674000200041	Inlet hose assembly	1
711	674002000034	Wiring harness	1
712	673002200165	Salt filler	1
713	673000101046	basket Handle lid (front)	2
714	673000101045	basket Handle lid (back)	2
715	672000202125	BASKET HANDLE adhibit piece	2
716	673000101047	basket Handle lid (front) I	1
717	673000101048	basket Handle lid (back) I	1
718	672000301720	BASKET HANDLE adhibit piece I	1
314-a	672001700024	SWORD FORK FRAME UPPER BASKET guider(right)	1
315-a	672001700026	UPPER BASKET guider RIGHT	1

220-240V/50HZ

