


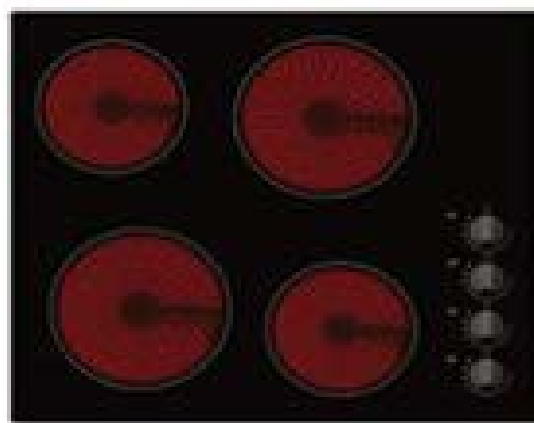

# C806C

Caple Ceramic Hob



**Technical information**

---

# Service Manual

## Ceramic Hob

Model :

C806C



## Spare part list

Model : C806C

No.	Parts code	Parts names	QTY	Series No.
1	301500101374	Screw	12	
2	541400000007	base cover	1	1220 0001 - 1220 0250
	541410000005	base cover	1	From: 1225 0001
3	541400200002	spring bracket	12	
4	303203501144	single loop hob(200mm)	2	
5	541400400002	Fixer for burner	12	
6	303203501145	single loop hob(165mm)	2	
7	G-C806C	glass assembly	1	
8	541300300007	Knob	4	
9	303207103098	silicone ring	4	
10	303207900037	silicone sealed strip	1	
11	303202804183	adiabatic cotton	1	1220 0001 - 1220 0250
12	303207400068	adiabatic bracket	1	
13	541600300002	Energy adjuster	4	
14	303207800272	knob bracket	1	
15	541600300001	Pilot lamp assembly	1	
16	303207300267	Knob base	1	
17	301500101200	screw assembly	1	
18	303207300159	junction box	1	
19	541800000021	Power cord	1	



Exploded view

Model : C806C

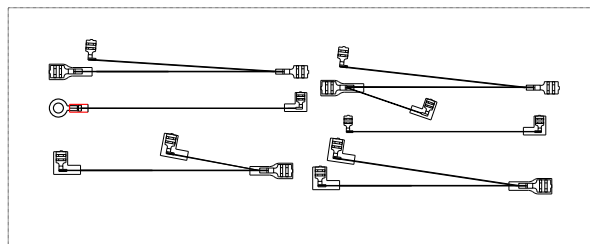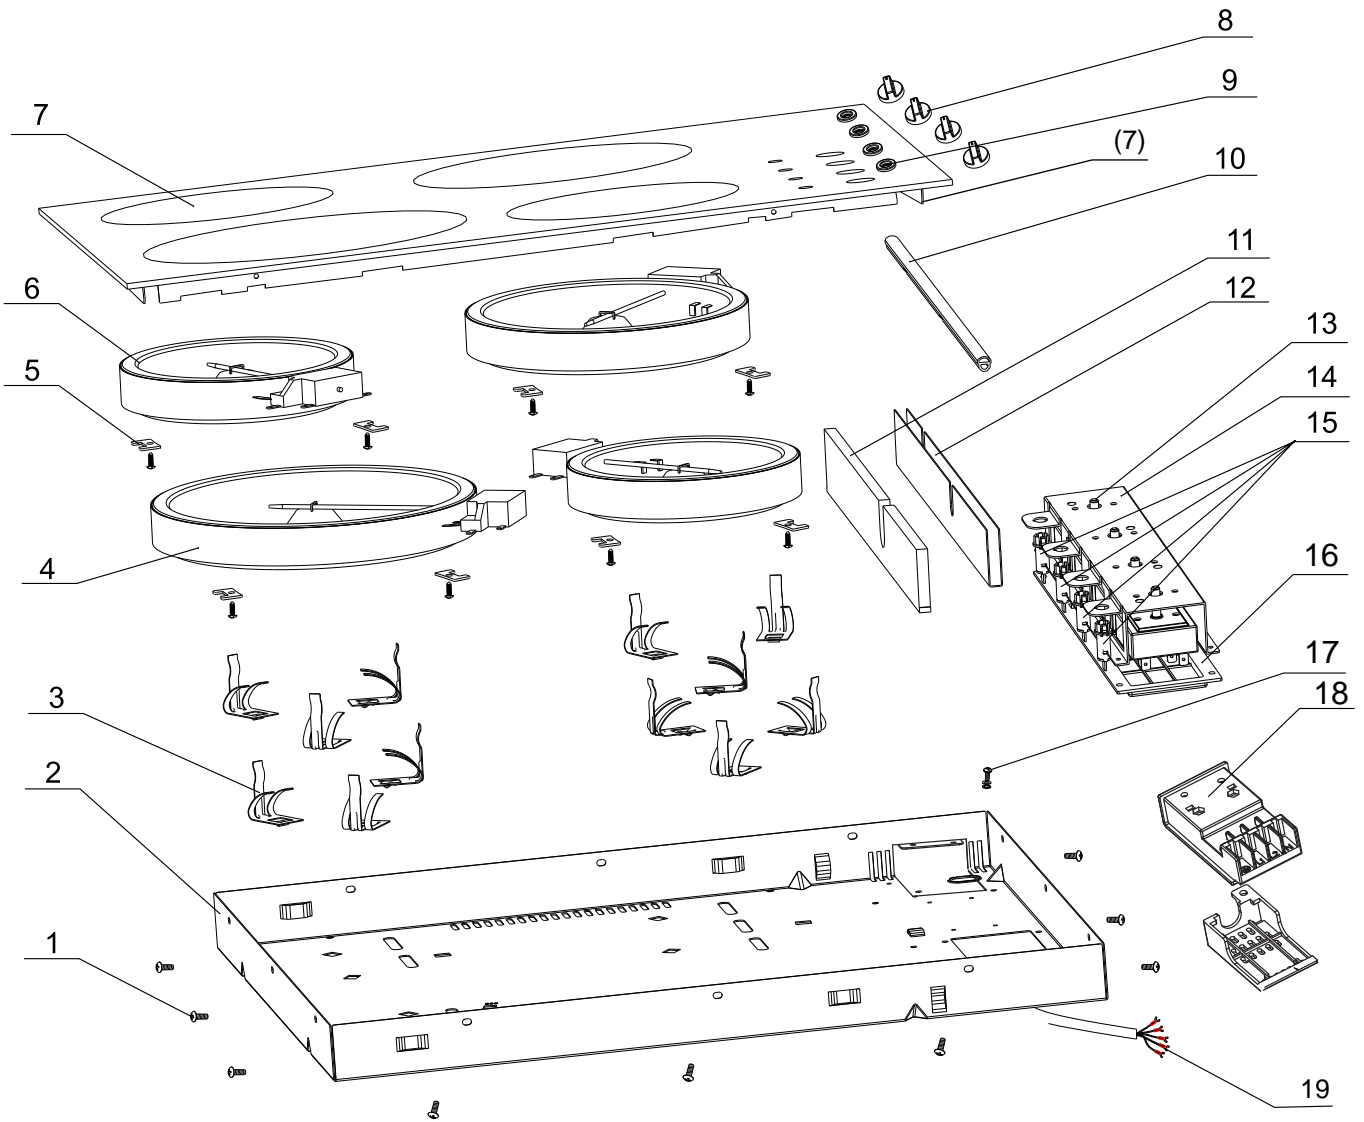



# Exploded view

Model : C806C

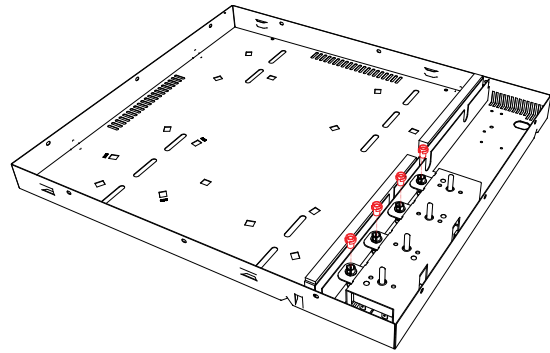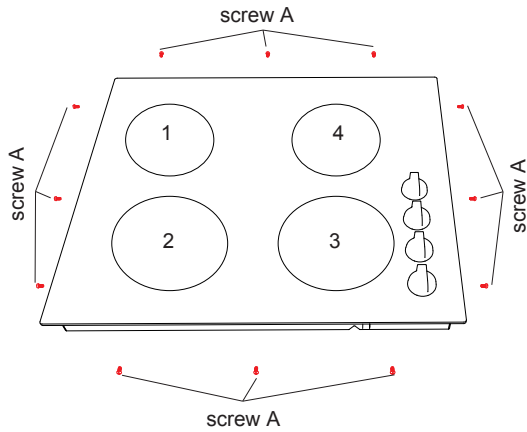



Step1:  
remove the screw A around the base cover

Step 4:  
remove the light cover

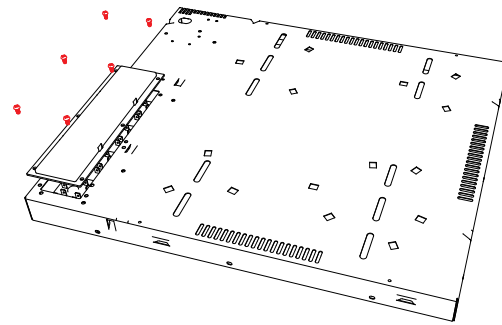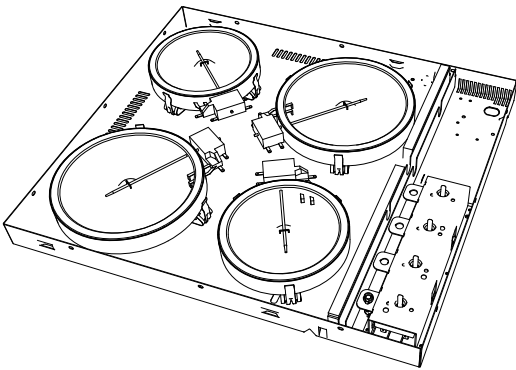

Step2:  
remove the wires


Step 5:  
to remove the knob base,reverse the base and  
remove the screws

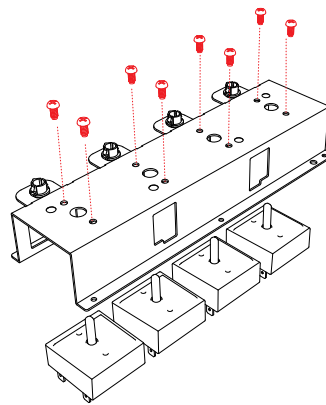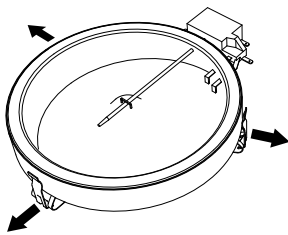


Step 3:  
open the bracket and remove the heating element

Step 6:  
to remove the Energy adjuster ,reverse the base and  
remove the screws


## Technical data

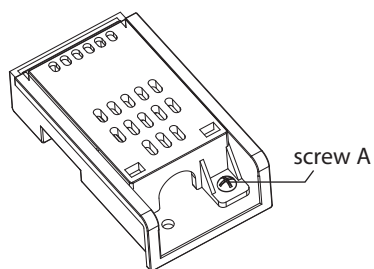


1. Remove the screw A.

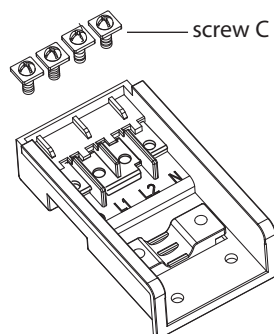


4. Remove the 4 screws C in the terminal box and insert the power cord at the connection.

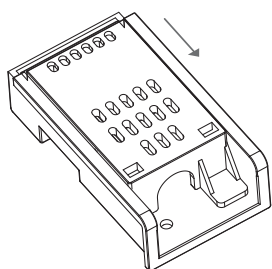


2. Push the top plate back and then lift it up.

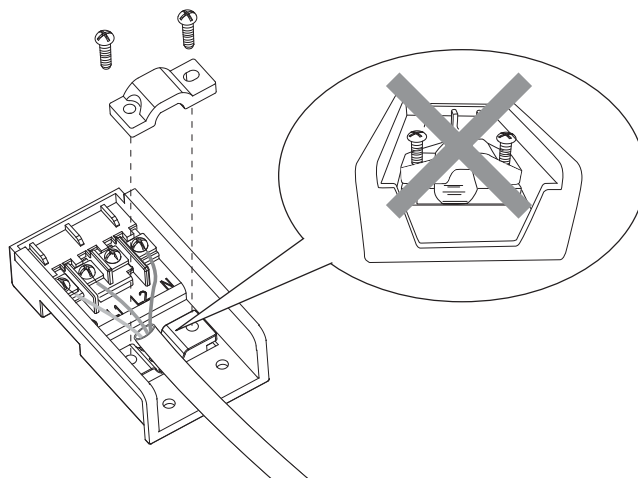

5. Assemble the cable clamp, be aware that the ellipse hole on cable clamp must match the ellipse hole on.

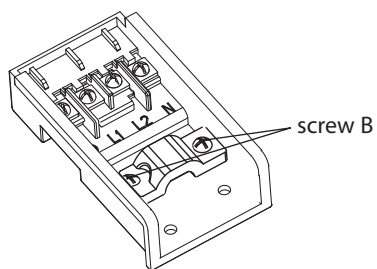

3. Remove the 2 screws B.

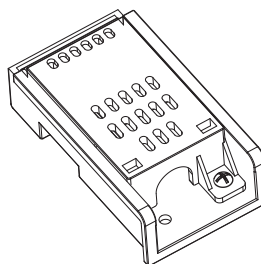

6. Fix the top plate.

Technical data

Model : C806C

