

WDUAIR Installation Guide


Parts list

The actuator consists of:

- 1) Button
- 2) Nut
- 3) Outlet (threaded section)

The air switch sensor enclosure consists of:

- 4) Waste disposer socket
- 5) Sensor inlet for the air tube
- 6) Power cord and plug
- 7) Air tube

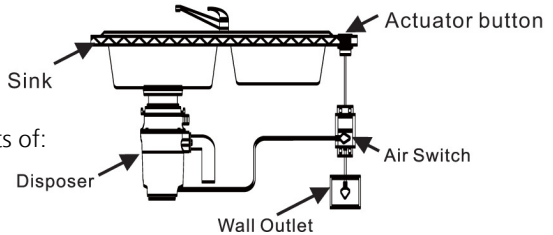

Installation and operating instructions:

- A) Use the spare tap hole in your sink (if present) or drill a hole in your worktop between 35mm and 40mm.
- B) Insert the actuator from the top of the hole and fix in place by using the nut. Tighten it firmly by hand.
- C) Connect one end of the air tube to the actuator outlet (3) and the other to the air switch sensor inlet (5)
- D) Plug the air switch power cord into the socket
- E) Plug the waste disposer plug into the air switch waste disposer socket (4)
- F) Your installation is now complete. To switch the waste disposer on press the actuator button (1) once, then to switch it off press the actuator button once more.

