



C2362

Caple Sense Single Oven

 


Technical Manual



C2362

Caple Sense Single Oven

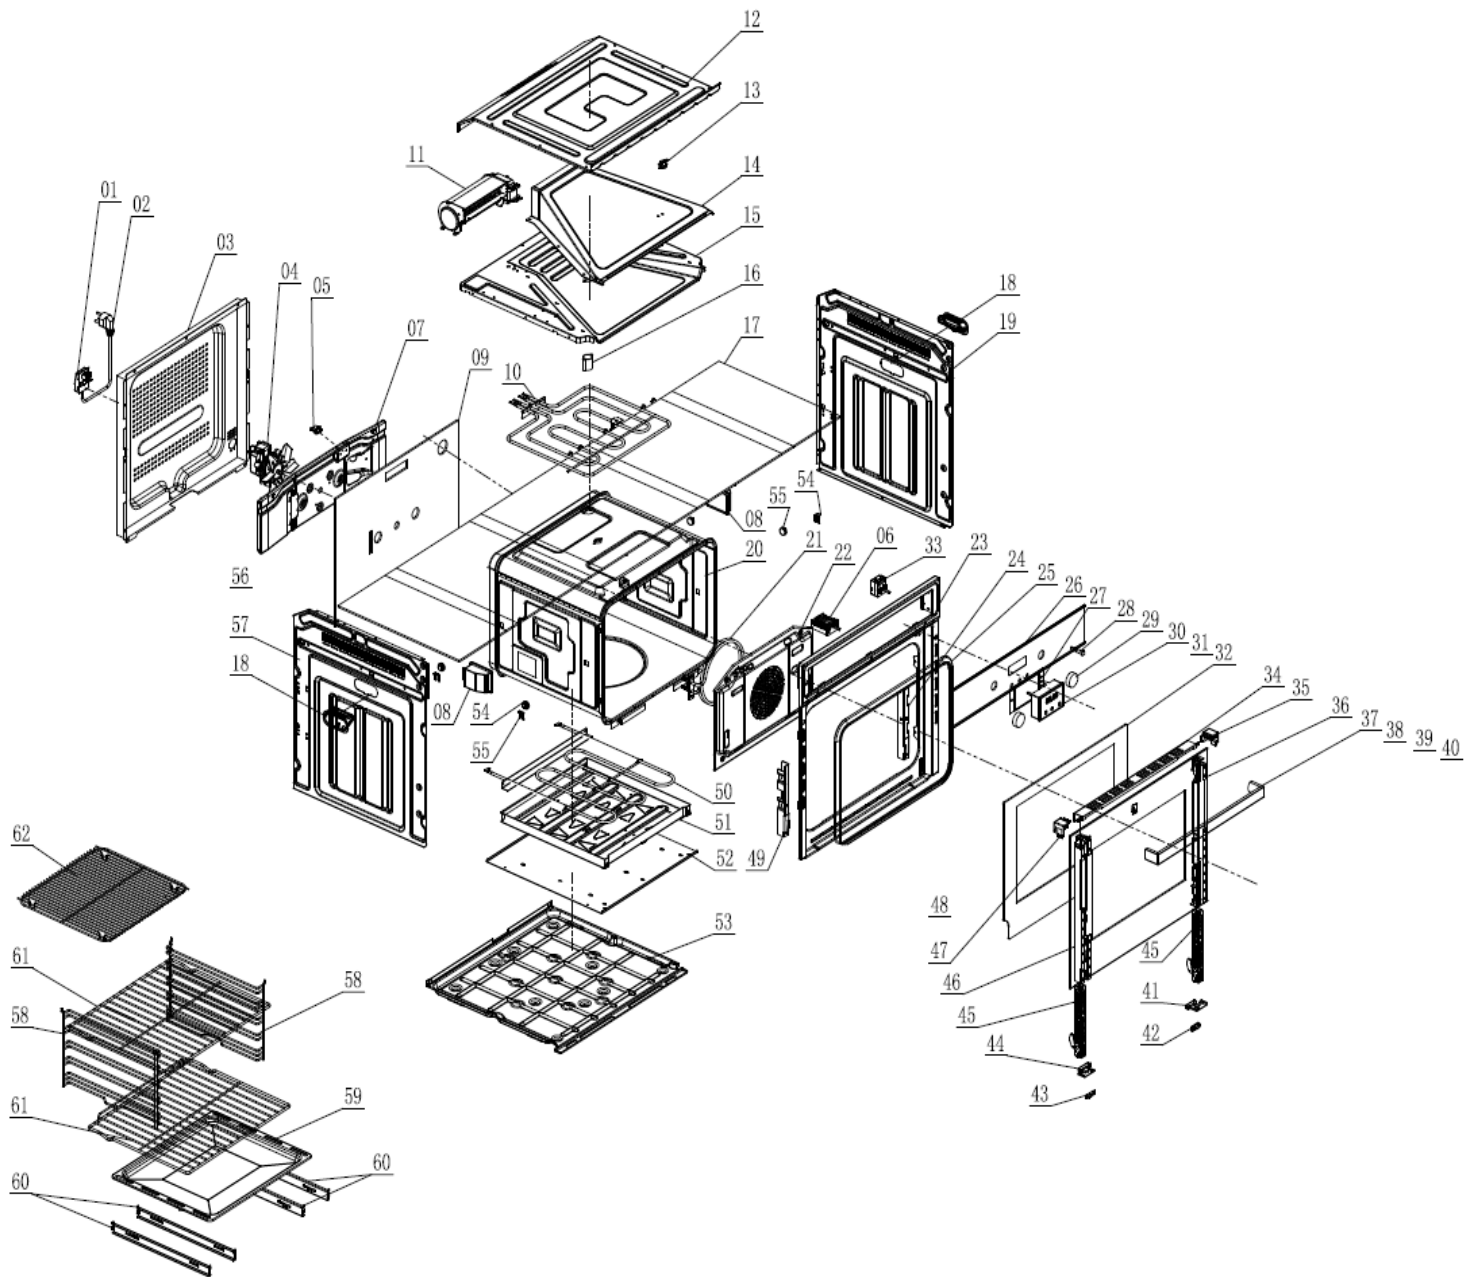



C2362

Caple Sense Single Oven

Item	Part Number	Description	Additional Info	Quantity
1	142101500201	Power cord		1
2	1421600101	Power box		1
3	2121600103	Rear cover		1
4	142090020303	Circulating fan motor		1
5	1421200107	Thermostat 125°C		1
6	1420200111	Switch		1
7	2121500601	Bracket of convection motor		1
8	1420700117	Halogen lamp		2
9	1920100225	Rear isolation cotton		1
10	1420500125	Top heater		1
11	1420900218	Motor (cooling fan)		1
12	2121400201	Top cover		1
13	1421200108	50°C Thermostat		1
14	2126700103	Cooling cover component		1
15	2121200501	Top Panel		1
16	2126800701	Vantile		1
17	1920100122	Top isolation cotton		1
18	1320400101	Holder		2
19	2121000302	Right side panel		1
20	212090051701	Cavity assembly		1
21	1420500309	Circle heater		1
22	212030080103	Fan cover		1
23	212020014701	Door frame		1
24	2126500207	Right hinge bracket		1
25	1320200901	Door seal		1
26	11201014017	Glass for Control Panel		1
27	2123410004	Timer bracket		1
28	1420400107	#1 indicator		1
29	132010015101	Knobs		2
30	142150011504	Timer		1
32	1120100359	Inner glass		1
33	1421100205	Liquid expansion thermostat		1
34	2127401807	Door bracket		1
35	1123500207	Right buckle for door bracket		1




C2362

Caple Sense Single Oven

Item	Part Number	Description	Additional Info	Quantity
36	EB-67ERCD9-S-06-01-2	Outer door glass component	Outer glass	1
			Left door bracket	1
			Right door bracket	1
			Spring for glass bracket	2
			Clip for glass bracket	1
			Aluminium strip	1
37	1122400314	Handle		1
41	2126600304	Fixing plate for right outer door hinge assembly		1
42	1320600124	Plastic gasket for right door hinge bracket		1
43	1320600123	Plastic gasket for left door hinge bracket		1
44	2126600303	Fixing plate for left outer door hinge assembly		1
45	1120400702	Hinge		2
47	1123500208	Left buckle for door bracket		1
49	2126500107	Left hinge bracket		1
50	1420500215	Bottom heater		1
51	2121700501	Bottom heater plate		1
52	2121300103	Insulation plate		1
53	2121800603	Bottom plate		1
54	2126100105	Fixing Screw(Side shelves)		4
55	1122000103	Fixing Plate for Side shelves		4
56	1121800107	Upper Probe		1
57	2121100303	Left side panel		1
58	EB-67ERCD-16/17	Side shelves	Left side shelf	1
			Right side shelf	1
59	212210010404	Food tray		1
60	EB-67ECD6-L-06A/B	Full extension full extension runner		2
61	1120500122	Big grill rack		2
62	1120500203	Small grill rack		1

EB67ERCD9S0609

 Complete door

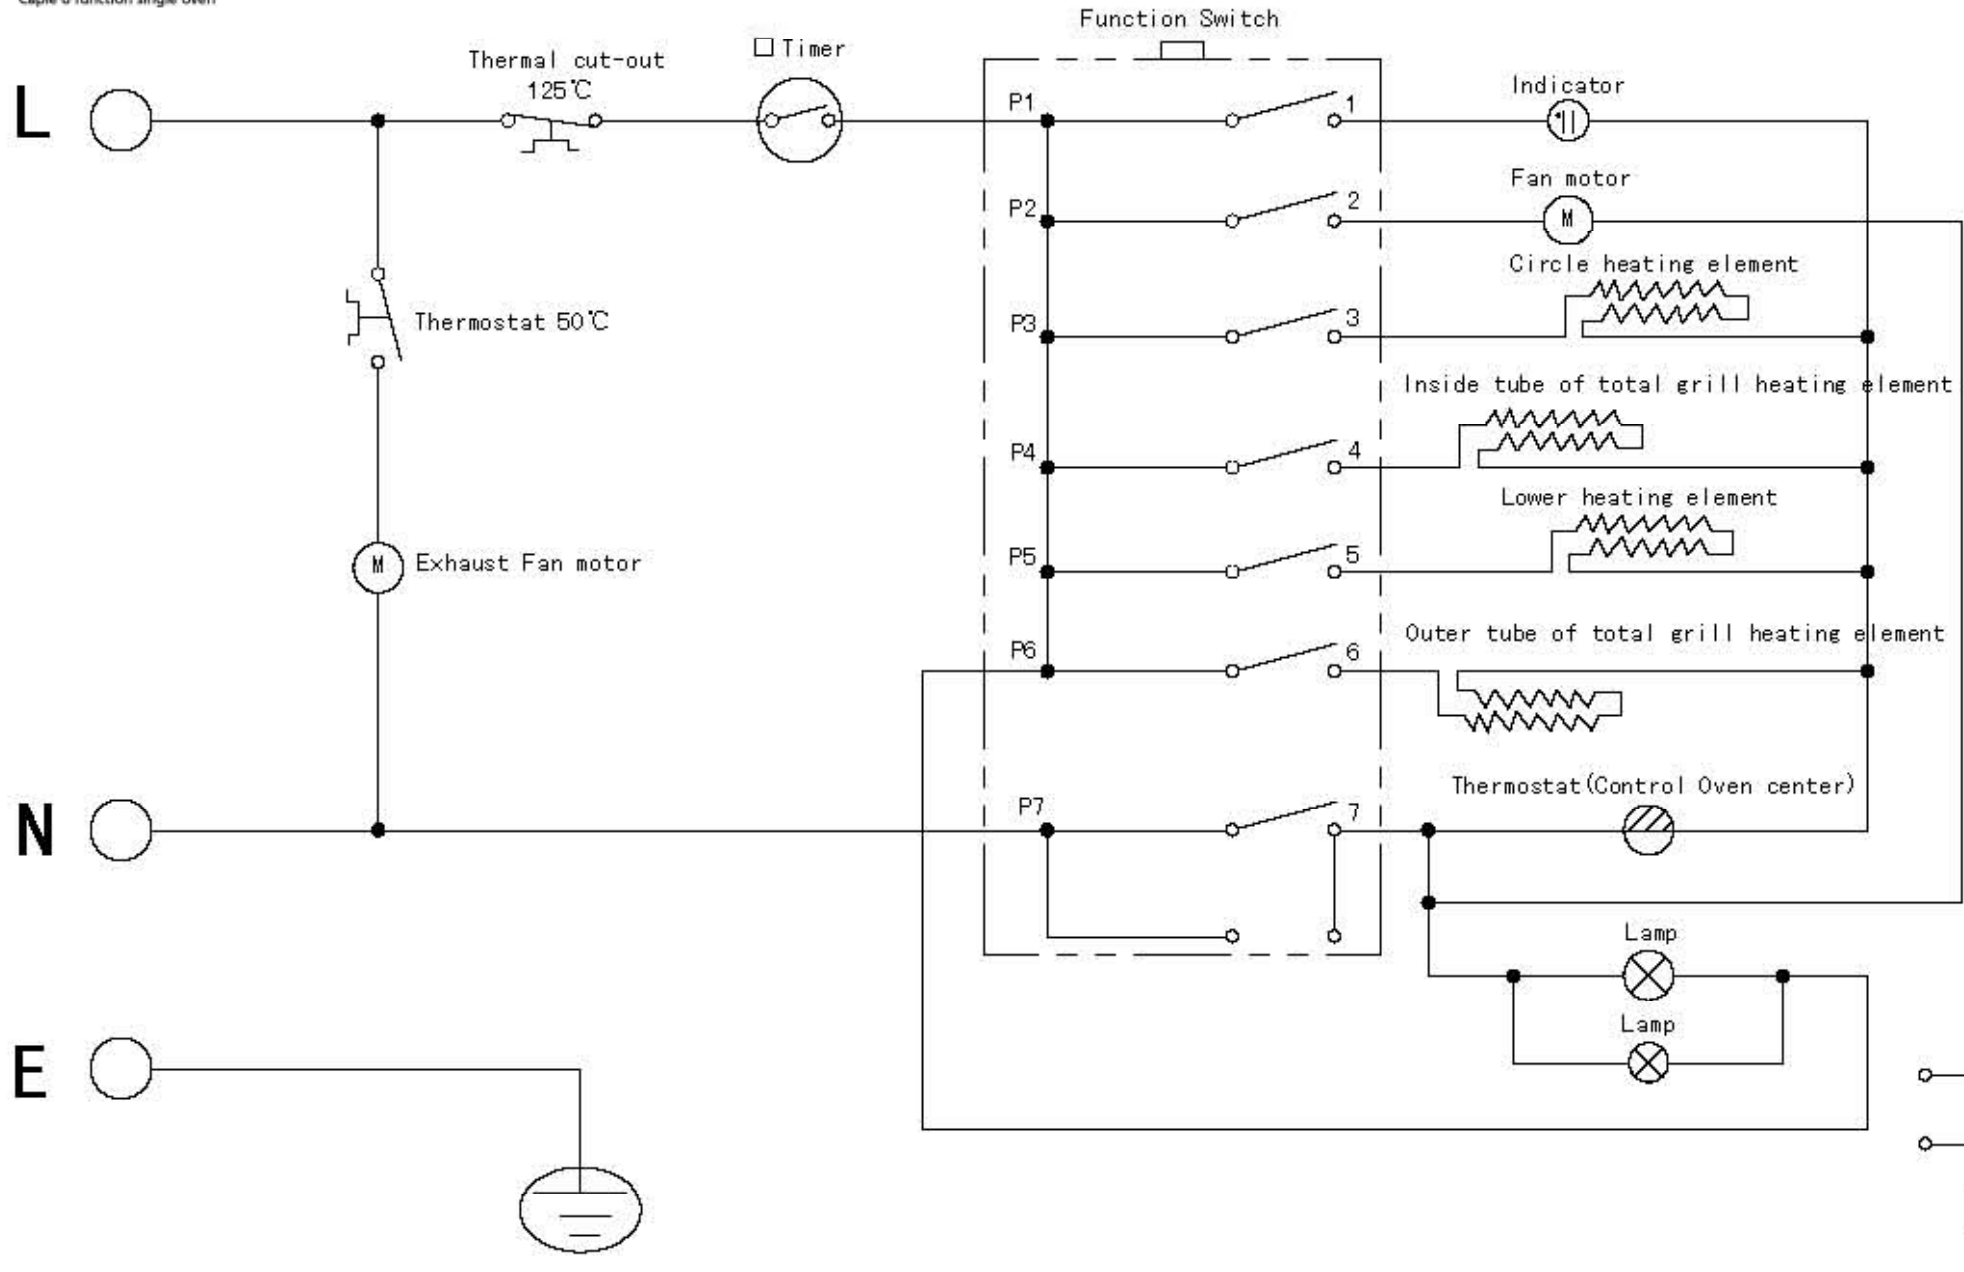

THE ENCLOSED ELECTRICAL DIAGRAM IS INTENDED FOR SERVICE PERSONNEL ONLY

