



C2901

Caple 90cm Touch Control Oven




Technical Manual



C2901

Caple 90cm Touch Control Oven

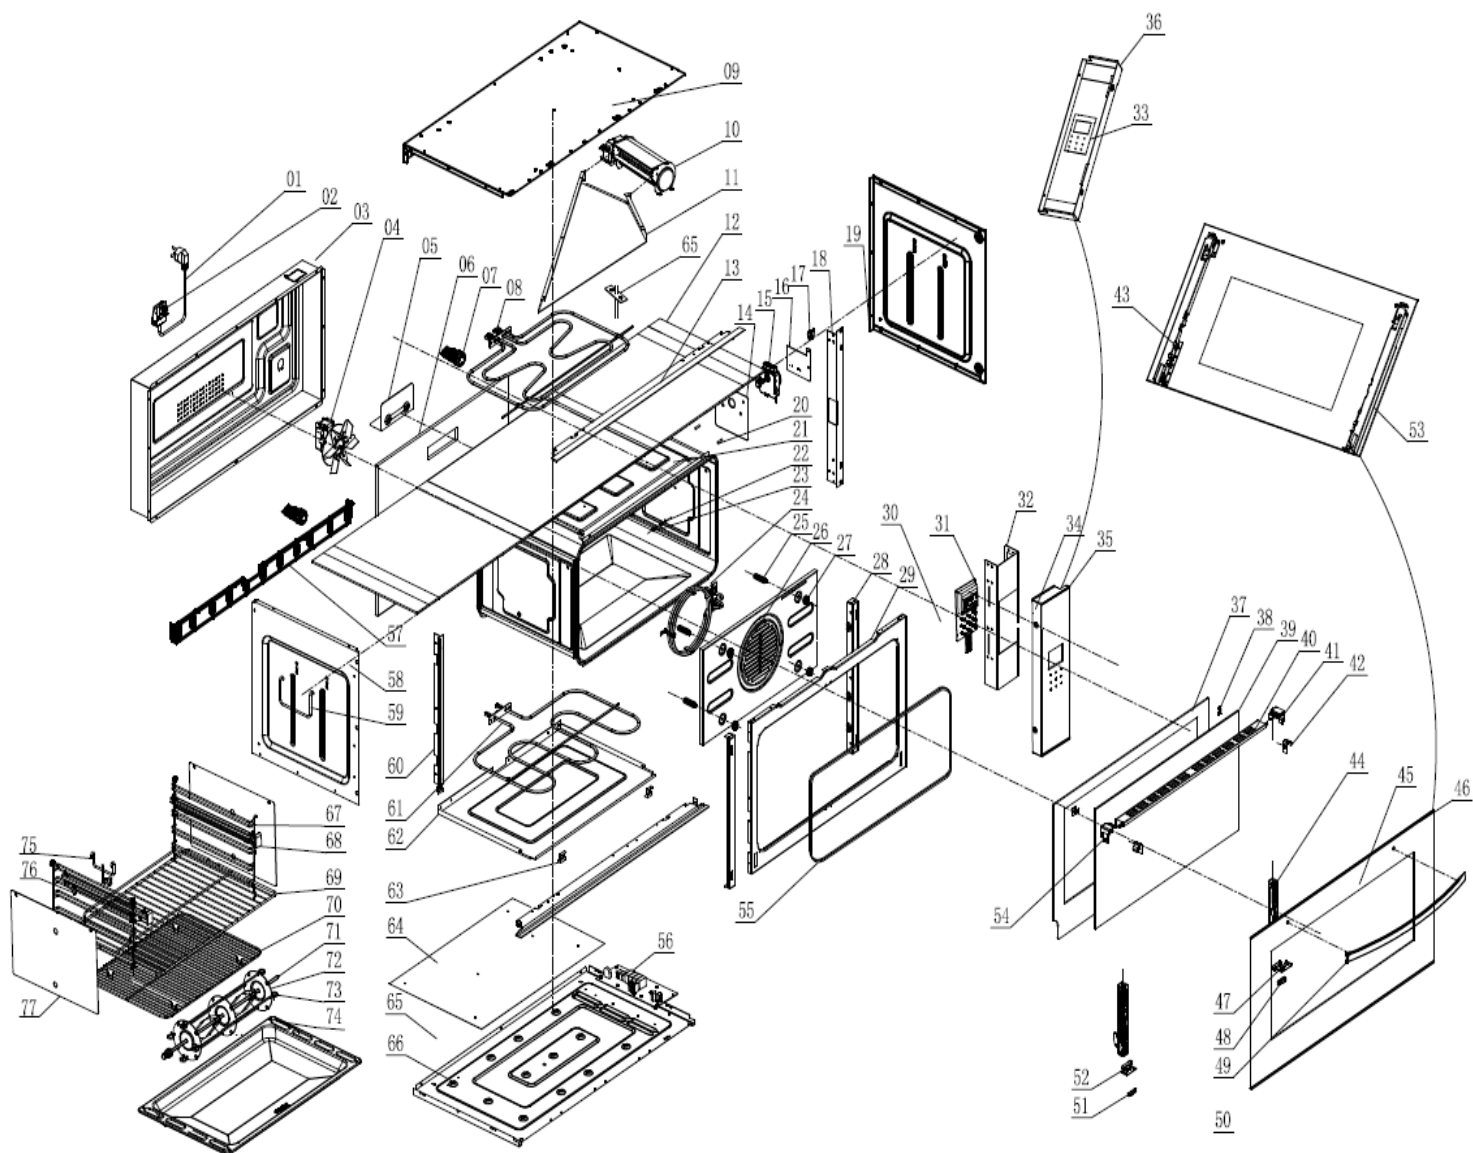



C2901

Caple 90cm Touch Control Oven

Item	Part Number	Description	Additional Info	Quantity
1	142101500201	power cord		1
2	1421600101	power box		1
3	2121603801	Back Panel		1
4	142090020101	circulating fan motor		1
5	2125700101	top heater plate		1
6	1920100226	rear isolation cotton		1
7	1420700113	Lamp		2
8	1420500128	Top heater		1
9	2121400102	Top Panel		1
10	142090021501	Cooling fan		1
11	212580010103	Vantile		1
12	1920100118	Upper isolation cotton		1
13	212540010301	Top and Bottom frame		2
14	2125500101	Synchronous motor plate		1
15	1420900305	Synchronous motor		1
16	2125600101	plate for thermostat		1
17	1421200207	Thermostat 110°C		1
18	212520010101	Right frame		1
19	2121000103	right panel		2
20	1220100102	aluminium casing		1
21	212090160101	Cavity		1
22	2128400103	Rivet Nuts		2
23	1220100117	Fixing screws for side shelves		2
24	1420500304	circle heater		1
25	1220100123	Heat shield studs		4
26	212030020101	fan cover		1
27	1220100104	Nuts for fan cover		4
28	2126500301	hinge bracket		2
29	21202002101	Door frame		1
31	1422100139	Timer		1
32	2124920001	Bracket for Control panel		1
36	EB-100ECD4-01-02	Control Panel components	Timer box	1
			decorative frame for control panel	1
			Aluminium Strip for control panel	2
			Glass Panel	1



C2901

Caple 90cm Touch Control Oven

Item	Part Number	Description	Additional Info	Quantity
37	1120100354	Inner glass		1
38	2127400702	Fixing plate for Middle Glass		1
39	1120100218	Middle Glass		2
40	212740190101	S.S. Door bracket		1
41	1123500207	Right buckle for door bracket		1
42	2127401803	Spring for glass bracket		2
44	1120400703	Outer hinge		2
45	EB-100ERCD4-05-01-02	Outer glass components	left door bracket	1
			Outer glass	1
			right door bracket	1
			Aluminium strips for outer glass	2
47	2126600301	Fixing plate for left outer door hinge assembly		1
48	1320600123	plastic gasket for left door hinge bracket		1
49	1122400314	Handle		1
51	1320600124	Plastic gasket for right door hinge bracket		1
54	1123500208	Left buckle for door bracket		1
55	1320200102	Door Seal		1
56	1422100140	Power board for PCB		1
57	2127300108	Cavity support		1
58	2121100103	left panel		1
59	1123900101	Holder		2
60	212530010501	Left frame		1
61	1420500216	Bottom Heater		1
62	2123900201	Fixing plate for bottom heater		1
63	2121700601	Clips for bottom heater		2
64	2121300104	isolated plate		1
65	1121800107	Probe		1
66	2121800202	Bottom panel		1
67	1120500801	Side shelves		2
68	EB-67ECD6-L-06A/B	Full extension full extension runner	Set	2



C2901

Caple 90cm Touch Control Oven

Item	Part Number	Description	Additional Info	Quantity
69	1120500123	Big rack		2
70	1120500206	Small rack		1
71	1122600112	Rotisserie components		1
72	212590010101	Rotisserie plate A		2
72	212590010201	Rotisserie plate B		1
73	1122200101	Needle of rotisserie		7
74	212210011601	Tray		1
75	1122300201	Support for rotisserie		1
77	2120401101	Side catalytic liners		2

EB-100ERCD4-D

Complete Door



1420500304 Fan Element Dimensions

