



C4245

Caple Built under Double Oven




Technical Manual



C4245

Caple Built under Double Oven

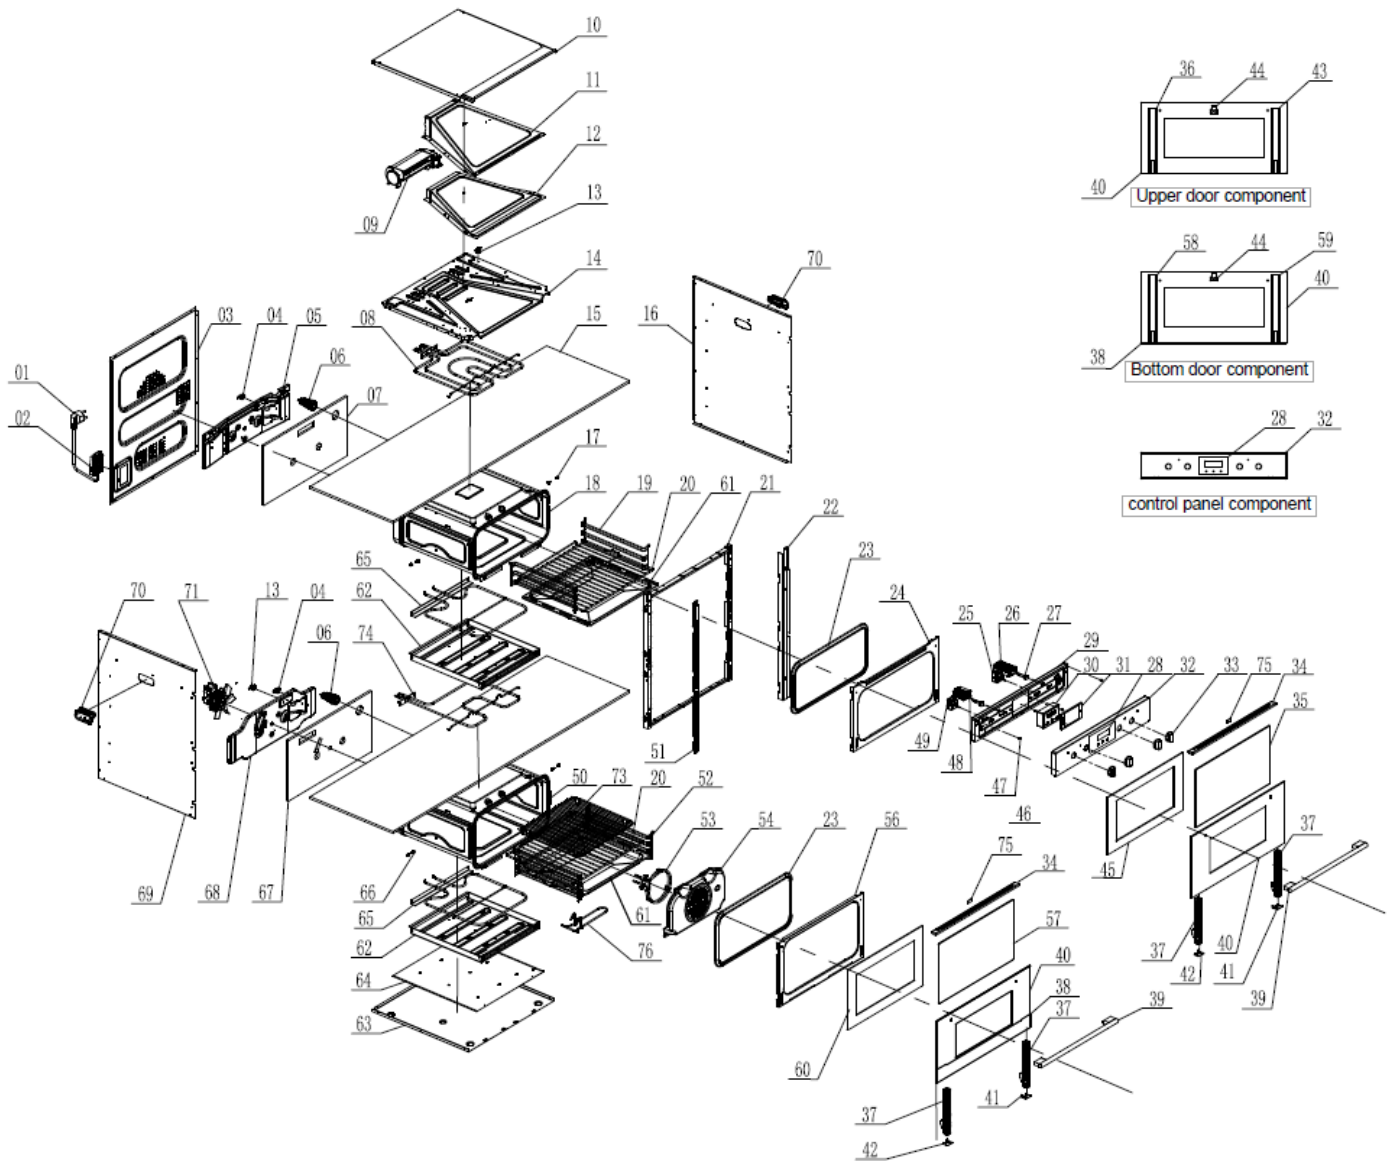



C4245

Cable Built under Double Oven

Item	Part Number	Description	Additional Info	QTY
1	EB888RD-28	power cord		1
2	EB888RD-27	power box		1
3	EB720RD-09	rear cover		1
4	EB56-31-09	thermostat 130°C		2
5	EB56-109-A	bracket of convection motor		1
6	EB-56ECG-P8B22-02	Lamp	Serial num pre ABE101731*****	2
6	EB-100ERCD2-15	Halogen Lamp	Serial num after ABE101731*****	2
7	EB888RD-26	rear isolation cotton (upper oven)		1
8	EB888RD-09	top heater(upper oven)		1
9	EB56-41-06	motor (cooling fan)		1
10	EB888RD-19	top cover		1
11	EB56-115-B	cooling cover		1
12	EB56-116-B	separator(cooling cover)		1
13	EB56-31-01	thermostat (50°C)		2
14	EB56-114-B	top panel		1
15	EB888RD-25	top isolation cotton (upper oven)		2
16	EB720RD-08	right side panel		1
17	EB56-31-02	Rivet nut		4
18	EB888RD-08-00	Inner cavity assembly(upper oven)		1
19	EB888RD-11	Side Shelf(upper oven)		2
20	EB5-04-02	big grill rack		2
21	EB720RD-01-00	frame assemble to inner cavity		1
22	EB720RD-03	right side frame		1
23	EB888RD-14	door seal		2
24	EB888RD-06	door frame(upper oven)		1
25	EB888RD-10	Liquid expansion thermostat		1
26	FD-08-01	switch(eight stalls)		1
27	EB56-31-03	#3 indicator		2
28	EB888T3-8BC06	control panel component	glass control panel	1
			stainless Steel control panel	1
29	EB888RD-02	Rare plate of control panel		1
30	EB888RD3-42	timer		1
31	EB56-153-4A	timer bracket		1
33	EB888RD-44	knob		4
34	SB-524-B	door bracket		2
35	EB888RD-13-06	middle glass(upper oven)		1
36	EB888RD-13-02	Upper door component	266 right door bracket	1
			outer door glass(upper oven)	1
			right door bracket	1
			door bracket platen	1



C4245

Caple Built under Double Oven

Item	Part Number	Description	Additional Info	QTY
37	EB888RD-38	door hinge		4
38	EB888RD-13-02-01	Bottom door component	Door decorated plate	1
			outer door glass(upper oven)	1
			door bracket platen	1
			277 right door bracket	1
			277 left door bracket	1
39	EB888RD-43	handle		2
41	EB40-304-A	right bracket for door hinge		2
42	EB40-303-A	left bracket for door hinge		2
45	EB888RD-13-07	inner glass(upper oven)		1
46				
47	EB56-122-A	control panel plug		3
48	FD-04-01	switch(eight stalls)		1
49	EB56-31-04	Liquid expansion thermostat		1
50	EB720RD-06-00	inner cavity assembly(bottom oven)		1
51	EB720RD-02	left side frame		1
52	EB40-222-A	EB40 Side Shelf		2
53	EB40-221-A	circle heater		1
54	EB40-206-A	fan cover		1
55				
56	EB720RD-05	door frame(bottom oven)		1
57	EB720RD-11-05	middle glass(bottom oven)		1
60	EB720RD-11-04	inner glass(bottom oven)		1
61	EB56-162-2A	Food tray		2
62	EB56-103-A	bottom heater plate		2
63	EB888RD-16	bottom plate		1
64	EB-68ECD3-10	heat shield		1
65	EB40-220-A	bottom heater		2
66	EB56-05-03	fixing screws(side shelf)		4
67	EB720RD-12	rear isolation cotton (bottom oven)		1
68	EB40-205-A	bracket of convection motor		1
69	EB720RD-07	left side panel		1
70	EB57-546-1	handle		2
71	EB720RD-17	circulating fan		1
73	EB56-09-01	small grill rack		1
74	EB40-219-A	upper heater		1
75	EB56-31-08	15x8xΦ9 rubber		2
76	EB56-195-A	tray handle		1