

## Instruction manual for built under extractor

Model code: 2MBUCH3



## Installation

- Once installed, the appliance must be no less than 65 cm away from an electric hob and no less than 76 cm away from gas burners or a mixed hob. Please always install based on the minimum distance stated in the hob instruction manual.
- If the instructions for the installation of the gas hob specify a greater distance, please take this into account.

## Electrical Connection

- Before making any electrical connections, make sure that the voltage of the electrical mains corresponds with the value indicated on the appliance rating label. It is highly recommended the electrical connection be made by a qualified electrician. For appliances fitted with a plug insert the plug into a socket that complies with the applicable norms in force. Once plugged into the socket, the plug must be easily accessible. If you intend to connect the hood directly to the electrical mains, remove the plug and add a standard bipolar switch with a minimum contact opening of 3 mm. Appliances not fitted with a plug fit a standard plug or a standard bipolar switch compliant with the applicable norms in force, with a minimum contact opening of 3 mm.
- Caple will not be held responsible for any problems arising from failure to comply with the above instructions.

### CLASS I APPLIANCES MUST BE EARTHED

The connection must be made as follows:

BROWN = L (current)

BLUE = N (neutral)

YELLOW/GREEN = (earth)

### CLASS 2 APPLIANCES DO NOT HAVE TO BE EARTHED

Class 2 appliances labelled with a rating sticker featuring the symbol in the form of a double square must be connected as follows:

BROWN = L (current)

BLUE = N (neutral)

## Use

The hood is designed to be used either to filter and re-circulate air or in a ducted vented mode. Do not flambé under the cooker hood. Never leave frying pans unattended during use as over-heated fats and oils may catch fire. To ensure the best performance, we recommend switching on the extractor 15 minutes before cooking and leave it running 15 minutes after. This will ensure that the air in the kitchen is being circulated before cooking commences and the air is being cleaned after cooking has finished. The slider controls allow for 3 speed settings and also a separate switch to turn the lights on and off.

## Installation - Ducted

The air is ducted to the outside along a pipe which should be connected to the Ø 120-150mm hood outlet opening by means of connector ring "A" (Fig. 1, page 6).

The hood outlet should not be connected to a duct where hot air circulates or used to vent the flue gases of appliances that run on energy sources other than electricity. Take care when operating a vented hood at the same time as a burner or furnace which uses the air inside the room (powered by an energy source other than electricity), as the suction action of the former removes the ambient air necessary for the combustion of the latter. For the safe operation of your appliance, ensure the room is suitably ventilated by opening doors, windows or by means of specific technical devices.

Follow the guidelines set by the applicable norms in force for outdoor venting. The cooking vapours must not be vented to the outside along a flue used for the flue gases of appliances powered by energy sources other than electricity.

## Installation – Recirculation mode

When the air cannot be vented to the outside, the hood can be fitted with an activated carbon filter "D" (Fig. 2).

The air is purified by the filter and re-circulated into the room.

To use this operating mode, proceed as follows:

- Insert the carbon filter "D" (Fig. 2);

The air is re-circulated into the room via a Ø 120-150 mm pipe passing through the cabinet and fastened to the connector ring "A";

## Installing the hood

Once you have decided on which installation you prefer, proceed with the installation.

- This appliance is designed to be built into a cabinet or other support.
- The cut-out on the bottom of the cabinet should feature the dimensions shown in figure 4.

To fasten the hood in place, proceed as follows:

- Remove the frame by pressing buttons "B" (Fig. 3);
- \*WARNING: if your hood is fitted with halogen lamps, disconnect connectors "F" (Fig. 3.1);
- Fit the hood into the cut-out;
- Screw in the screws provided with the appliance in slots "C", securing the unit to the cabinet (Fig. 4);
- Reposition the frame.

\*WARNING: if your hood is fitted with halogen lamps, connect the spotlights before repositioning the frame.

## Maintenance

The correct operation of the hood is directly related to how often it is cleaned and serviced, especially the grease filter and the activated carbon filter.

### Grease filter

The grease filter traps any grease particles and solids suspended in the air. It therefore tends to clog over time, depending on how often the hood is used and on the type of cooker installed. In any case, it should be cleaned or replaced at least every other month.

The grease filter made from forged aluminium grids. This metal filter has an almost unlimited life, and should be hand washed in lukewarm water with mild liquid detergent, leaving it to soak until it is free of all grease and impurities, alternatively it can be washed in your dishwasher, we recommend washing it separately to prevent food waste becoming stuck in the grids. Leave it to dry thoroughly before repositioning. The forged grease filters should be washed by hand or in your dishwasher once a month.

Failure to comply with the washing instructions could result in a fire hazard.

## Carbon filter

The activated carbon filter is only used when the hood is not being vented to the outside and is being recirculated. It is designed to trap odours and clean the air. The carbon filter is saturated after a varying amount of time depending on the type of cooker used and on how regularly the grease filter is cleaned. In any case, the cartridge should be replaced at least once every four months to maintain good performance.

### Removal of the carbon filter

- Remove the frame;
- Turn the central knob on the carbon filter anticlockwise and pull the filter out of its seat (Fig. 2, on page 6);

To mount the new filter, repeat the above instructions in the reverse order. Wipe off all deposits from the fan and other hood surfaces frequently, using a cloth dampened with denatured alcohol or non-abrasive mild liquid detergents.

### Halogen lamp replacement

- Unplug the appliance from the electrical power supply;
- Screw off the chrome-plated ring nuts;
- Replace the faulty lamps, using only 25W (max) halogen lamps;
- Reposition the chrome-plated ring nuts.

### Bulb replacement

25W (E14) max

- Unplug the appliance from the electrical power supply;
- Remove the grid;
- Replace the faulty lamp with one of the same wattage.


WARNING! ELECTRIC HOUSEHOLD APPLIANCES CAN BE DANGEROUS IN CERTAIN CIRCUMSTANCES.

- Do not attempt to check the filters when the hood is in operation.
- Do not obstruct any air outlets.
- Do not touch the lamps or lamp diffusers after prolonged use of the hood.

- Do not flambé food underneath the hood.
- Avoid leaving an open flame uncovered, as it could damage the filters and increase the risk of fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been, given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- There must be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room);
- The details concerning the method and frequency of cleaning must be adhered to;
- There is a fire risk if cleaning is not carried out in accordance with the instructions;
- CAUTION: Accessible parts may become hot when used with cooking appliances;
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room);
- Regulations concerning the discharge of air have to be fulfilled.
- Never leave frying food unattended to prevent hot oil from catching fire.
- Disconnect the hood from the electrical mains before performing any maintenance operations.
- If the supply cord is damaged it must be repaired by the manufacturer, its Service Agent or a similarly qualified person in order to avoid a hazard. Contact Caple Service.
- This appliance must be installed following the national regulations for electrical installations.
- The manufacturer will not be held responsible for any damage caused due to failure to comply with the above warnings

## Technical data

|                |                         |
|----------------|-------------------------|
| Model No.      | 2MBUCH3                 |
| Rated Input    | 220V~240V / 50Hz        |
| Rated Power    | 290W Total              |
| Motor Power    | 120Wx2                  |
| Lighting Power | ≤25Wx2 (tungsten bulbs) |
| Noise Level    | ≤ 66dB                  |

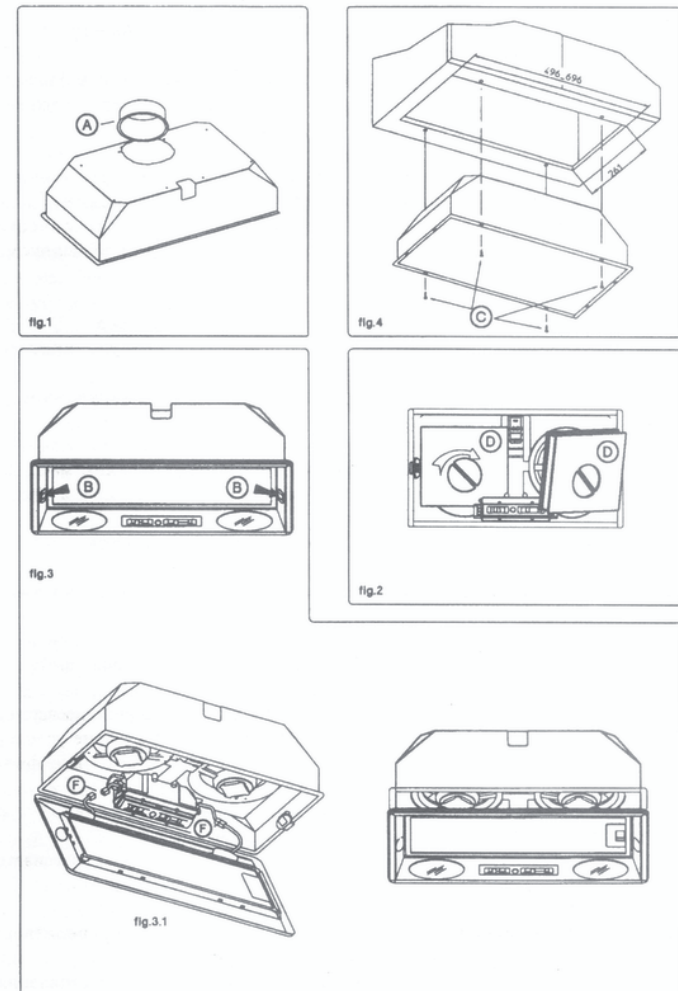

## Guarantee

Caple undertake that if within two years of the date of the purchase this appliance or any part thereof that is proved to be defective by reason only of faulty workmanship or materials, we will at our option repair or replace the same free of any charge for labour or materials on condition that:

- Documentation must be provided before a guarantee repair commences to confirm that the extractor is within the guarantee period.
- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by Caple Service Centre.
- Any appliance or defective part replaced shall become the property of this company.
- If a service call is made and it is found that the installation has not been carried out correctly or customer misuse/abuse is involved THE COST OF THE SERVICE CALL HAS TO BE PAID FOR BY THE USER BEFORE ANY SERVICE WORK IS CARRIED OUT.

## Exclusions

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- This guarantee is in addition to and does not affect your statutory and legal rights.

## Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service or the retailer where you purchased the product.

## CE Declarations of Conformity



This appliance has been manufactured to the strictest standards and complies with all applicable legislation, Low Voltage Directive (LVD) and Electromagnetic Compatibility Directive (EMC).

Caple  
Fourth Way  
Avonmouth  
Bristol  
BS11 8DW

[www.caple.co.uk](http://www.caple.co.uk)