

Instruction manual for electric single oven

Model code: C2215





 
Thank you for choosing a Caple oven. With minimal care, as outlined in this guide, your Caple oven is designed to provide you with years of reliable service. This guide will provide you with the information you need to become familiar with your oven's care and operation, and to get the best results.

If you have any questions or comments about this product, please contact your Caple retailer, call 0844 800 3830, or email info@caple.co.uk. For more information about the complete selection of Caple products, please visit www.caple.co.uk.

⚠ WARNING

To reduce the risk of fire, electrical shock, or injury when using your appliance, please follows these basic precautions.

Close up View

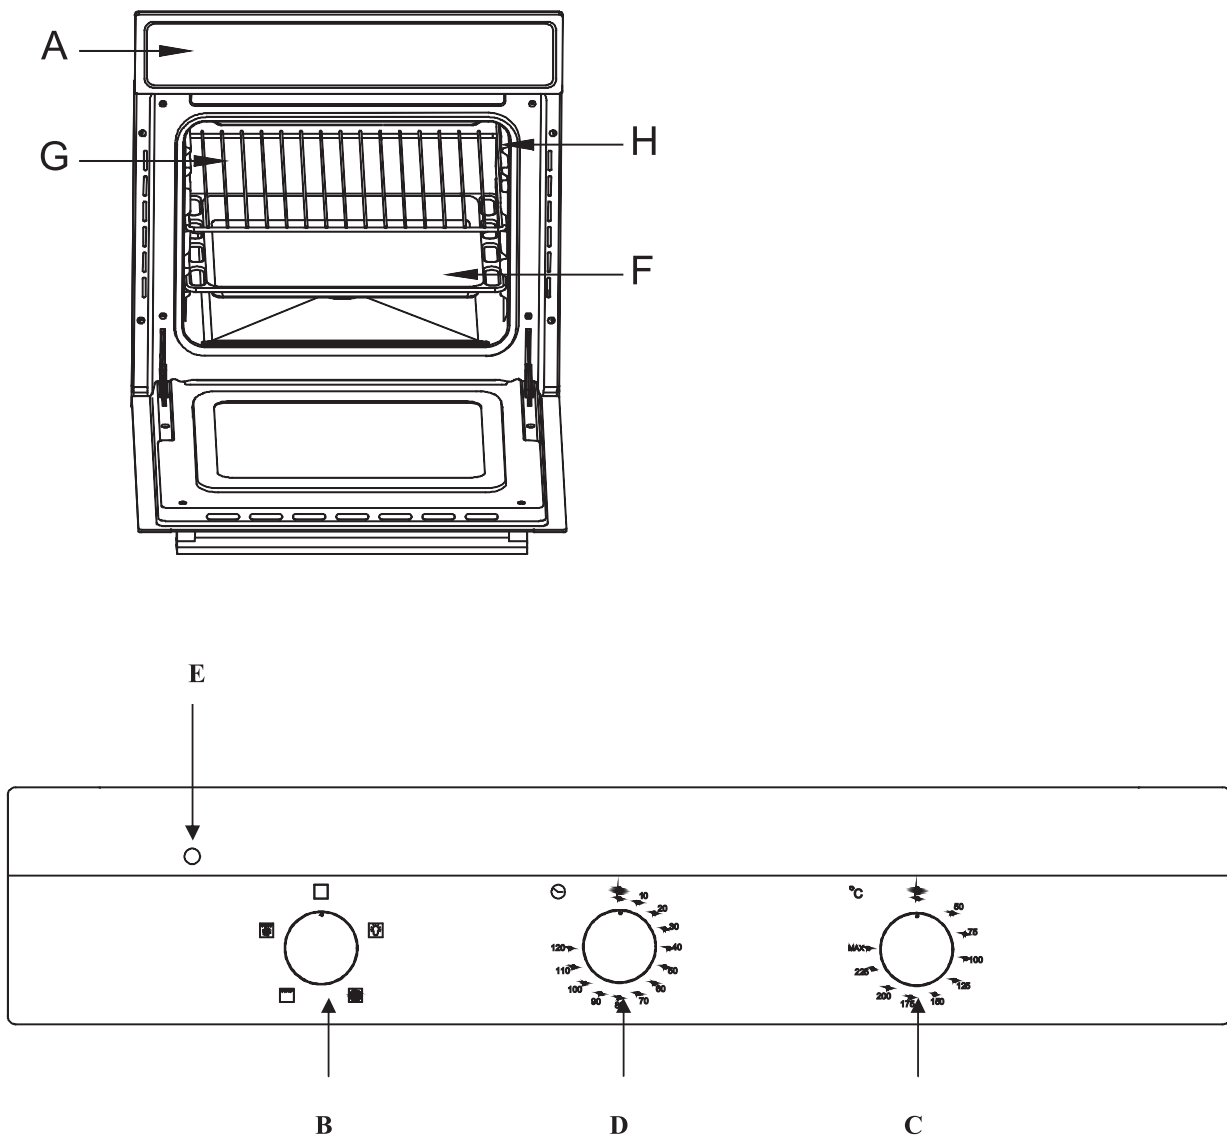

- A. Control panel
- B. Cooking mode selection knob
- C. Cooking temperature selection knob
- D. Timer knob
- E. Oven indicator light (when lit, the oven is heating up to the temperature set)
- F. Baking tray with grilling rack
- G. Chrome shelf
- H. Chrome side racks

How to use your oven

The various functions offered by the oven are selected by means of cooking mode knob “B” and cooking temperature knob “C” situated on the control panel.

Notice:

For the first time you use your oven, we recommend that you set the thermostat to the highest setting and

leave the oven on for about half an hour with nothing in it, with the oven door shut. Then, open the oven door and leave the oven to cool down. The odour that is often detected during this initial use is due to the evaporation of substances used to protect the oven during storage and until it is installed.

Notice:

Never place anything on the bottom of the oven when it is in operation because this could damage the enamel. Always place your cookware (dishes, aluminum foil, etc.) on the chrome shelf.

Fan heat 

Position of temperature selection knob "C": between 50°C and max

This method of cooking uses the circular element at the back of the oven while the heat is distributed by the fan, resulting in a fast and economical operation. Different types of food can be cooked simultaneously, without the transmission of smells and tastes from one to another. Food is cooked crisp on the outside but is soft and juicy in the middle.

Grill 

Position of temperature selection knob "C": Max.

The top heating element comes on.

The extremely high and direct heat is a healthy way to cook thin meat or fish cuts, to toast or brown, or to melt toppings.

Turbo grill 

Position of temperature selection knob "C": between 50°C and 200°C.


The top heating element and fan come on. This combination of features increases the effectiveness of the grill element and provides a less focused heat source.

This mode is ideal for cooking thicker meat or fish cuts like steaks or chops.

Timer(D)

The minute minder timer can be set to up to 2 hours. Please note - when the timer sounds, this does not de-activate the cooking. The oven needs to be turned off or adjusted manually.

Oven light

Set knob "B" to symbol  to turn the oven light on. The oven light is illuminated when the oven is in operation. This function is useful on its own for cleaning the oven interior.

Cooling fan

In order to cool down the exterior of the appliance, the oven is equipped with a cooling fan which comes on automatically when the oven is hot, and remains on after the oven is turned off, for a short time.

Note: do not turn off the power while the oven is cooling.

How to look after your oven

Before cleaning your oven or performing maintenance, disconnect it from the power supply. To extend the

life of your oven, it must be cleaned frequently:

- 1 Do not use steam equipment to clean the appliance.
- 2 The inside of the oven and stainless steel parts should be cleaned after every use, when the oven is cool, with a soft damp cloth with mild detergent. The detergent should be wiped away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders, etc...) and abrasive sponges or acids (such as limescale-remover, etc...) as these could damage the enamel and stainless steel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided on the packet.
- 3 If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.
- 4 There is a rubber seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should the seal become damaged, we recommend you refrain from using the oven and contact the Caple service department.
- 5 Never line the oven bottom with aluminum foil, as the accumulation of heat could compromise the cooking functionality and even damage the enamel.
- 6 Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.
- 7 Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass as they can scratch the surface, and could cause the glass to break.

How to remove the oven door

For a more thorough clean, you can remove the oven door, proceed as follows:

 
 
Open the door fully.

Lift up and turn the small levers situated on the two hinges;

Grip the door on the two external sides; close it slowly but not completely;

Pull the door towards you, pulling it out of its seat.

The door is replaced by reversing this process.

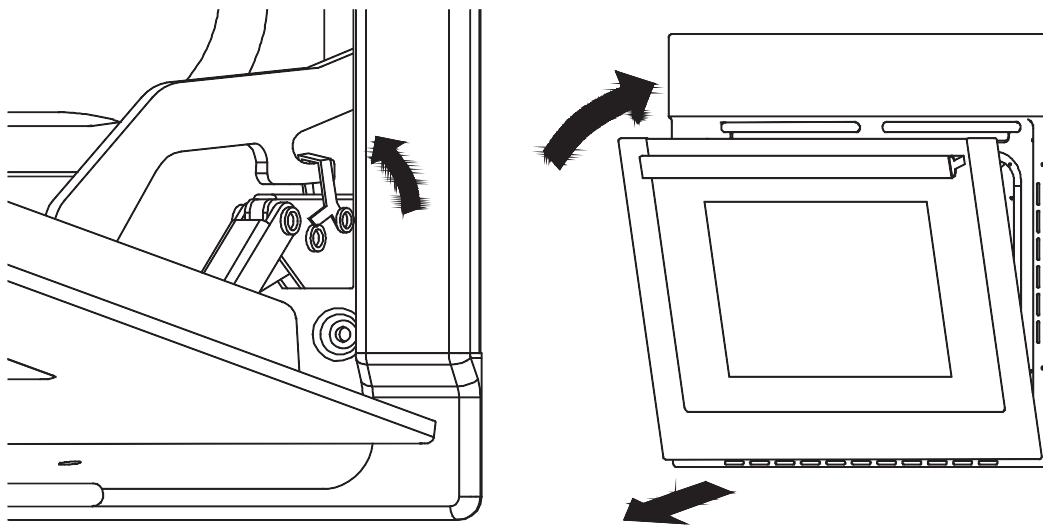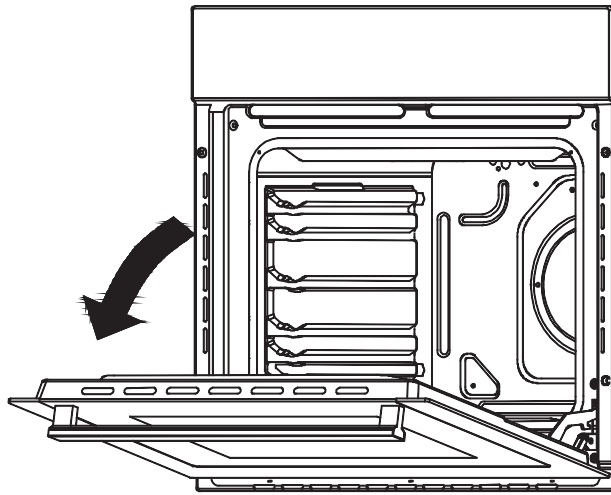

Replacing the oven lamp

- 1 **WARNING:** To avoid electric shock, always ensure that the appliance is switched off before replacing the lamp;
- 2 Remove the glass cover of the lamp-holder;
- 3 Remove the lamp and replace with a lamp resistant to high temperature (300°C) with the following characteristics:

 
--Voltage:220-240V

--Wattage 25W

--Type T25

--Lamp-holder type: E14

- 4 Screw the glass cover back on and reconnect the oven to the mains power supply

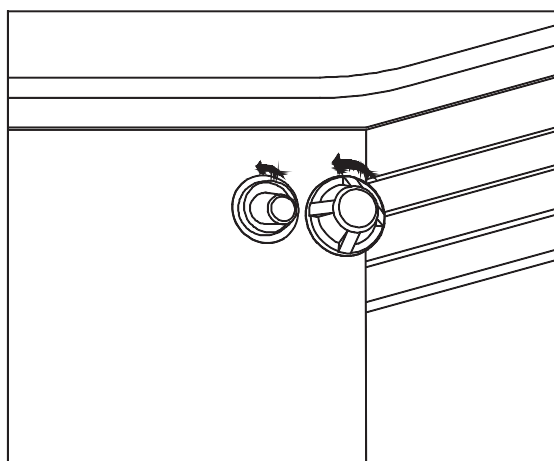

Practical cooking advice

The following directions are only a guideline which may be varied according to your own personal experience.

Using the grill

Important: always use the grill with the oven door shut.



For the “grill” mode, use the grilling rack inside the baking tray under the centre of the grill and place it on the 3rd or 4th rack from the bottom.

When using this mode, we recommend you set the temperature to the highest setting.



For the “turbo grill” mode, place the tray with the grilling rack on the 2nd or 3rd oven rack from the bottom.

When using this mode, we advise you to set the thermostat to 200°C.

Baking cakes

When baking cakes, always use a preheated oven. Make sure you wait until the oven has been preheated thoroughly (the indicator light “E” will turn off). Do not open the oven door during baking to prevent the cake from dropping. In general:

Cake is too dry

Increase the temperature by 10°C and reduce the cooking time.

Cake has dropped

Use less liquid or lower the temperature by 10°C.

Cake is too dark on top

Place it on a lower rack, lower the temperature, and increase the cooking time.

Cake is cooked well on the inside but sticky on the outside

Use less liquid, lower the temperature, and increase the cooking time.
--




Cake sticks to the tin
Grease the pan well and sprinkle it with a dusting of flour or use greaseproof paper.

I used more than one shelf level and the cakes are not all cooked the same
Use a lower temperature setting and leave some cakes for longer.

Cooking fish and meat

When cooking meat and fish, use temperature settings from 180°C to 220°C.

For red meat that's well done on the outside and tender and juicy on the inside, it is a good idea to start with a high temperature setting (200°C-220°C) for a short time, then turn the oven down afterwards.

Select or knob	Food to be cooked	Weight (in kg)	Cooking rack position from bottom	Preheating time (m)	Thermostat knob setting	Cooking time(m)
Fan heat 	Tarts	0.5	3	15	180	20-30
	Fruitcakes	1	2 or 3	15	180	40-45
	Plum cake	0.7	3	15	180	40-50
	Sponge cake	0.5	3	15	160	25-30
	Stuffed pancakes (on 2 racks)					
	Small cakes(on 2 racks)	1.2	2 and 4	15	200	30-35
	Cheese puffs (on 2 racks)	0.6	2 and 4	15	190	20-25
	Cream puffs (on 2 racks)	0.4	2 and 4	15	210	15-20
	Biscuits (on 3 racks)	0.7	1 and 3 and 5	15	180	20-25
	Meringues (on 3 racks)	0.7	1 and 3 and 5	15	180	20-25
		0.5	1 and 3 and 5	15	90	180
Grill 	Sole	1	4	5	Max	8-10
	Squid and Prawns	1	4	5	Max	6-8
	Kebabs	1	4	5	Max	6-8
	Cod fillet	1	3/4	5	Max	10
	Grilled vegetable	1	4	5	Max	10-15
	Veal steak	1	4	5	Max	15-20
	Cutlets	1	4	5	Max	15-20
	Hamburgers	1	4	5	Max	7-10
	Mackerels	1	4	5	Max	15-20
	Toasted sandwiches	0.4	4	5	Max	2-3
Turbo grill 	Grilled chicken	1.5	3	5	200	55-60
	Cuttlefish	1.5	3	5	200	30-35

NB: Cooking times are approximate and may vary according to personal taste.

Health and safety

To maintain the efficiency and safety of this appliance, we recommend that you do the following:

- 1 Contact the Caple service department on 0870 850 8734 if you have any questions or concerns regarding your appliance.
- 2 Always use original spare parts.
- 3 When handling the appliance, we recommend you always use the purpose provided handles recessed into the sides of the oven to prevent harm or damaging the appliance itself.
- 4 This appliance is designed for non-commercial, house-hold use and its functions must not be changed.
- 5 These instructions are only valid for the countries whose symbols appear on the manual and the serial number plate.
- 6 The electrical system of this appliance can only be used safely when it is correctly connected to an efficient earthing system in compliance with current safety standards.
- 7 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety; Interaction with the packaging of this appliance (bags, polystyrene, nails etc) can be potentially hazardous and should also be avoided by children or infirm persons.
- 8 Children should be supervised to ensure that they do not play with the appliance.
- 9 During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- 10 During and immediately after use, the heating elements and some parts of the oven door may become extremely hot. Do not touch these areas of the oven and ensure children are kept at a safe distance until the oven has cooled.

Avoid the following:

- touching the appliance with wet parts of the body;
- using the appliance when barefoot;
- pulling on the appliance or the supply cable to unplug it from the electrical outlet;
- improper or dangerous operations;.
- obstructing the ventilation or heat dissipation slot;
- allowing power supply cables of small appliances to come into contact with the hot parts of the appliance;
- exposing the appliance to atmospheric agents such as rain, or sunlight;
- using the oven for storage purposes;
- using flammable liquids near the appliance;
- using adapters, multiple sockets and/or extension leads;
- attempting to install or repair the appliance without the assistance of qualified personnel.
- WARNING: Accessible parts may become hot during use Young children or infirm persons should be kept away.

Qualified personnel must be contacted in the following cases:

- installation (following the manufacturer's instructions);
- when in doubt about operating the appliance;
- replacing the electrical socket when it is not compatible with the appliance plug.

Contact the Caple service department on 0870 850 8734 in the following instances:

- If in doubt about the soundness of the appliance after removing it from its packaging;
- if the power supply cable has been damaged or needs to be replaced;
- if the appliance breaks down or functions poorly.

You must do as following:

- only use the appliance to cook food and nothing else;

- check the soundness of the appliance after it has been unpacked.
- disconnect the appliance from the electrical mains if it is not functioning properly and before cleaning or performing maintenance.
- when left unused, unplug the appliance from the electricity mains;
- use oven gloves to place cookware in the oven or when removing it.
- always grip the oven door handle in the centre.
- make sure the knobs B and C are in the “●” position when the appliance is not in use.
- disconnect the oven from the mains when you decide not to use the appliance for long periods of time.
- the manufacturer may not be held responsible for any damage due to: incorrect installation, improper, incorrect or irrational use.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service engineer to avoid any risks to safety.
- The appliance is for indoor use only.

 
Installation

The appliance must be installed only by a qualified person in compliance with the instructions provided. The manufacturer declines all responsibility for improper installation which may be harmful or may damage property.


Important: the power supply to the appliance must be cut off before any adjustments or maintenance work carried out.

Installation of built-in ovens


In order to ensure that the built-in appliance functions properly, the cabinet containing it must be appropriate. The figure below gives the dimensions of the cut-out for installation under the counter or in a wall cabinet unit.

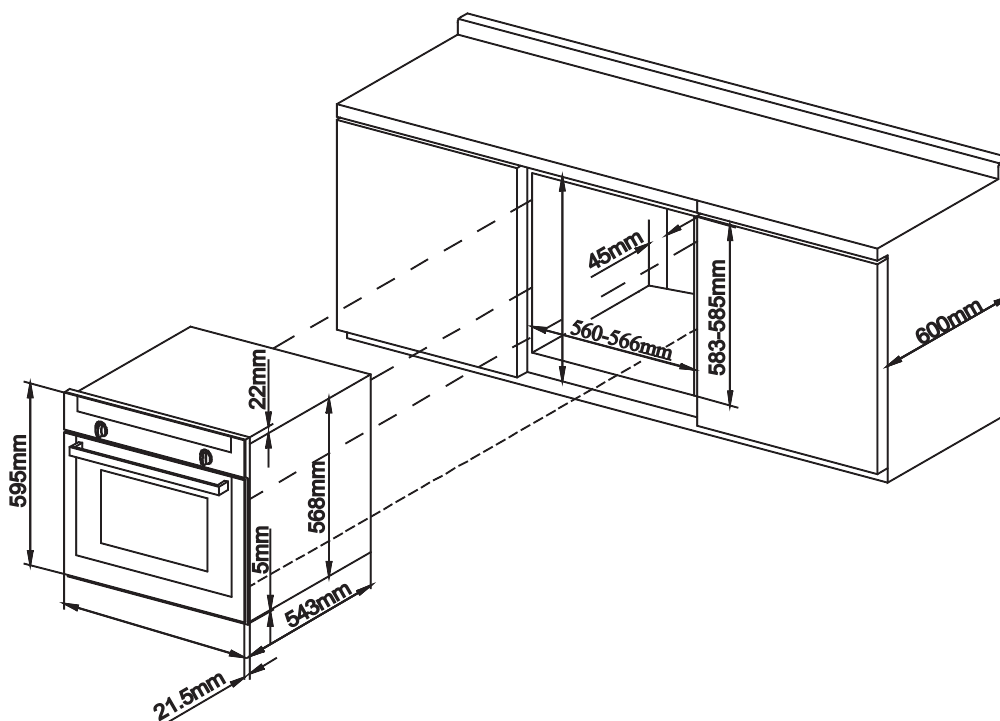

 N.B.: Installation in compliance with the consumption declaration

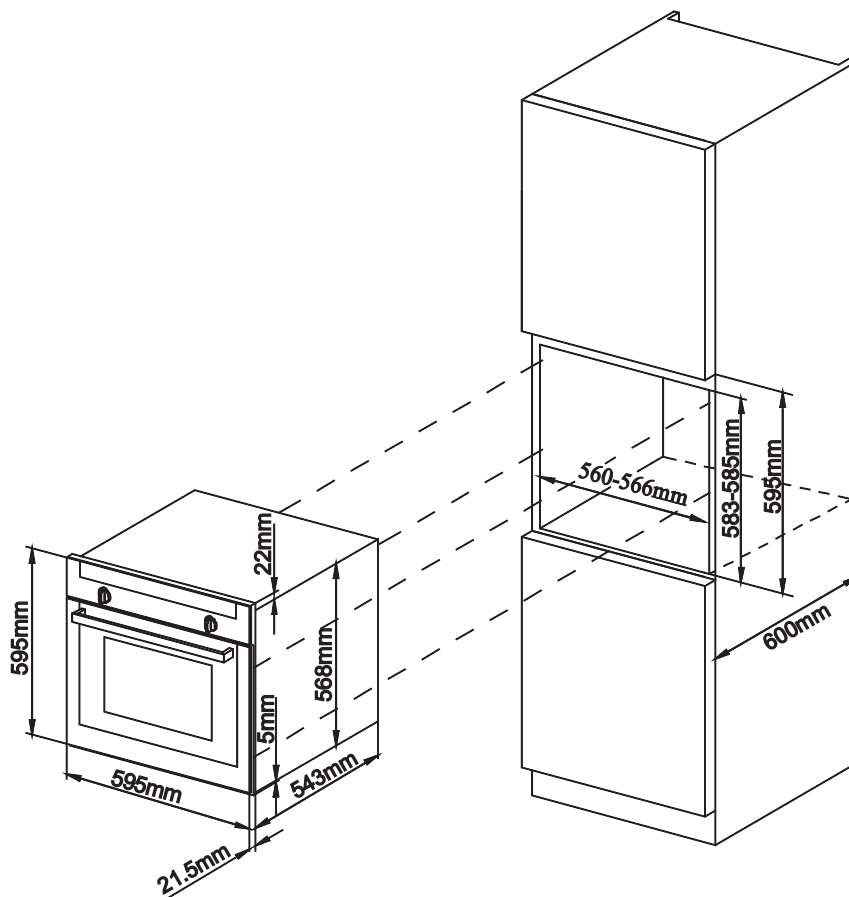

 In order to ensure adequate ventilation, the back panel of the cabinet unit must be removed. Installing the oven so that it rests on two strips of wood is preferable. If the oven rests on a continuous, flat surface, there must be an aperture of at least 45x560mm.

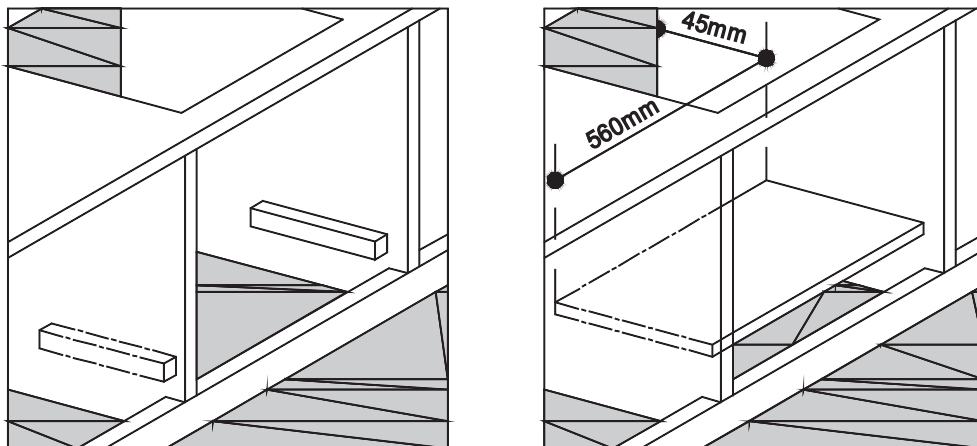


The panels of the adjacent cabinets must be made of heat resistant material. In particular, cabinets with a veneer exterior must be assembled with glues which can withstand temperature of up to 100°C. In compliance with current safety standards, contact with the electrical parts of the oven must not be possible once it has been installed.


All parts which ensure the safe operation of the appliance must be removable only with the aid of a tool. For the correct centring of your appliance, position the 4 tabs on the sides of the oven in correspondence

with 4 holes on the perimeter of the frame. In particular, if the cabinet side panel:

 
- 1 is 20mm thick: removable part of the tab must be removed (Fig A);
- 2 is 18mm thick: use the first groove, which is factory-set (Fig B)
- 3 is 16mm thick: use the second groove (Fig.)

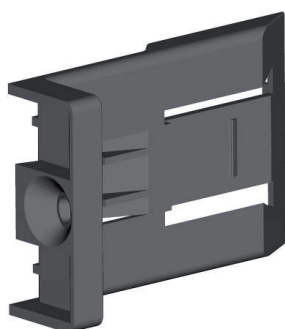

<Fig A>

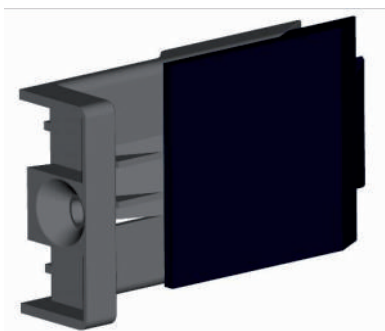 


<Fig B>

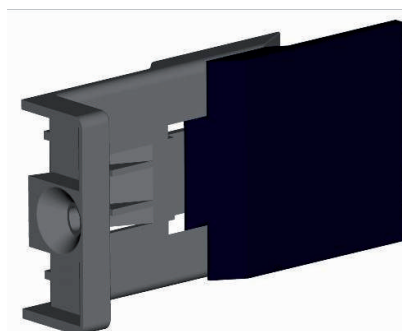 

<Fig C>

 To fasten the oven to the cabinet, open the door of the oven and attach it by inserting the 4 metal screws into the 4 holes located on the perimeter of the frame.

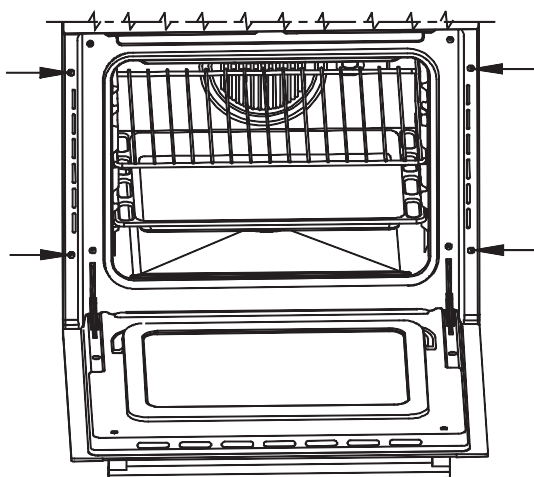

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



Technical specifications

Inner dimensions of the oven:

Width 43.5cm

Depth 40cm

Height 32cm

Inner volume of the oven

56Liters

Voltage and frequency of power supply:

220-240V 50/60Hz or 50Hz 2250W

(see data plate)



This appliance conforms to the following European Economic Community directives:

-2006/95/EC (Low Voltage) and subsequent modifications;

-2004/108/EC (Electromagnetic Compatibility) and subsequent modifications.

Caple
Fourth Way
Avonmouth
Bristol
BS11 8DW

www.caple.co.uk