



DI441

Caple Fully Integrated
Deluxe Dishwasher

INSTRUCTION
MANUAL

How to use the appliance

 
Further indications are given in the single chapters and in the user instructions.

Open the door,
switch on the appliance

Press the **ON** button.

How to fill the
detergent dispenser

Compartment **A**:
With each wash cycle.
Compartment **B**:
For programmes with pre-wash only.
If using combined action dishwasher
tabs, follow the user instructions!

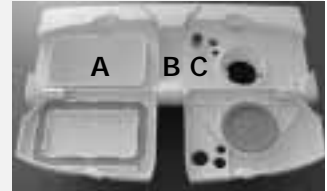

Check the rinse aid level

Mechanical indicator **C**.
Electric indicator on control panel (if provided).

Check the regeneration
salt level

**On models with water softener
system only.**
Mechanical indicator **D**. Electric
indicator on control panel (if provided).



Load the racks

Refer to the dishwasher loading instructions.

Select a programme

The last programme selected will light up.
Press the **▶** button until the desired programme lights up.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is
then memorised (even in the
event of power failure).

"Change programme"

- Press the **START** button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the **START** button again.

Turn on the water tap
close the dishwasher door

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

At the end of the programme an acoustic signal will sound.
Only after the **START** button has switched off: press the **OFF** button.
All the indicator lamps switch off.

Turn off the water tap,
unload the racks

Warning: when the door is opened steam comes out!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

 
Fold down glass holder (A):

Depending on the position, for example small or long-stemmed glasses.

Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

Long-handled utensils (e.g. carving forks, knives) must be arranged with the sharp end facing in towards the appliance.

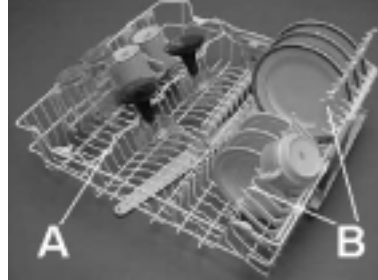


Rack height adjustment (also when loaded):

Lower adjustment:

Pull the **two** rack handles (C) outwards and lower the rack.

Upper adjustment:

 
Pull the **two** rack handles (C) upwards until the rack clicks into place (factory setting).

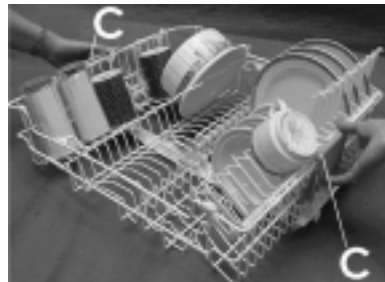

The rack must be level on both sides.

Lower rack:

 
Plate holders (D).

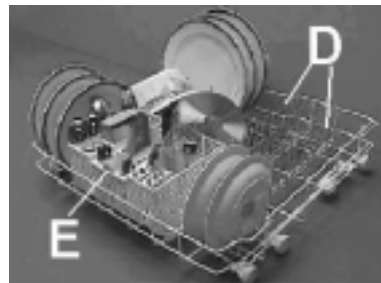

Cutlery basket (E)

A grid (F) can be fitted onto the cutlery basket to keep items separated.

 Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.

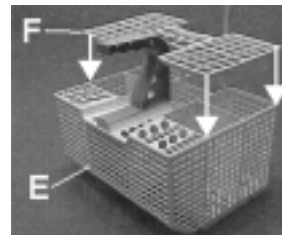

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, tin, hand-decorated crockery (unglazed), silver cutlery.

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	<ul style="list-style-type: none"> • No water supply. • The appliance does not load sufficient water. • There is a power failure. • Starting the selected programme. 	<ul style="list-style-type: none"> • Open the tap. • Clean the water supply tap filter. • Ensure there are no kinks in the water hose. • Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the safety circuit breaker. • The programme can be set to "0" to start.
If crockery is not perfectly dry	<ul style="list-style-type: none"> • Insufficient rinse aid. • Residual water in cavities. 	<ul style="list-style-type: none"> • Increase dosage *. • Load crockery at an angle.
If crockery is not perfectly clean	<ul style="list-style-type: none"> • The water jet does not reach the crockery. • Insufficient detergent. • Unsuitable programme. • Spray arms blocked. • Spray arm nozzles clogged. • Incorrect detergent/detergent too old. 	<ul style="list-style-type: none"> • Arrange crockery so that items do not touch each other. Load crockery upside down. • Follow recommended detergent dosage. • Select a more intense wash cycle. • The spray arms must be able to turn freely. • Remove any impurities obstructing the water flow *. • Use a good quality detergent.
Sandy or grainy residues	<ul style="list-style-type: none"> • Clogged filters. • Filters incorrectly assembled. 	<ul style="list-style-type: none"> • Check filters regularly/if necessary clean *. • Insert the filter correctly *.
Colour of plastic parts faded	<ul style="list-style-type: none"> • Tomato/carrot juice, ... 	<ul style="list-style-type: none"> • Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
<ul style="list-style-type: none"> • Removable • Not removable 	<ul style="list-style-type: none"> • Streaks on the crockery/glasses. • Streaks on glasses. • Layer of salt on crockery/glasses. • Insufficient water softening, calcium deposits. 	<ul style="list-style-type: none"> • Increase the rinse aid dosage *. • Reduce the rinse aid dosage *. • Close the salt container lid properly *. • Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	<ul style="list-style-type: none"> • Cannot be washed in the dishwasher. 	<ul style="list-style-type: none"> • Use suitable glasses.
Rust on cutlery	<ul style="list-style-type: none"> • Not made of stainless steel. 	<ul style="list-style-type: none"> • Use suitable cutlery.
Identifying appliance faults	<ul style="list-style-type: none"> • The START indicator lamp flashes. • Indicator F... (if provided). 	<ul style="list-style-type: none"> • Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault
- The appliance type and model
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.






Before using the dishwasher, read the user instructions!


DI 441

Quick Reference Guide

   GB



Options ³⁾

 

"Delayed start" button
The wash cycle can be programmed to start after 3-6-9 hours. Then press the Start button. The wash programme will start at the set time.

Indicators



Add rinse aid



Add regeneration salt
Only add regeneration salt immediately before starting a wash programme.

Programme chart				Detergent ²⁾		Consumption ³⁾		
Programmes		Loading instructions		A	B	Litres	kWh	Minutes
	Pre-Rinse	cold	Crockery to be washed later.	-	-	5.0	0.02	10
	Quickwash	40°C	Lightly soiled crockery with no dried-on food.	X	-	13.0	0.70	30
	Eco ¹⁾	50°C	Normally soiled crockery.	X	X	16.0	1.24	133
	Intensive	70°C	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	17.0	1.65	145
	Half Load	50°C	Ideal for washing a half load of lightly or normally soiled crockery.	X	X	13.0	1.00	130

1) Reference programme for energy label EN 50242;
2) Refer to "User instructions";

3) Programme data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, options, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

5019 696 93212

(We reserve the right to make technical modifications)