




TDF160

Caple Freestanding Tumble Dryer




Technical information


Caple Electronic Sensing Condenser Dryer - Exploded View 1

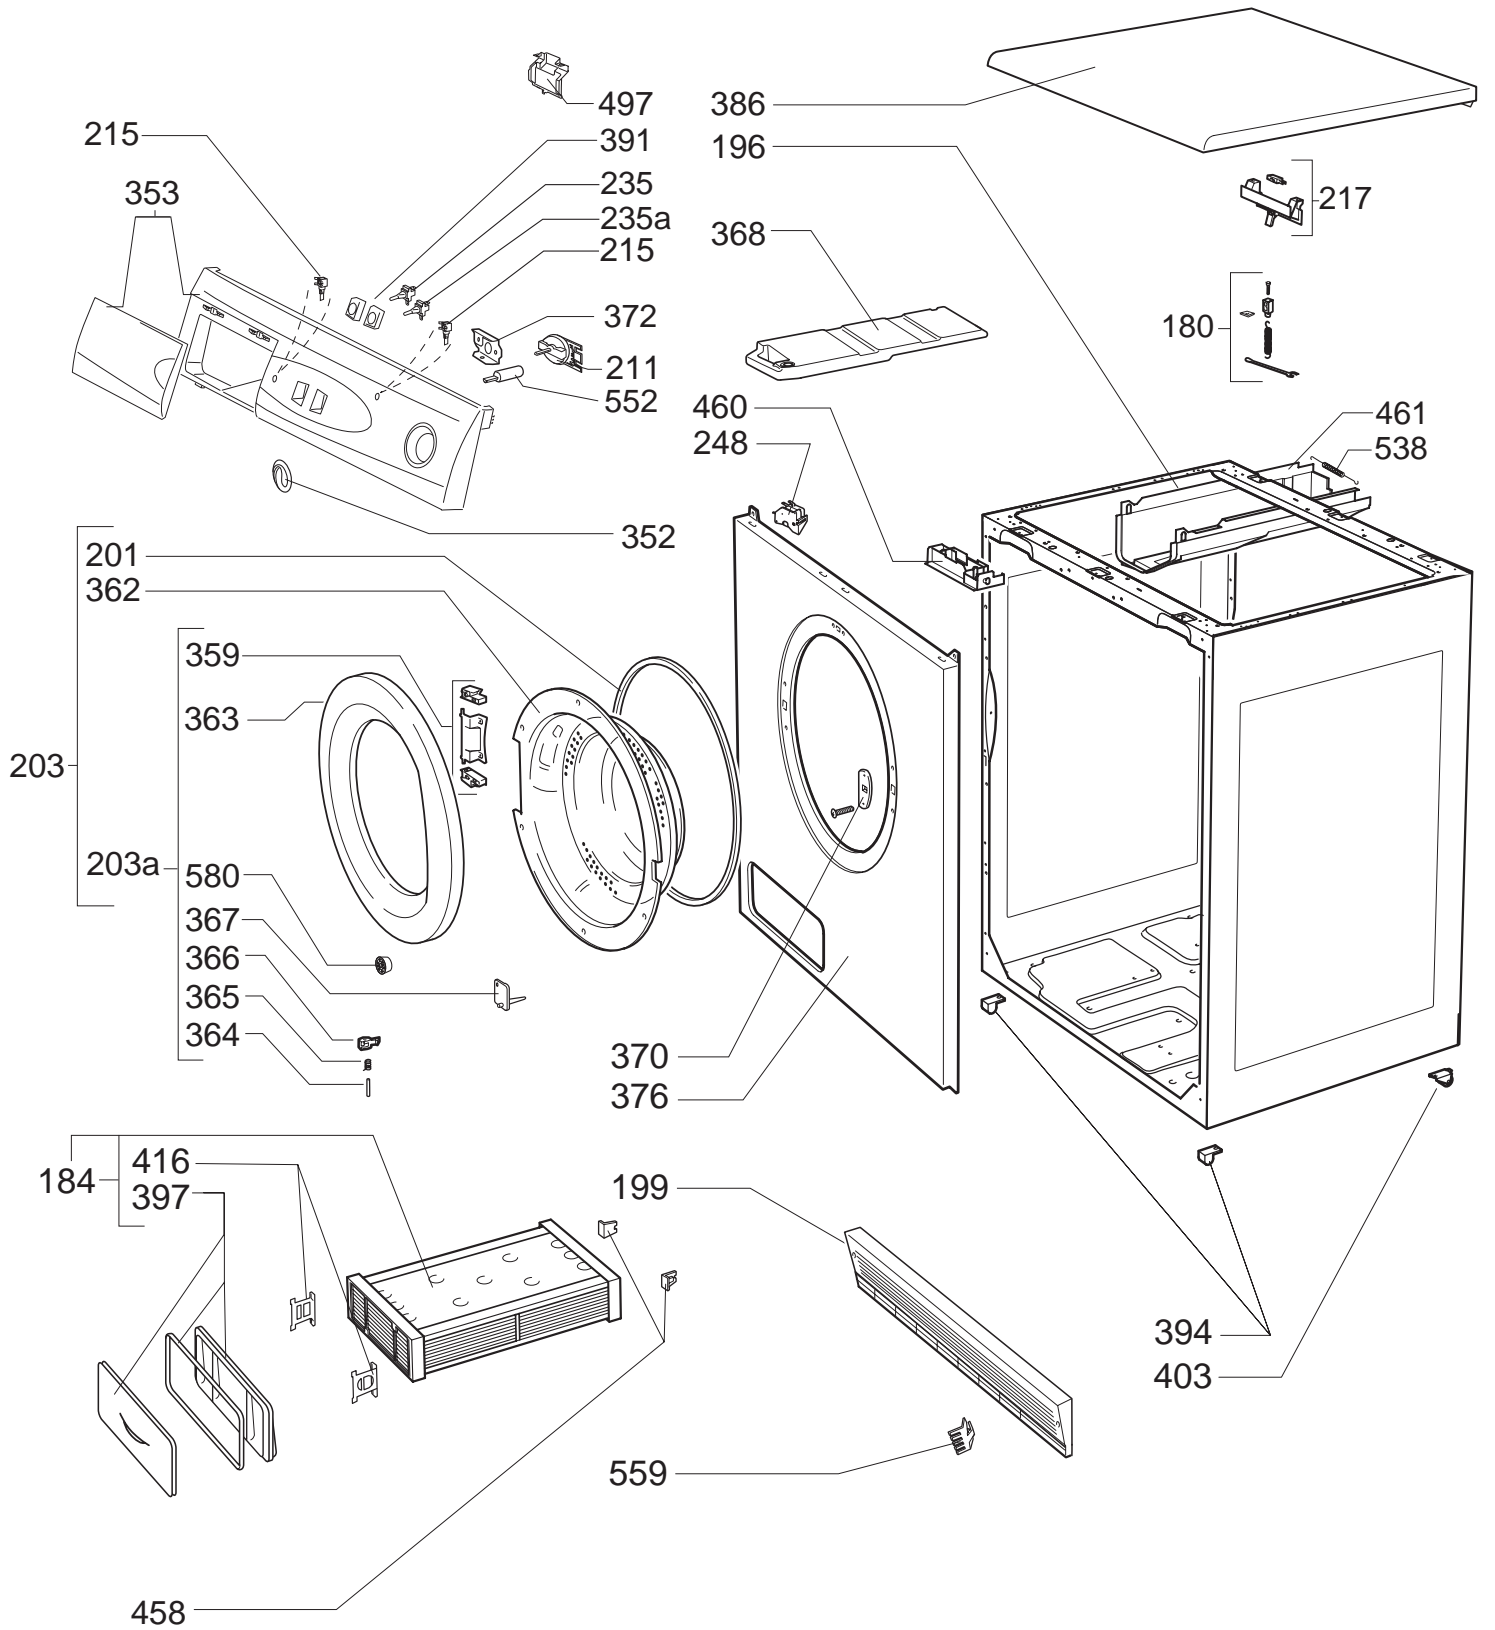


Caple Electronic Sensing Condenser Dryer - Exploded View 2

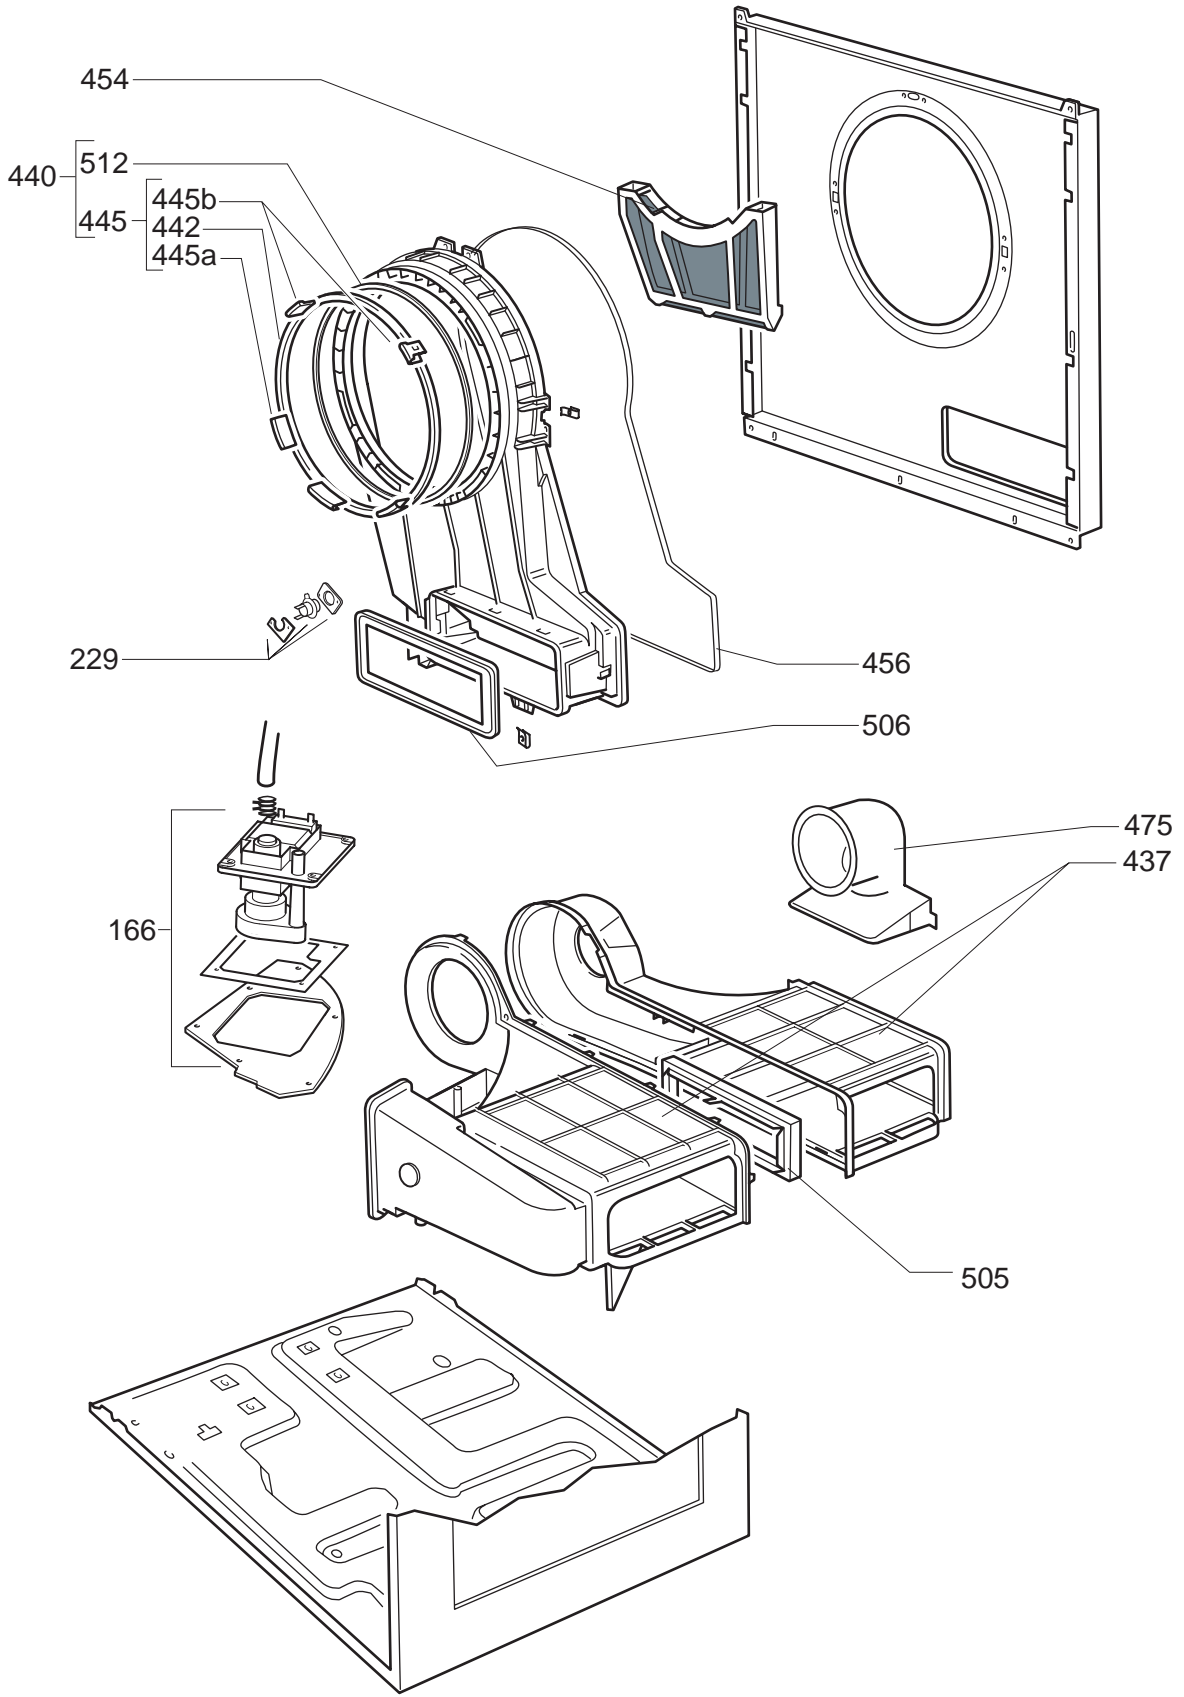


Caple Condenser Dryer - Exploded View 3

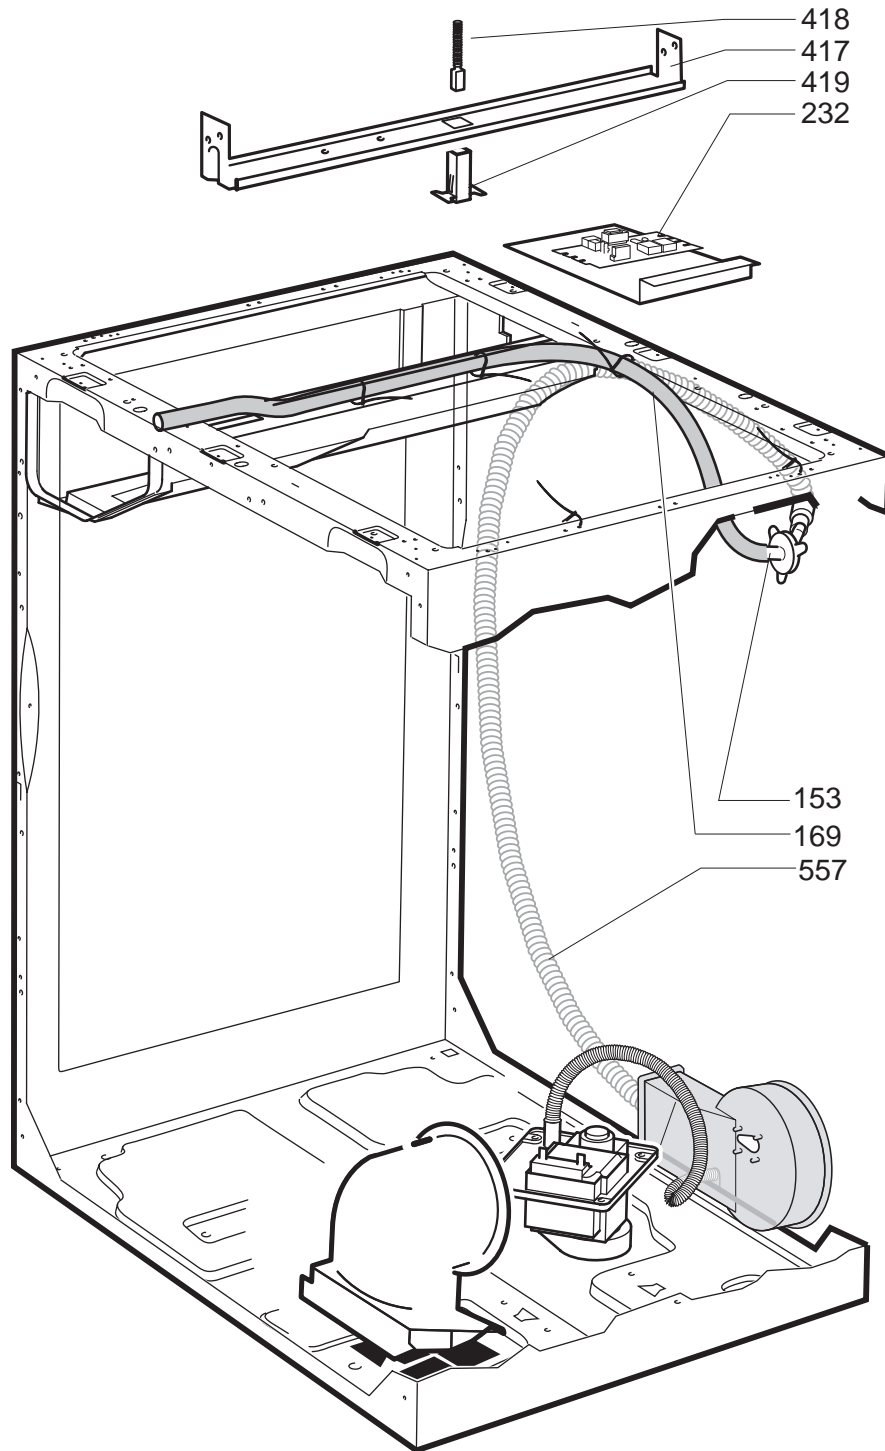

Caple Electronic Sensing Condenser Dryer - Exploded View 4

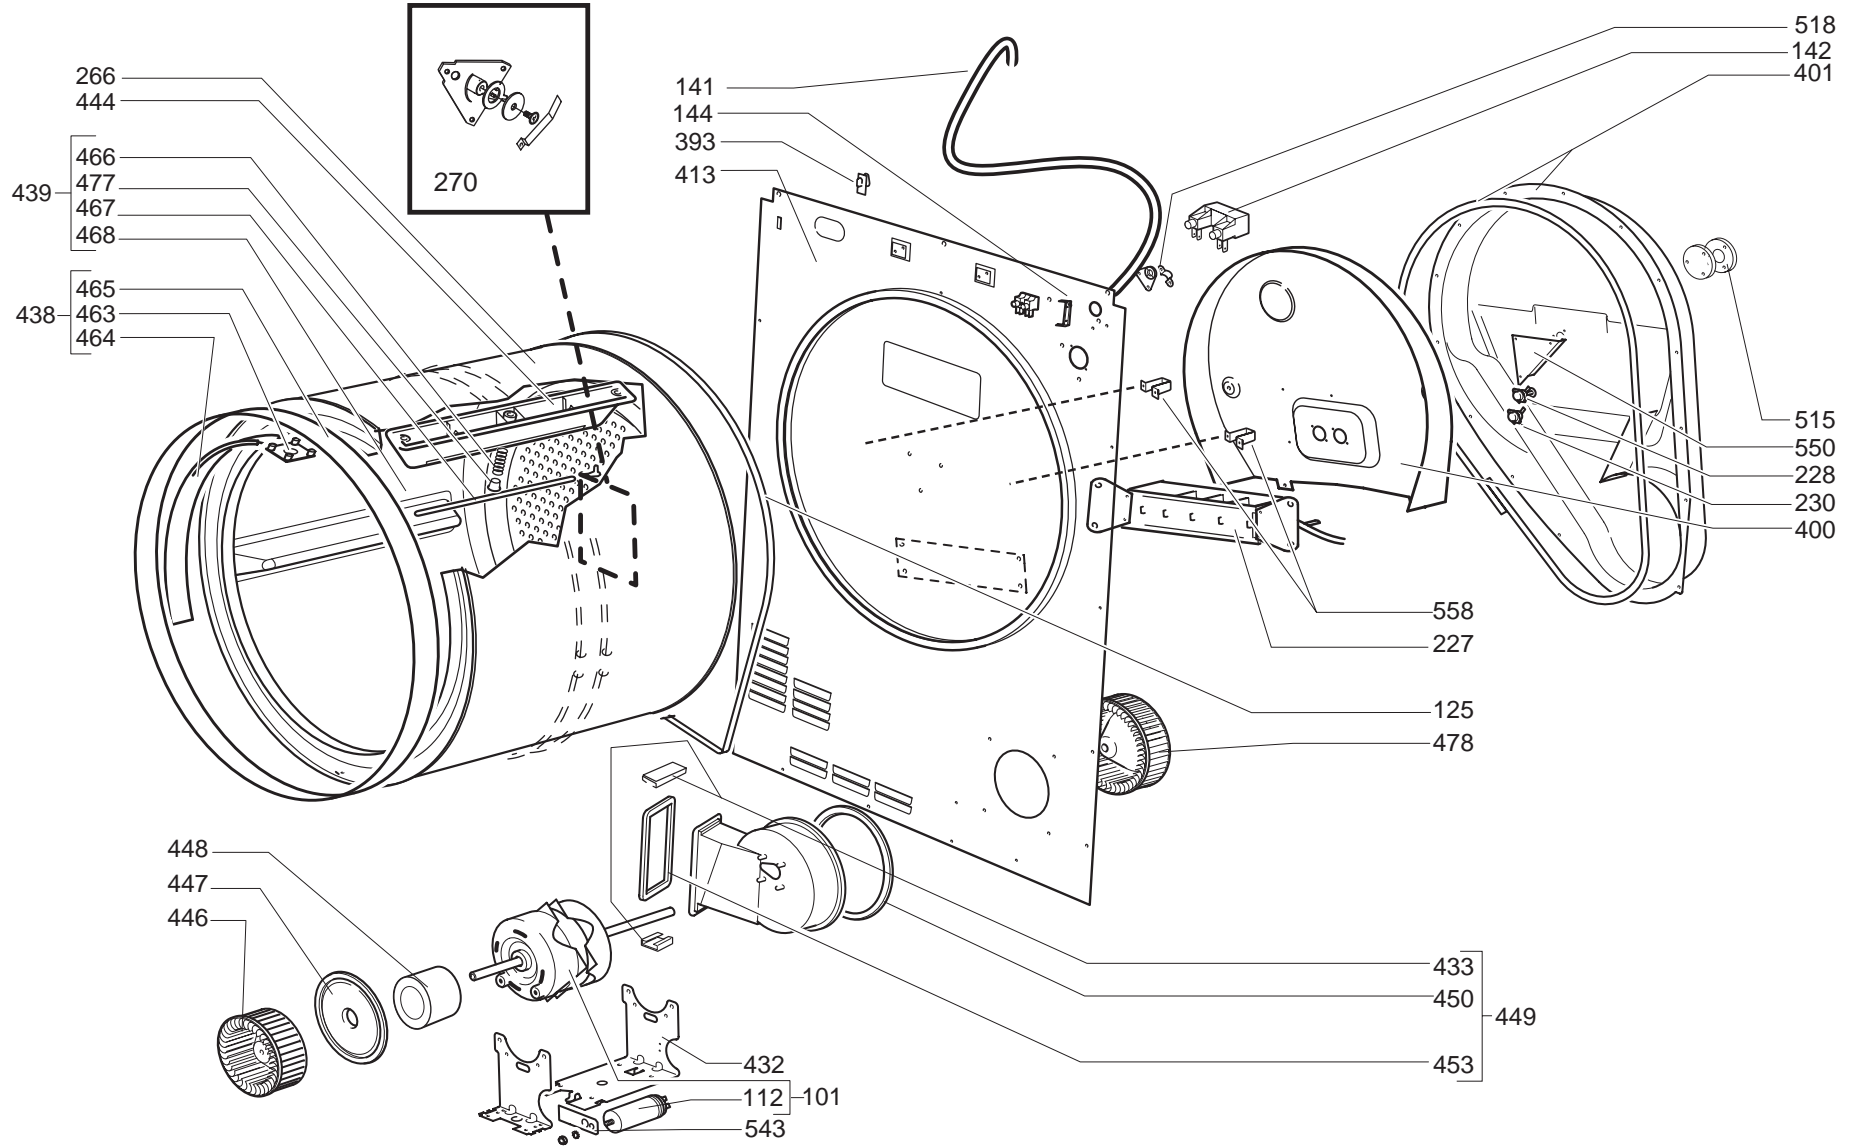

Cable Electronic Sensing Condenser Dryer - Wiring Diagram

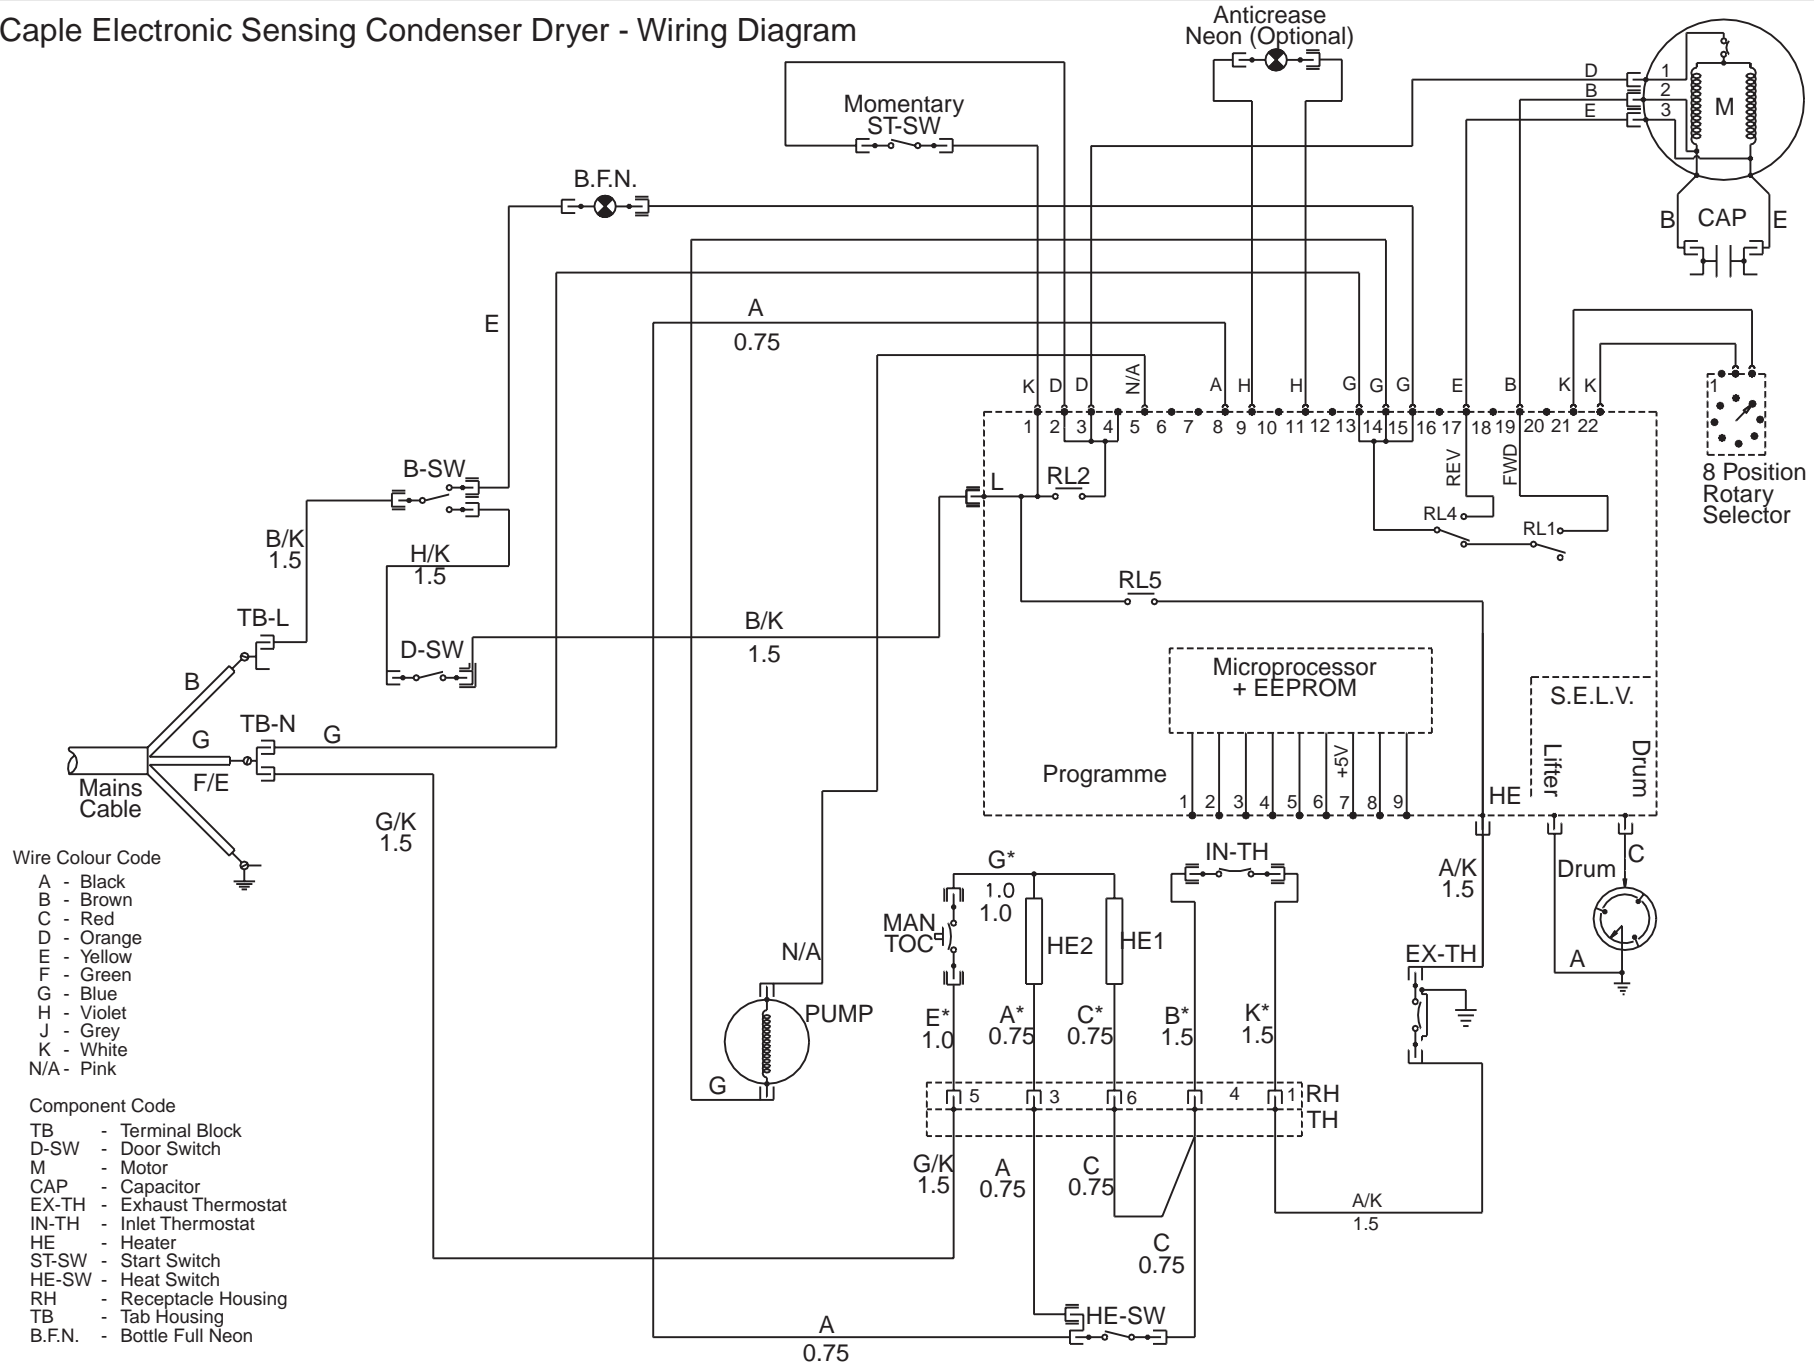

Caple Electronic Sensing Condenser - Parts List

Item	Description	Part Number	Expl.View
101	Motor + 8µf Capacitor Assembly	4213 092 21001	4
112	Capacitor Assembly 8µf	4213 092 08091	4
125	Drive Belt	4213 092 19501	4
141	Mains Cable	4213 076 35123	4
142	Terminal Block	4213 078 44621	4
144	Earth Tab Assembly	4213 092 41181	4
153	Water Valve	4213 077 85111	3
166	Pump Assembly	4213 092 25211	2
169	Pipe	4213 092 40391	3
180	Bottle Switch Adjuster Assembly	4213 092 17431	1
184	Condensing Unit/Heat Exchanger	4213 092 45991	1
196	Cabinet Assembly	4213 092 43691	1
199	Plinth Assembly	4213 092 46811	1
201	Door Seal	4213 092 21051	1
203	Full Door/Window Assembly	4213 092 46041	1
203a	Door Frame Assembly	4213 092 46051	1
211	Dreef 8 Position Switch	4213 078 54732	1
215	Bottle/Anti-crease Neon Assembly	4213 092 09901	1
217	Bottle Switch Assembly	4213 092 21291	1
227	Heater Assembly	4213 092 44911	4
228	Heater TOC (Manual Reset) Assembly	4213 092 21261	4
229	Exhaust Thermostat	4213 092 21081	2
230	Inlet Thermostat	4213 092 21251	4
232	Programmed PCB	4213 078 57162	3
235	High/Low Heat Switch	4213 078 52401	1
235a	Start Switch	4213 078 52762	1
248	Door Micro-Switch Assembly	4213 092 05251	1
266	Drum Assembly (includes items 270 & 444)	4213 092 39101	4
270	Drum Shaft/Bearing Kit Assembly	4213 092 05591	4
352	Timer Knob Assembly	4213 092 45741	1
353	Control Panel Assembly	4213 092 57391	1
359	Door Hinge Assembly	4213 092 26071	1
362	Window	4213 077 44095	1
363	Door Frame	4213 092 45671	1
364	Latch Pivot	4213 075 13013	1
365	Latch Spring	4213 075 70833	1
366	Door Latch	4213 077 53413	1
367	Switch Strike	4213 077 83571	1
368	Bottle	4213 092 17941	1
370	Latch Guide	4213 077 40992	1
372	Timer Bracket	4213 070 10932	1
376	Front Panel Assembly	4213 092 46021	1
386	Top Cover Assembly	4213 092 46211	1
391	Buttons Assembly	4213 092 45781	1
393	Flex Support Clip	4213 077 40982	4
394	Foot	4213 077 39833	1
397	Condenser Door Assembly	4213 092 43721	1
400	Insulating Plate	4213 092 44951	4
401	Rear Banjo Duct Assembly	4213 092 44941	4
403	Roller Assembly	4213 092 35651	1
413	Back Panel Assembly	4213 092 40371	4
416	Heat Exchanger Links	4213 092 37481	1
417	Brush Holder Support RH	4213 070 12773	3
418	Brush Assembly	4213 078 45023	3

Caple Electronic Sensing Condenser - Parts List

419	Brush Holder	4213 077 39503	3
432	Motor Bracket Assembly	4213 092 26161	4
433	Seal Clamp Kit	4213 092 27661	4
437	Condenser Housing Assembly	4213 092 21151	2
438	Slip Ring Assembly	4213 092 05731	4
439	Sensing Strip Assembly	4213 092 05691	4
440	Banjo /Seals/Clips/Beaing Pads Assembly	4213 092 21161	2
442	Front Seal	4213 077 40942	2
444	Lifter	4213 077 41248	4
445	Front Bearings/Drum Seal Assembly	4213 092 21171	2
445a	Bearing Pads (long)	4213 077 40962	2
445b	Bearing Pads (short)	4213 077 40952	2
446	Cooling Air Fan	4213 077 56173	4
447	Fan Cover Assembly	4213 092 21181	4
448	Seal Fan Access Cover	4213 077 08871	4
449	Inlet Duct Case Assembly	4213 092 21241	4
450	Inlet Duct Panel Seal	4213 077 09041	4
453	Inlet Duct Rear Seal	4213 077 08568	4
454	V Filter	4213 092 18351	2
456	Banjo Seal	4213 077 08487	2
458	Condenser Latch Set	4213 092 21191	1
460	Pivot Bracket	4213 077 51408	1
461	Bottle Housing Assembly	4213 092 17951	1
463	Location Grommet	4213 077 07711	4
464	Slip Ring Insulator	4213 077 41253	4
465	Slip ring	4213 075 13141	4
466	Ring Spring	4213 075 70931	4
467	Sensing Strip	4213 075 13152	4
468	Sensing Strip Clip	4213 077 41176	4
475	Inlet Duct Assembly	4213 092 37531	2
477	Ring Spring Plug	4213 074 81353	4
478	Re-Circulating Fan	4213 092 34011	4
497	Switch Cover	4213 177 01141	1
505	Housing Seal	4213 077 09032	2
506	Housing - Banjo Seal	4213 077 60796	2
512	Front Felt	4213 078 55972	2
515	T.O.C. Cover & Seal Unit	4213 092 09491	4
518	Cable Clamp	4213 077 47303	4
538	Housing Drawbar Spring	4213 078 53494	1
543	Capacitor Bracket	4213 070 09324	4
550	Anti-Foul Plate	4213 070 12601	4
552	Timer Shaft Extension	4213 077 59953	1
557	Drain Hose Kit	4213 092 40381	3
558	Heater Mounting Brackets (Top Hats)	4213 070 14471	4
559	Exhaust Deflector	4213 077 83041	1
580	Door Buffer	4213 077 89071	1

Not Shown On Exploded Views

User Instruction Booklet	4213 194 07071
--------------------------	----------------