



CR9108

Caple 900mm Range Cooker






Technical information



CR9108



Caple 900mm Range Cooker

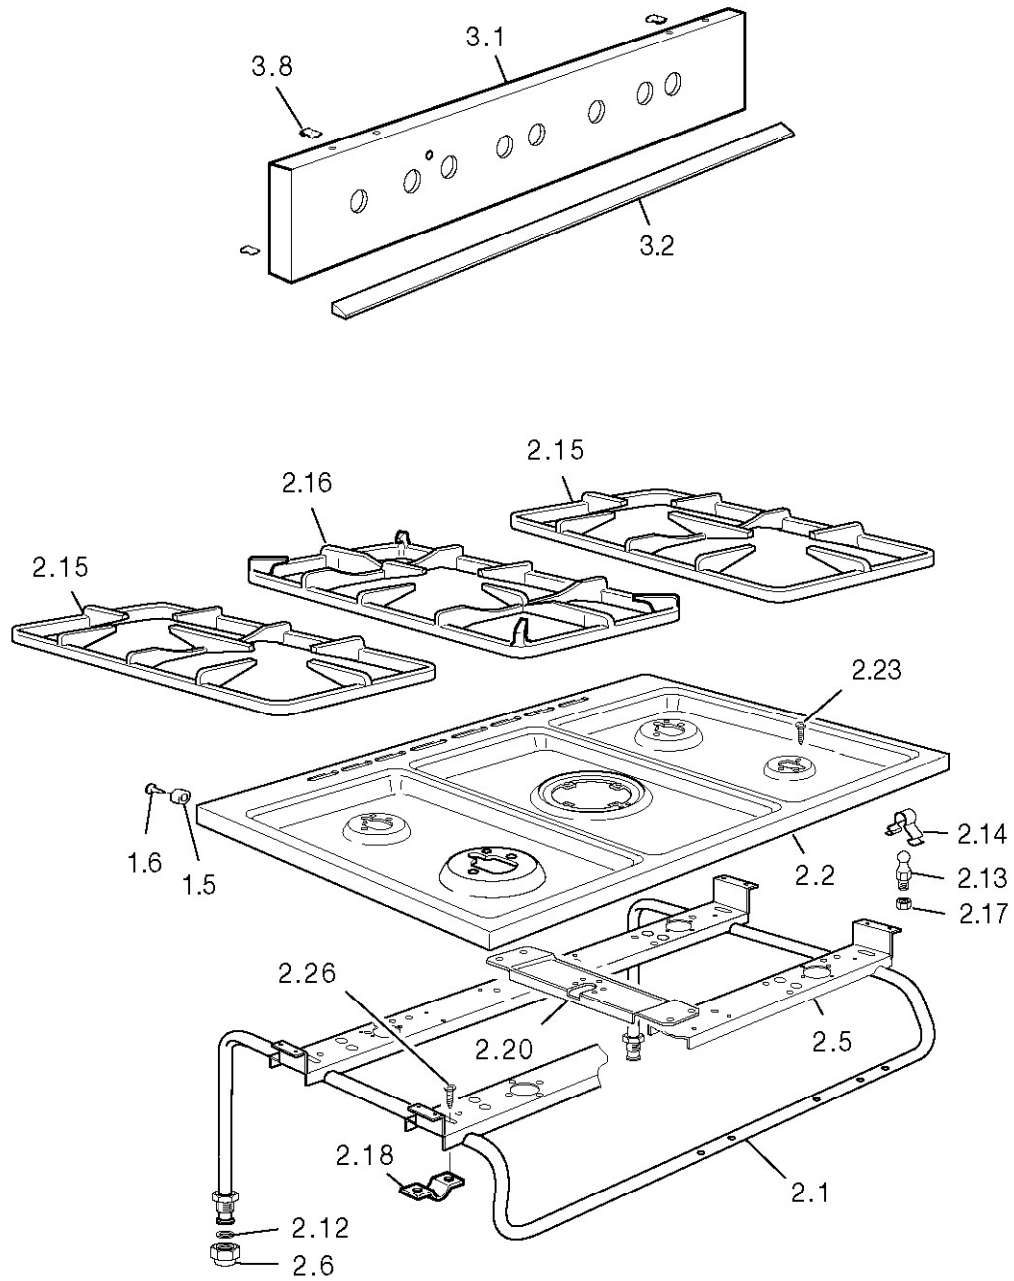

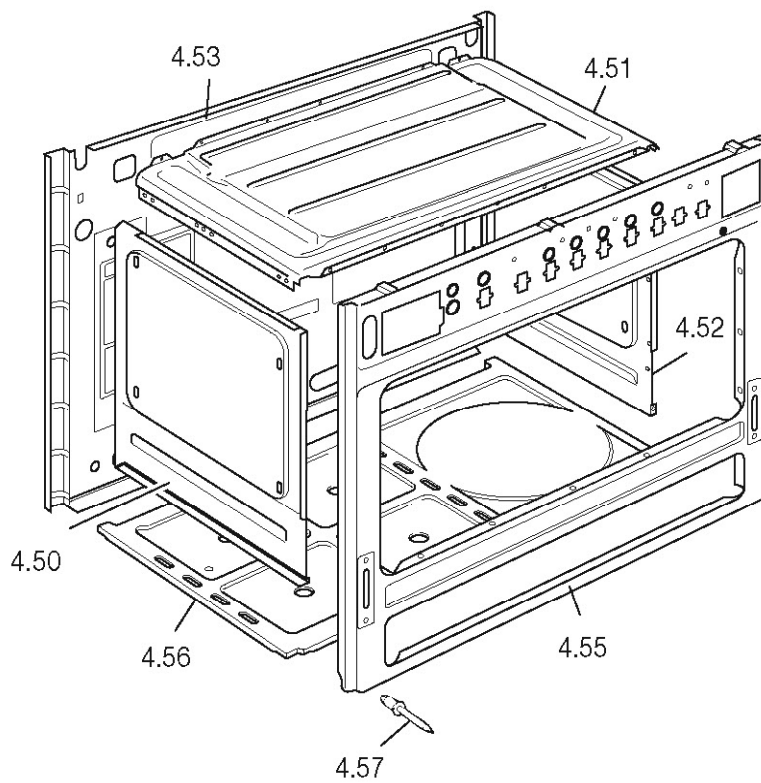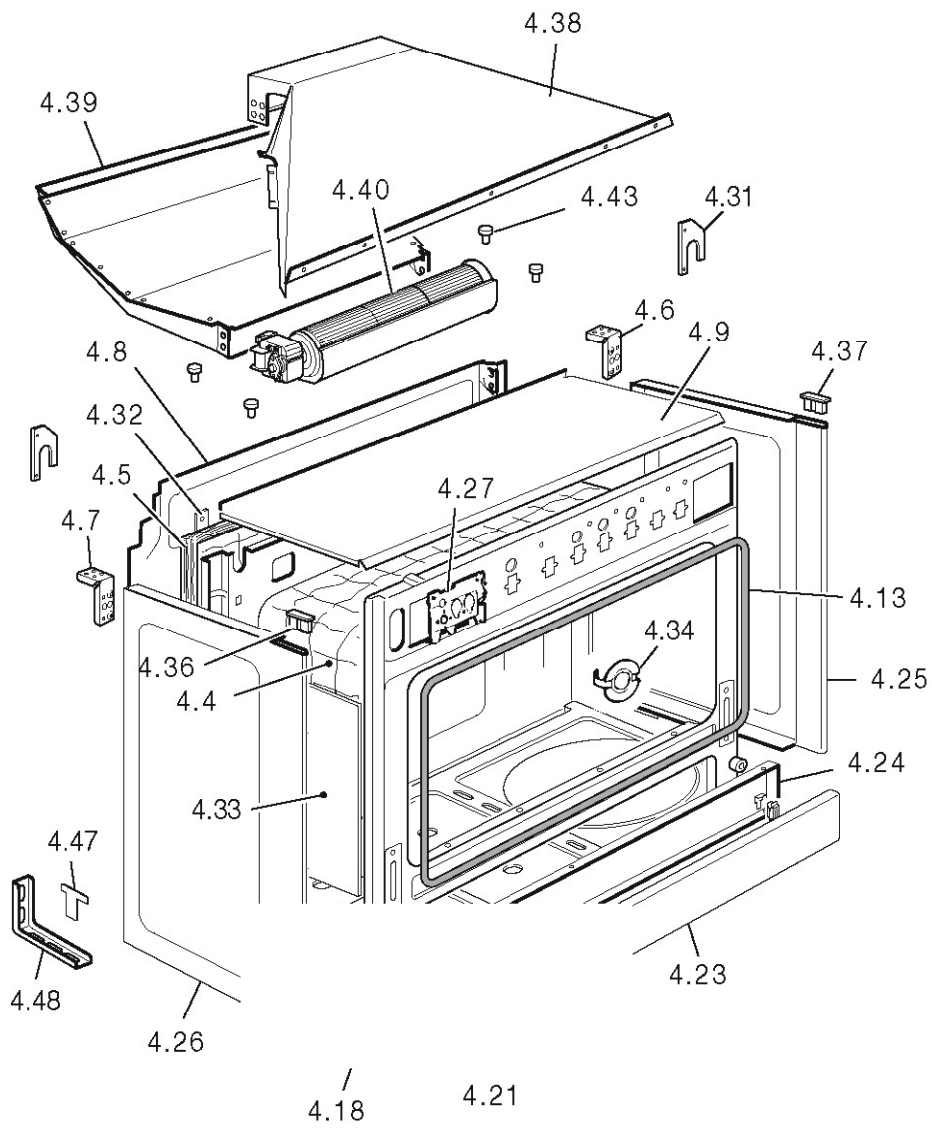

CR9108


Caple 900mm Range Cooker

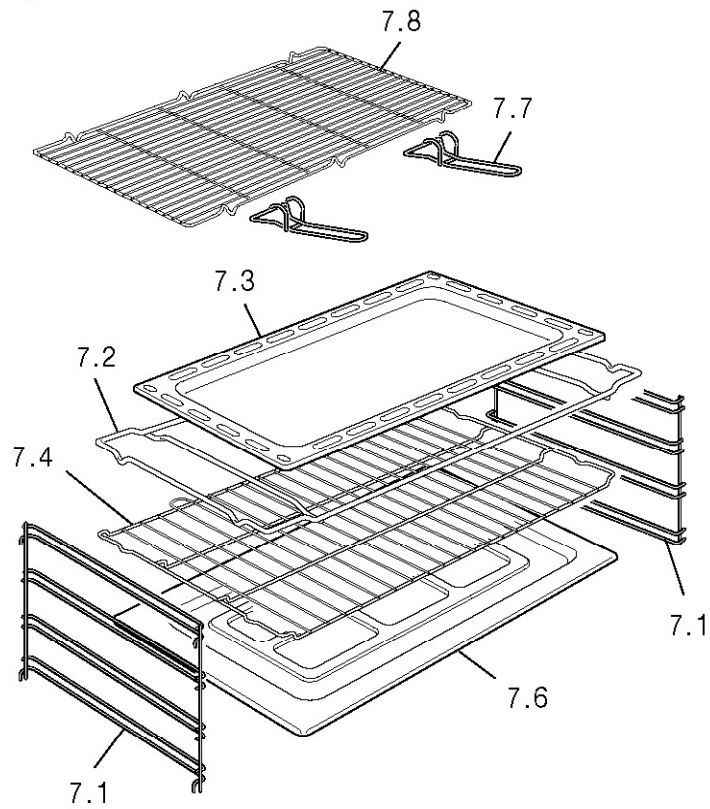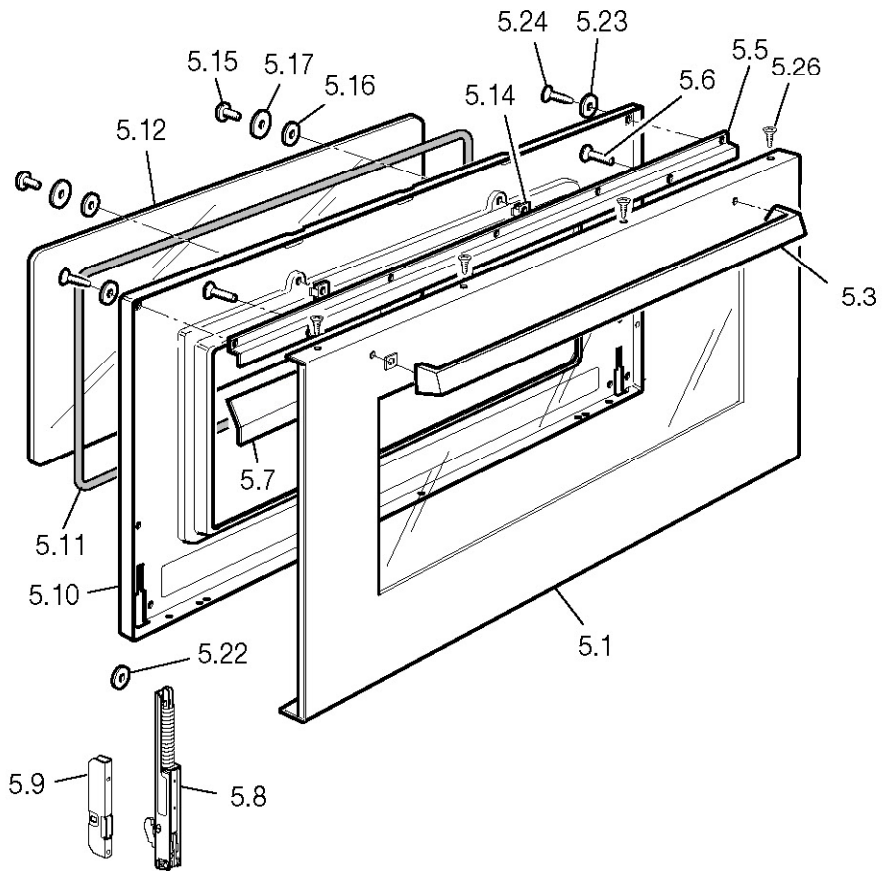



CR9108


Cable 900mm Range Cooker

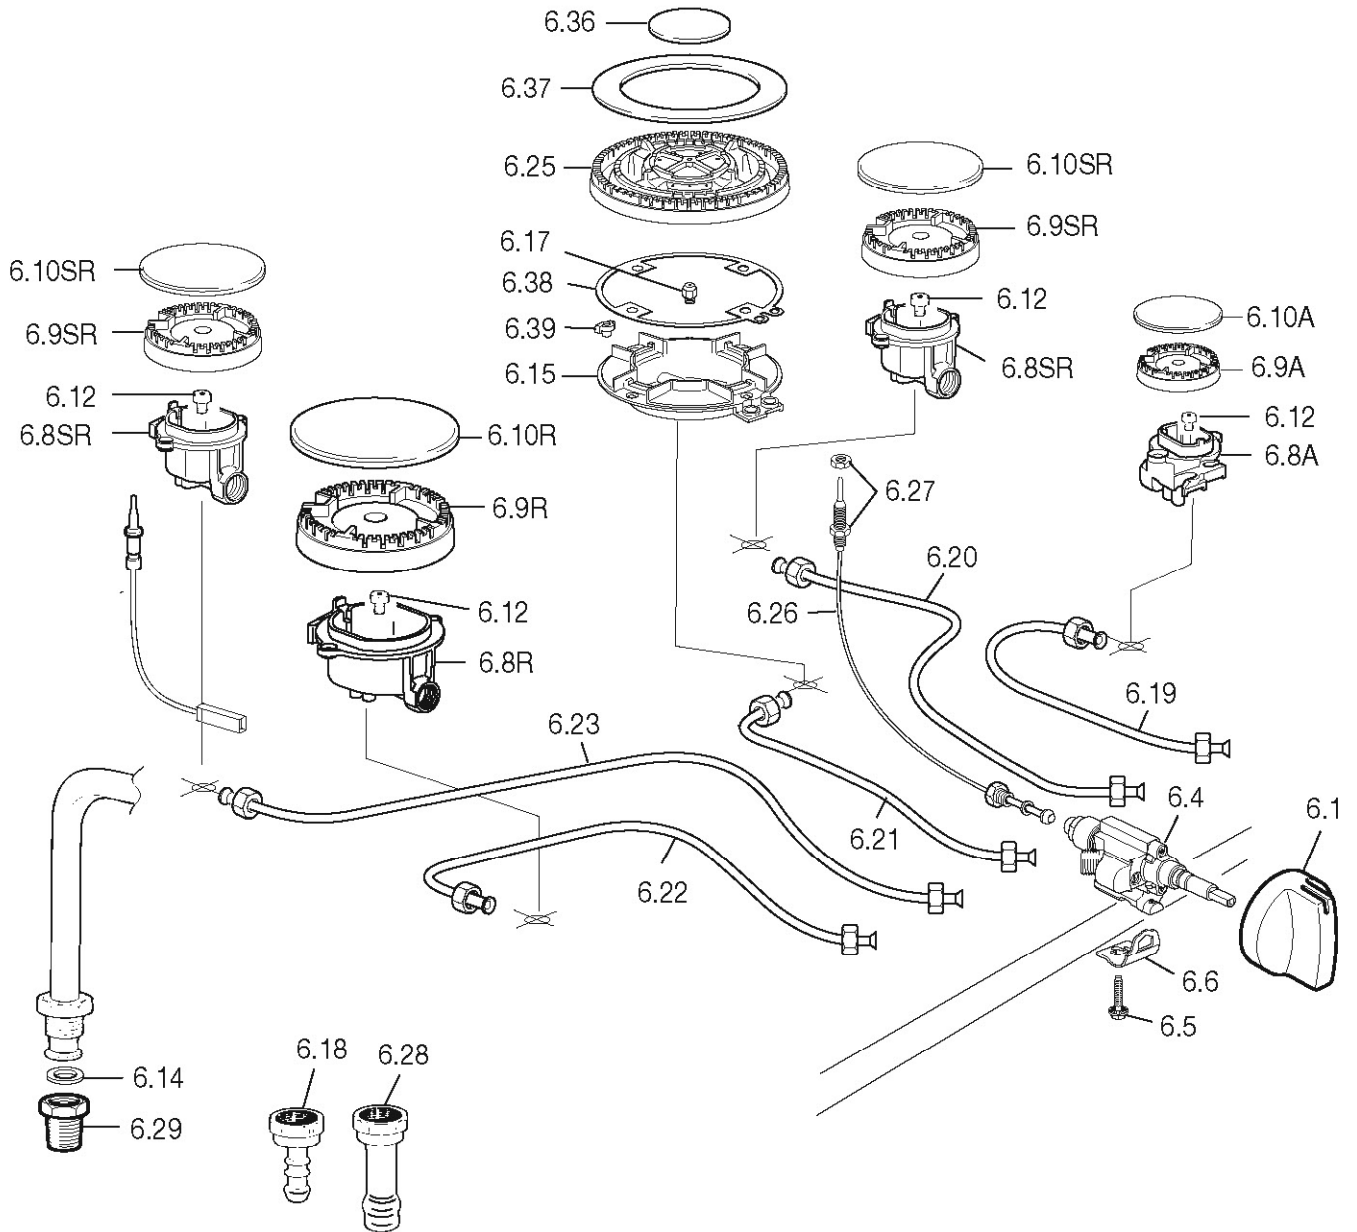




CR9108

Caple 900mm Range Cooker

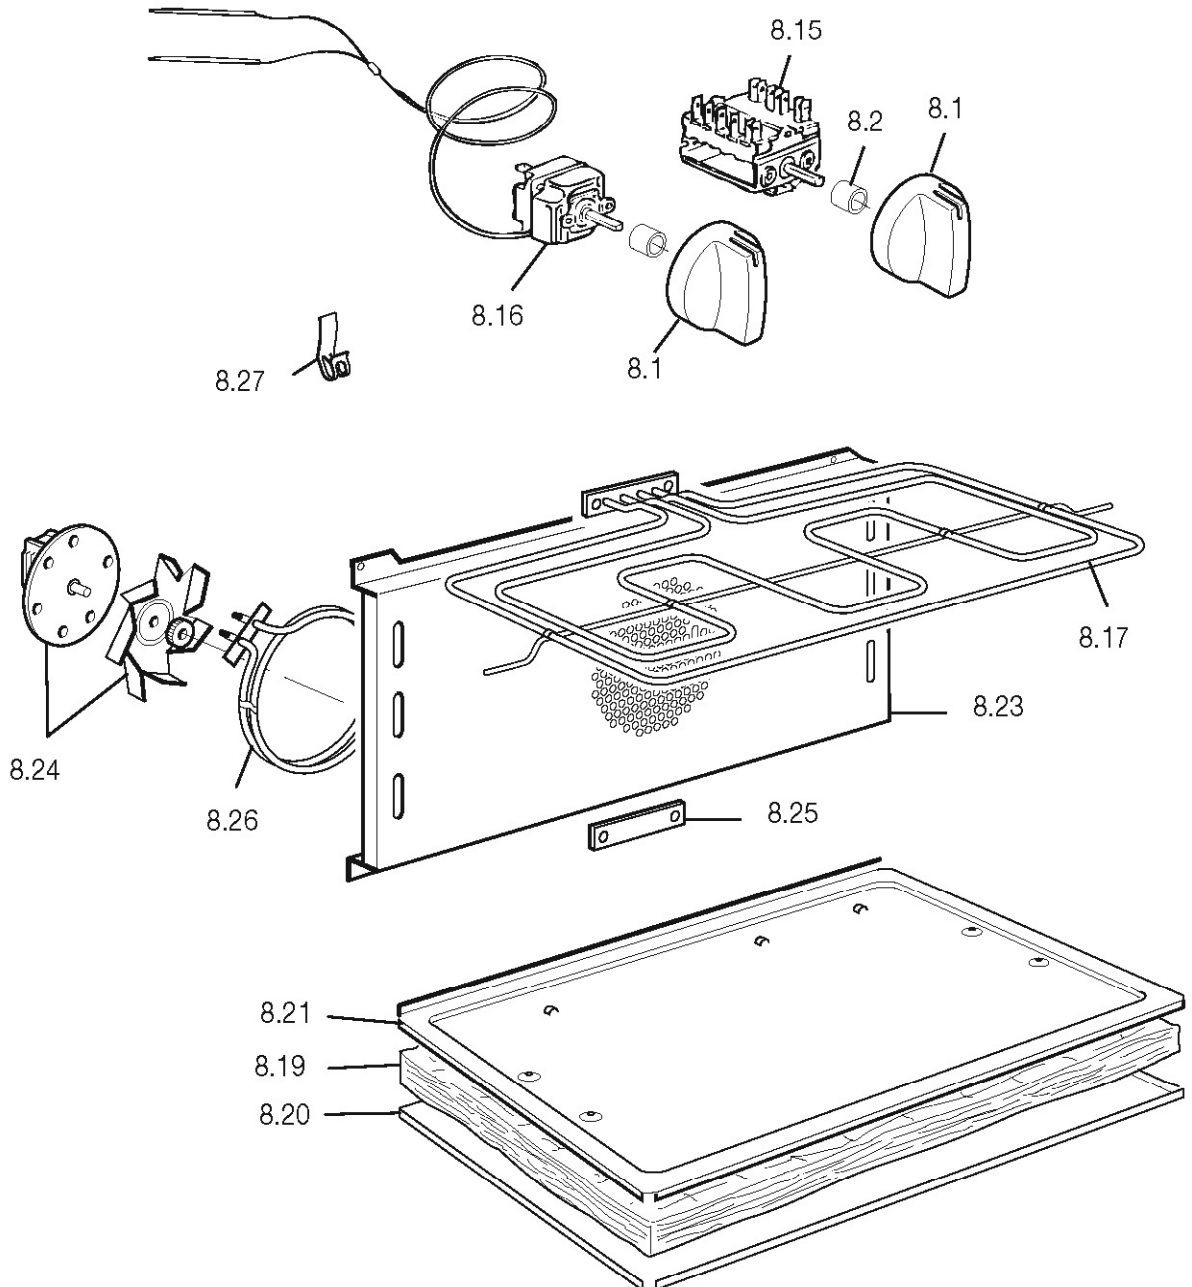

CR9108

Cable 900mm Range Cooker

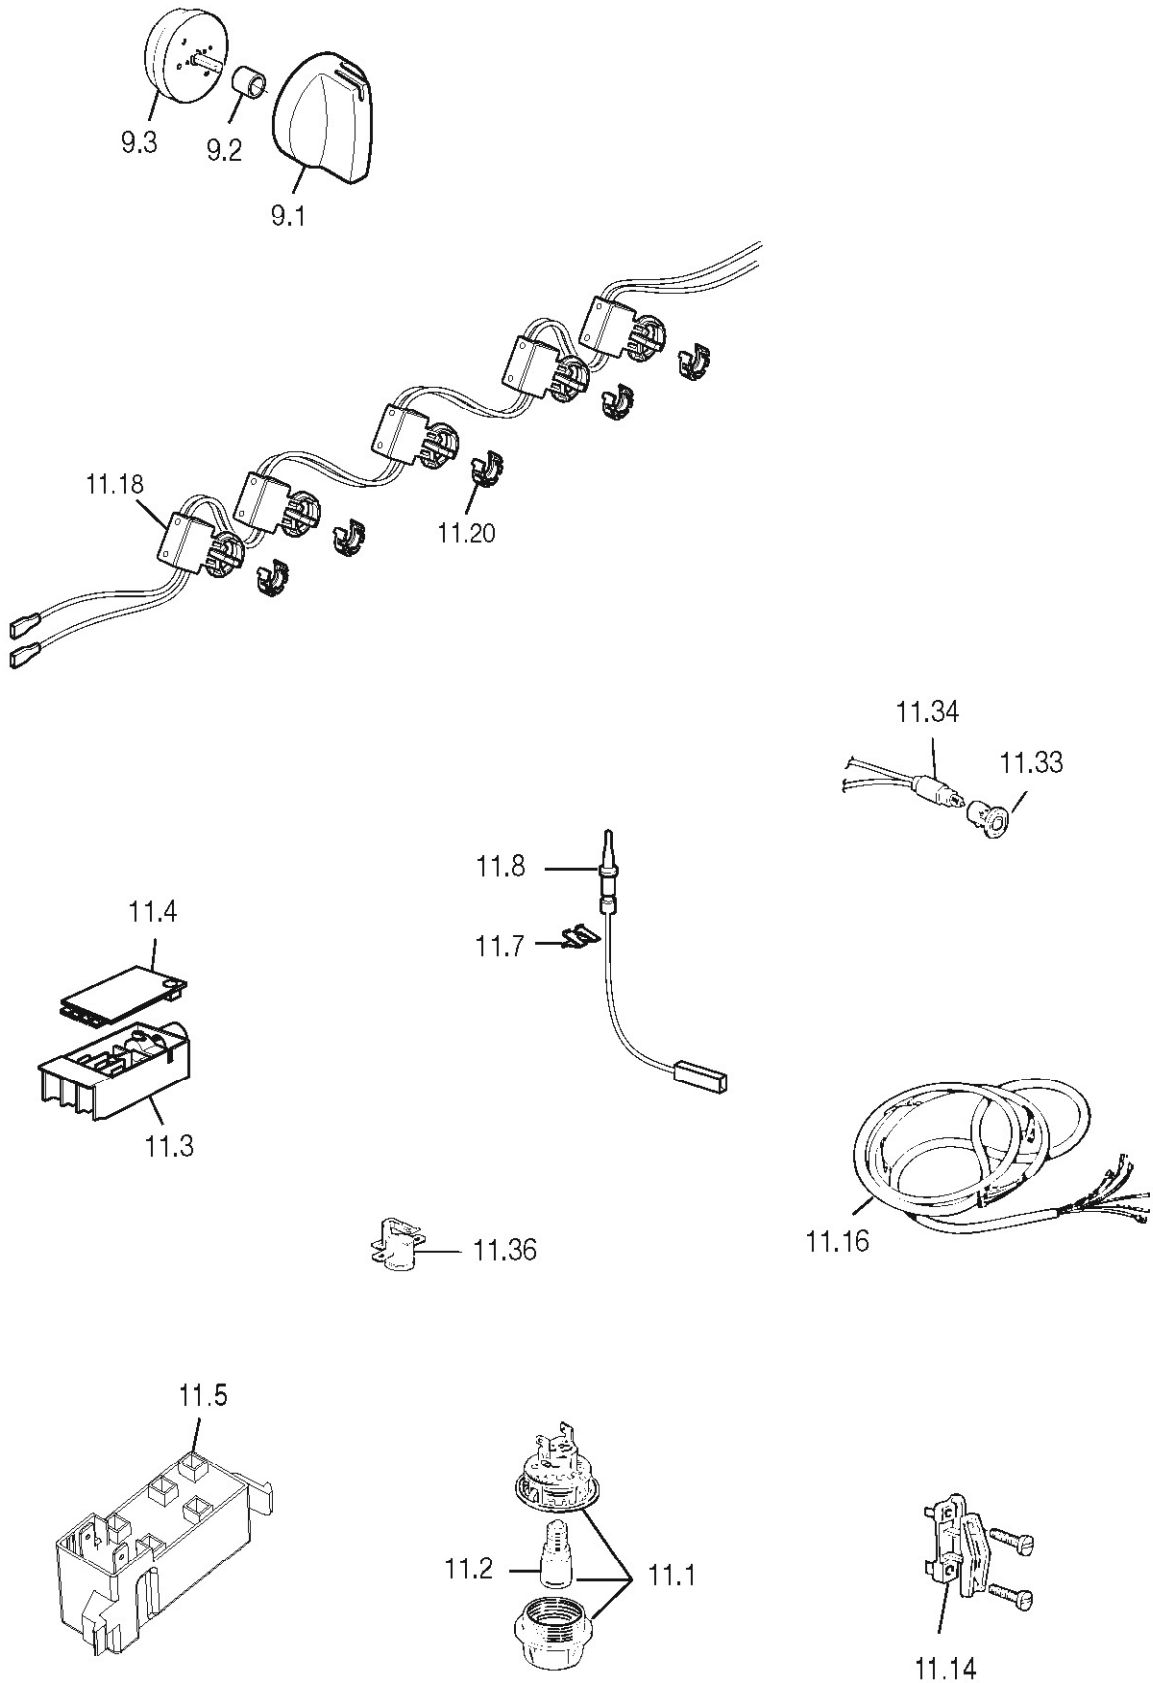



CR9108 - Caple 900mm Range Cooker

Item	Part Code	Description
1.5	040041001	Plug
1.6	001007	Stainless steel screw
2.1	3429S50001	Manifold
2.2	3319S502S	Cooktop
2.5	51B9S01	Burners support
2.6	027015	Inlet pipe plug
2.12	053024.1	Gasket
2.13	103615	Pin
2.14	035100	Spring
2.15	217566	Pan-support
2.16	217639	Central pan-support
2.17	214062	Nut
2.18	094473	Fixing plate
2.20	51B9S05	Cross-piece
2.23	001234.1	Screw
2.26	001167	Screw
3.1	35N91A4LCP	Control panel
3.2	103760	Control panel trim
3.8	213007	Clips
4.4	030179.1	Oven insulation
4.5	030213	Rear insulation
4.6	094417DX	Rear right coupler
4.7	094417SX	Rear left coupler
4.8	4119602	Rear panel
4.9	4219T06Z	Upper shelter
4.13	053101	Seal
4.18	103533.1	Shim
4.20	040061	Buffer
4.21	063075	Hinge
4.23	371V961LCP	Front panel
4.24	373V9601A	Inside panel
4.25	36C96D1H	Side panel right
4.26	36C96S1H	Side panel left
4.27	094260	Switch support front up
4.31	094412	Bracket
4.32	4219604Z	Rear insulation support
4.33	4216108Z	Hinge protection
4.34	035097	Rotisserie hole plug
4.36	081084080	Left stopper
4.37	081083080	Right stopper
4.38	46A9S02Z	Air conveyor
4.39	46A9S01Z	Funnel
4.40	079025	Tangential fan



CR9108 - Caple 900mm Range Cooker

Item	Part Code	Description
4.43	040056	Vibration-damper buffer
4.47	103172	Lock pin
4.48	094153	Anti-tilt bracket
4.50	45EN6106G	Oven side panel (Left)
4.51	45E96001G	Top oven panel
4.52	45EN6107G	Oven side panel (Right)
4.53	45H96005G	Body rear panel
4.55	45B96009G	Body front panel
4.56	45K96004Z	Lower element cover
4.57	211012	Clips
5.1	032962820	Door glass
5.3	037302061	Door handle
5.5	51B9605	Cross-piece
5.6	001245	Screw
5.7	4219S07Z	Door handle crosspiece
5.8	063146	Door hinge (male)
5.9	063148	Door hinge (female)
5.10	373F9606G	Door panel
5.11	053058	Gasket
5.12	0311292/TH	Inner glass
5.14	214021	Nut
5.15	001143	Screw
5.16	003035	Washer
5.17	103205	Washer
5.22	003062	Hinge washer
5.23	003057	Washer
5.24	001007	Screw
5.26	001056	Screw
7.1	217291	Shelf support
7.2	217497	Oven tray support
7.3	48B8501G	Oven tray
7.4	217626	Oven shelf
7.6	47E9604G	Oven floor
7.7	037208	Grill-pan grid handle
7.8	217523	Grill-pan grid
6.1	2182002416	Burner knob
6.4	106270GN	Tap (00.28)
6.4a	106271GN	Tap (00.33)
6.4b	106272GN	Tap (00.43)
6.4c	106273GN	Tap (00.63)
6.5	001282	Tap fixing screw
6.6	094654	Tap bracket
6.8A	215465	Burner-cup A
6.8SR	215466	Burner-cup SR
6.8R	215467	Burner-cup R
6.9R	068105001	Burner head R
6.9SR	068104001	Burner head SR
6.9A	068108001	Burner head A



CR9108 - Caple 900mm Range Cooker

Item	Part Code	Description
6.10A	216129005A	Burner-cap A
6.10SR	216130005A	Burner-cap SR
6.10R	216131005A	Burner-cap R
6.12	101234	Injector (00.72 - G20)
6.12a	101235	Injector (00.97 - G20)
6.12b	101236	Injector (01.15 - G20)
6.12c	101180	Injector (00.50 - G30)
6.12d	101181	Injector (00.65 - G30)
6.12e	101182	Injector (00.85 - G30)
6.14	053024.1	Elbow gasket
6.15	215469	Burner-cup TR
6.17	101237	Injector (01.35 - G20)
6.17a	101233	Injector (00.95 - G30)
6.18	027014	LPG connection
6.19	029633	Inlet pipe - front right A
6.20	029632	Inlet pipe - rear right SR
6.21	029649	Inlet pipe - central TR
6.22	029650	Inlet pipe - front left R
6.23	029630	Inlet pipe - rear left SR
6.25	068137	Burner head TR
6.26	107038	Burner thermocouple (L = 250)
6.26a	107039	Burner thermocouple (L = 500)
6.26b	107042	Burner thermocouple (L = 350)
6.27	214057	Thermocouple nut
6.28	027013	Natural gas connection
6.29	067026	Connection
6.36	216132005A	Burner-cap inside TR
6.37	216133005A	Burner-cap outside TR
6.38	053078	Burner-cup gasket
8.1	2182002417	Oven knob
8.2	085081	Oven knob sleeve
8.15	050066	Oven switch
8.16	066072	Oven thermostat
8.17	062074004	Top element 230V
8.19	030076.1	Bottom element insulation
8.20	4219602Z	Bottom insulation support
8.21	4219605Z	Bottom element support
8.23	47A9601G.2	Fan diffuser
8.24	079008001F	Fan motor 220/240V
8.25	094364	Element plug
8.26	062057004	Fan element 230V
8.27	213025	Clip
9.1	2182002417	Alarm knob
9.2	085081	Alarm knob sleeve
9.3	074009	60' alarm
11.1	072004	Lamp holder
11.2	073013001	Lamp - 15 W
11.3	051054	Terminal block



CR9108 - Caple 900mm Range Cooker

Item	Part Code	Description
11.4	103451	Terminal block cover
11.5	082075	5 burners ignition coil
11.7	035094	Igniter spring
11.8	084029	Igniter (L=630)
11.8a	084033	Igniter(TR - L=500)
11.8b	084036	Igniter (L=900)
11.16	1131783	Wiring
11.18	1031237	Ignition switches
11.20	003077	Retaining ring
11.33	07306202.2	Control lamp lens - Red
11.34	073039.2	Control neon
11.36	066123	Cut -off thermostat (160 deg)
11.36a	066080	Cut -off thermostat (55 deg)
-	6109850004	LPG gas conversion kit
--	1104262	Instruction booklet