



C2601SS

Caple Sense Premium Oven Stainless Steel




Technical Manual



C2601SS

Caple Sense Premium Oven Stainless Steel

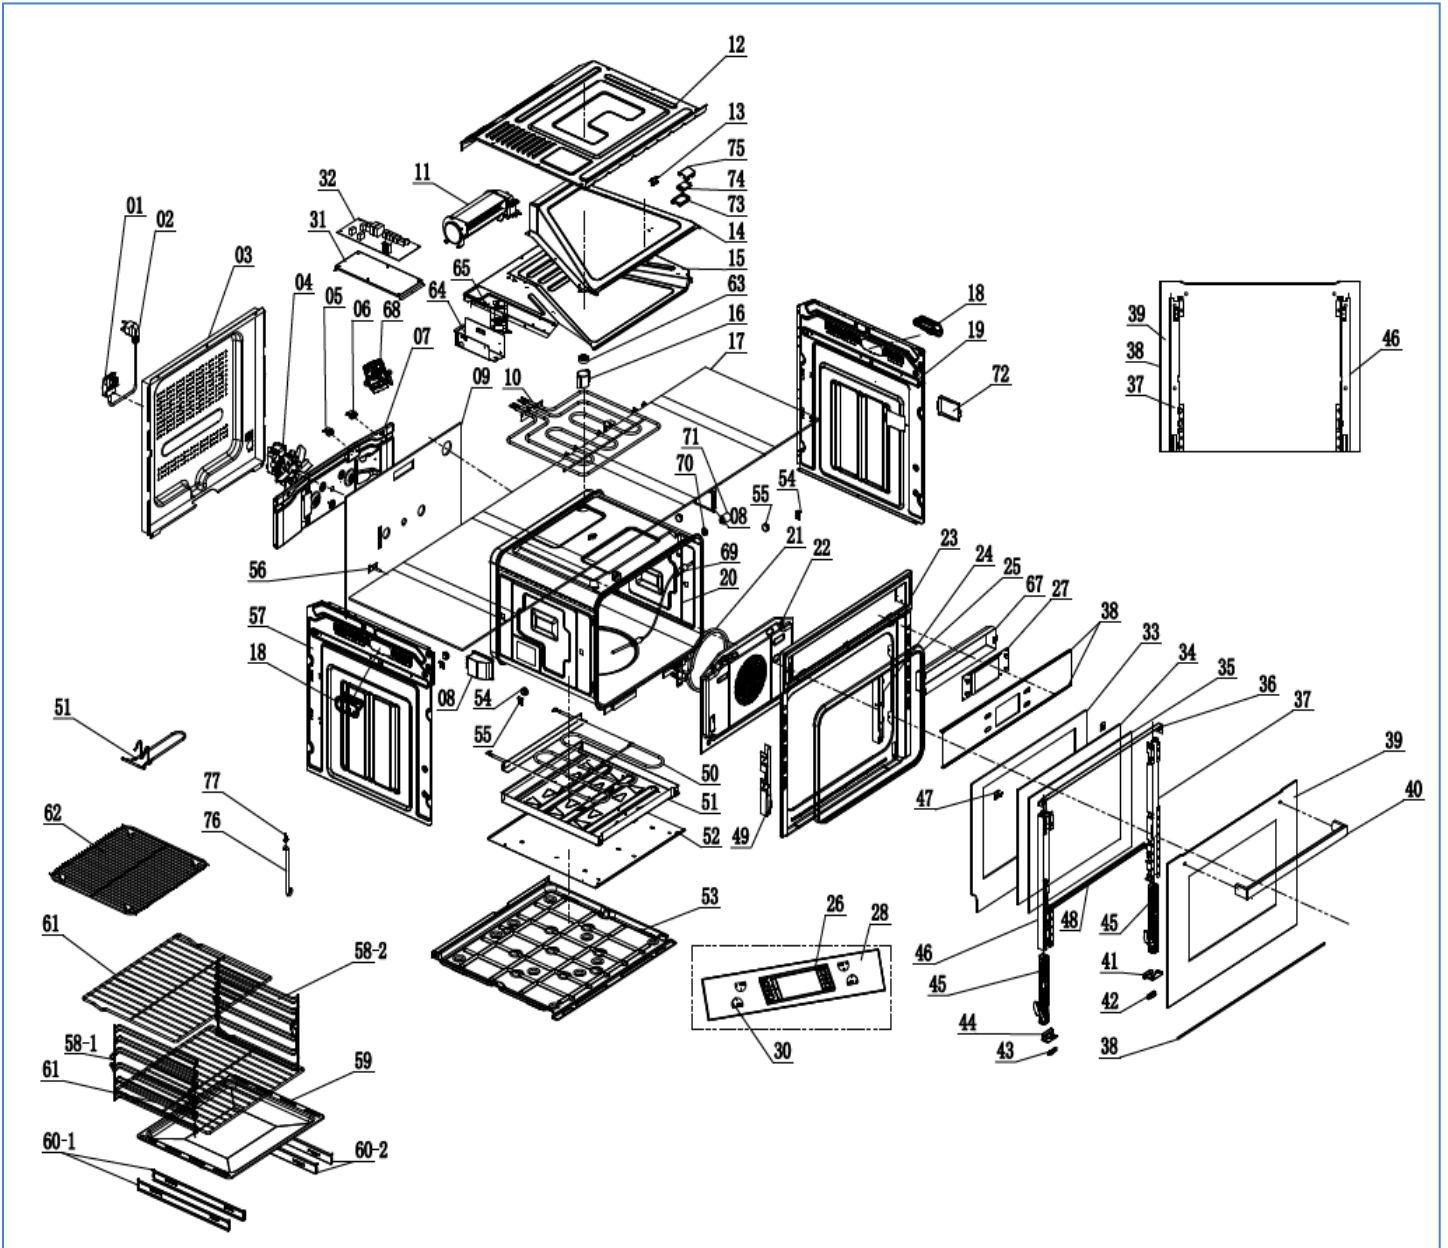



C2601SS

Caple Sense Premium Oven Stainless Steel

Item	Part Number		Description	Quantity
1	142101503001		Power cord	1
2	1421600101		Power box	1
3	2121600103		Rear cover	1
4	1420900231		Circulating fan motor	1
5	1421100119		Thermostat 90°C	1
6	1421100203		Thermostat 172°C	1
7	2121500601		Bracket of convection motor	1
8	1420700117		Halogen lamp	2
9	1920100229		Rear isolation cotton	1
10	1420500129		Top heater	1
11	142090022001		Motor (cooling fan)	1
12	2121400901		Top cover	1
13	1421100112		Thermostat 145°C	1
14	2126700112		Cooling cover component	1
15	2127500501		Top Panel	1
16	2126800701		Vent	1
17	1920100123		Top isolation cotton	1
18	1320400101		Holder	2
19	2121000807		Right side panel	1
20	212090053001		Cavity assembly	1
21	1420500407		Circle heater	1
22	212030080304		Fan cover	1
23	212020015601		Door frame	1
24	2126500207		Right hinge bracket	1
25	1320200905		Door seal	1
26	CPA2600SS	Control Panel component	TFT bracket	1
			Glass for Control Panel	1
			Glass connector	4
			SS Frame(C2402)	1
27	1422100178		TFT Display	1
31	2127700501		Fixing plate for power board	1
32	220208005007002		Power board	1
33	1120100360		Inner glass	1
34	1120100221		Middle glass 1 Low-E	1
35	1120100220		Middle glass 2	1
36	2127401806		Top Door bracket	1



C2601SS

Caple Sense Premium Oven Stainless Steel

Item	Part Number		Description	Quantity
39	ECD12SSODC	SS Outer glass component	Right door bracket	1
			SS Door Frame	1
			Outer glass	1
			Left door bracket	1
40	1122400314		Handle(Silver)	1
41	2126600304		Fixing plate for right outer door hinge assembly	1
42	1320600124		Plastic gasket for right door hinge bracket	1
43	1320600123		plastic gasket for left door hinge bracket	1
44	2126600303		Fixing plate for left outer door hinge assembly	1
45	1120400703		Hinge	2
47	2127400702		Bracket for middle glass	2
48	1990200210		Seal for middle glass	1
49	2126500107		Left hinge bracket	1
50	1420500215		Bottom heater	1
51	2121700501		Bottom heater plate	1
52	2121300103		Insulation plate	1
53	2121800603		Bottom plate	1
54	2126100105		Fixing Screw(Side shelves)	4
55	112200010401		Fixing Plate for Side shelves	4
56	1121800102		Upper Probe	1
57	212110080401		Left side panel	1
58-1	1120500701		Left side shelve	1
58-2	1120500702		Right side shelve	1
59	212210011902		Food tray	1
60-1	1123600103		Full extension runner (Left)	2
60-2	1123600104		Full extension runner (Right)	2
61	1120500122		Big grill rack	2
62	1120500203		Small grill rack	1
63	1124100102		Filter	1
64	2128700102		Installation box for lock	1
65	21020804301002		Lock(Micro-Switch + door Lock)	1
66	2123800102		Tray handle	1
67	2121300108		Isolation plate for TFT	1
68	1420900301		Synchronous motor	1
69	1121800201		Meat Probe assembly	1
70	1220100124		Meat Probe nut	1
71	1121800202		Socket for Meat Probe	1
72	1321500201		Socket cover	1



C2601SS

Caple Sense Premium Oven Stainless Steel

Item	Part Number	Description	Quantity
73	132140010501	WIFI Box(Bottom)	1
74	1422900107	WIFI Chip	1
75	132140010402	WIFI Box(Cover)	1
76	1121900102	Hook	1
77	1121900103	Hook ring	1


CDAC2601SS

Complete door

1122600111

Rotisserie

C2601 Wiring Diagram

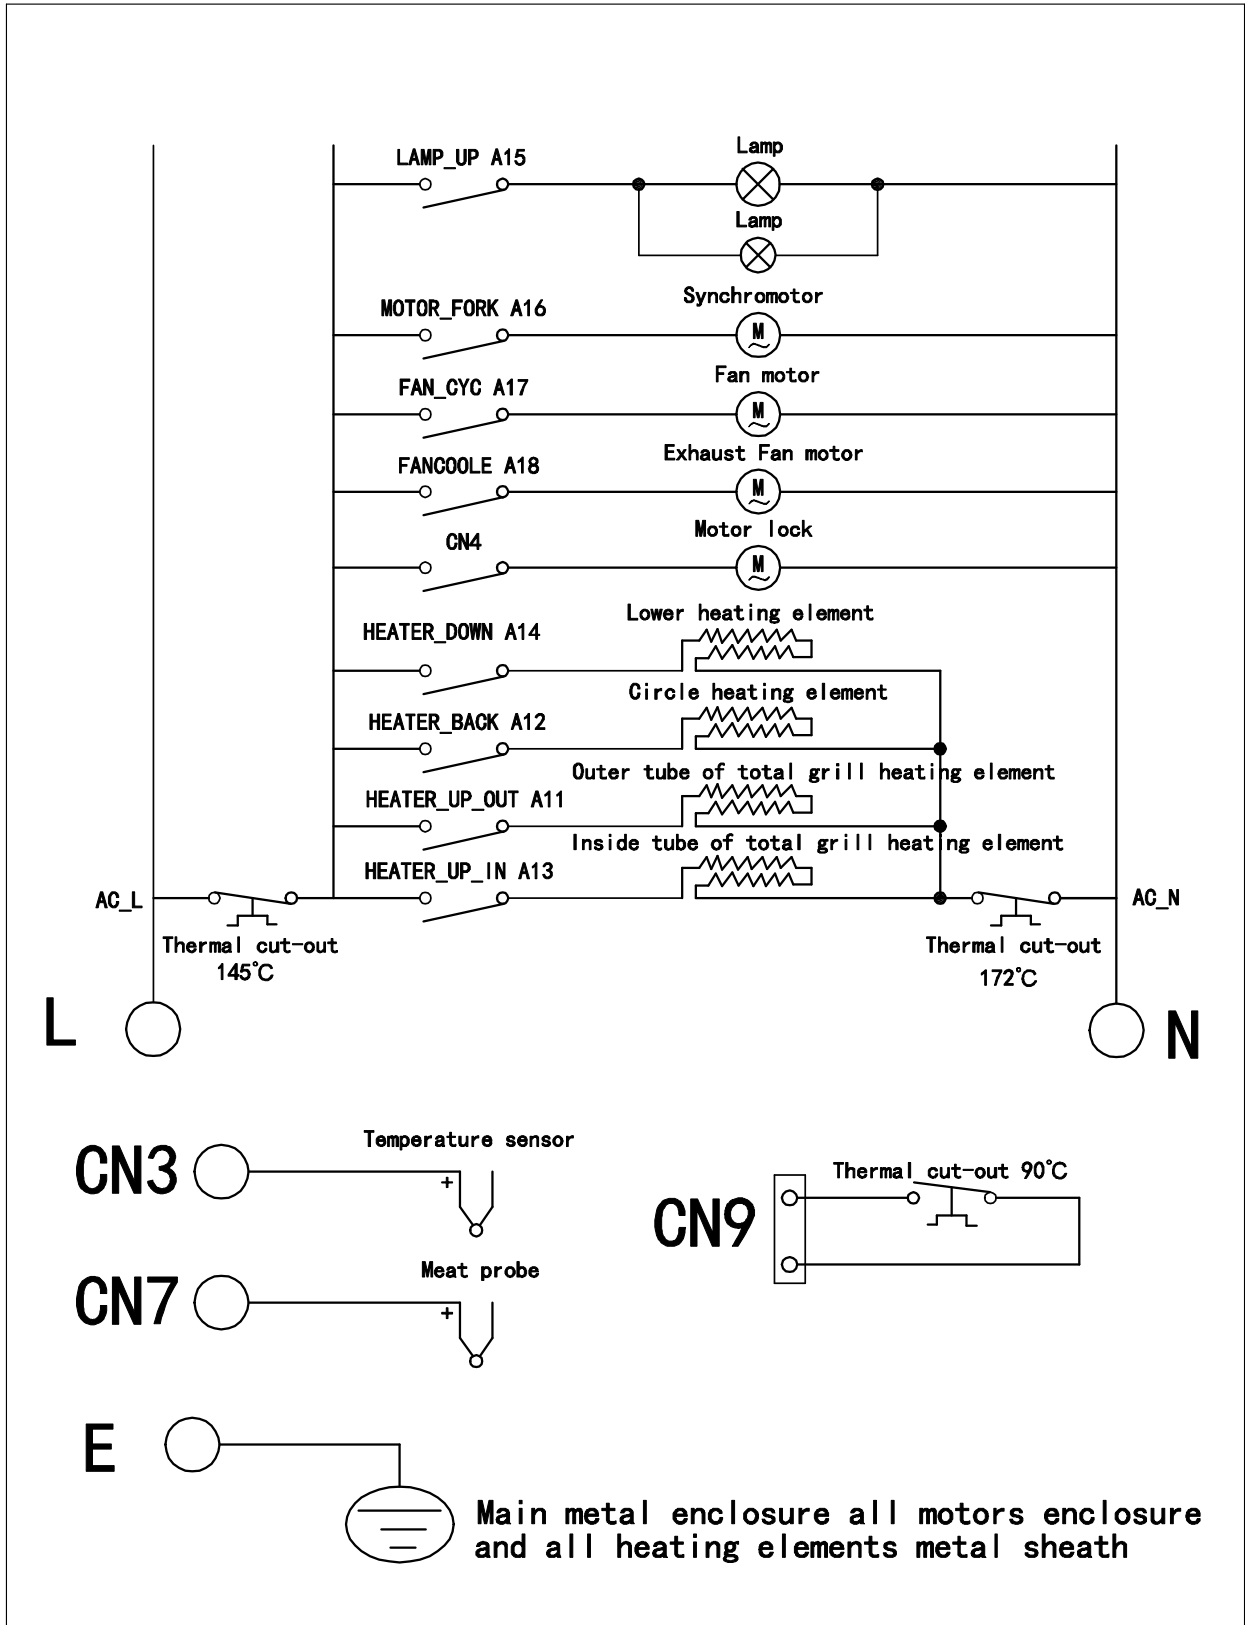

C2601** – Wiring Diagram

